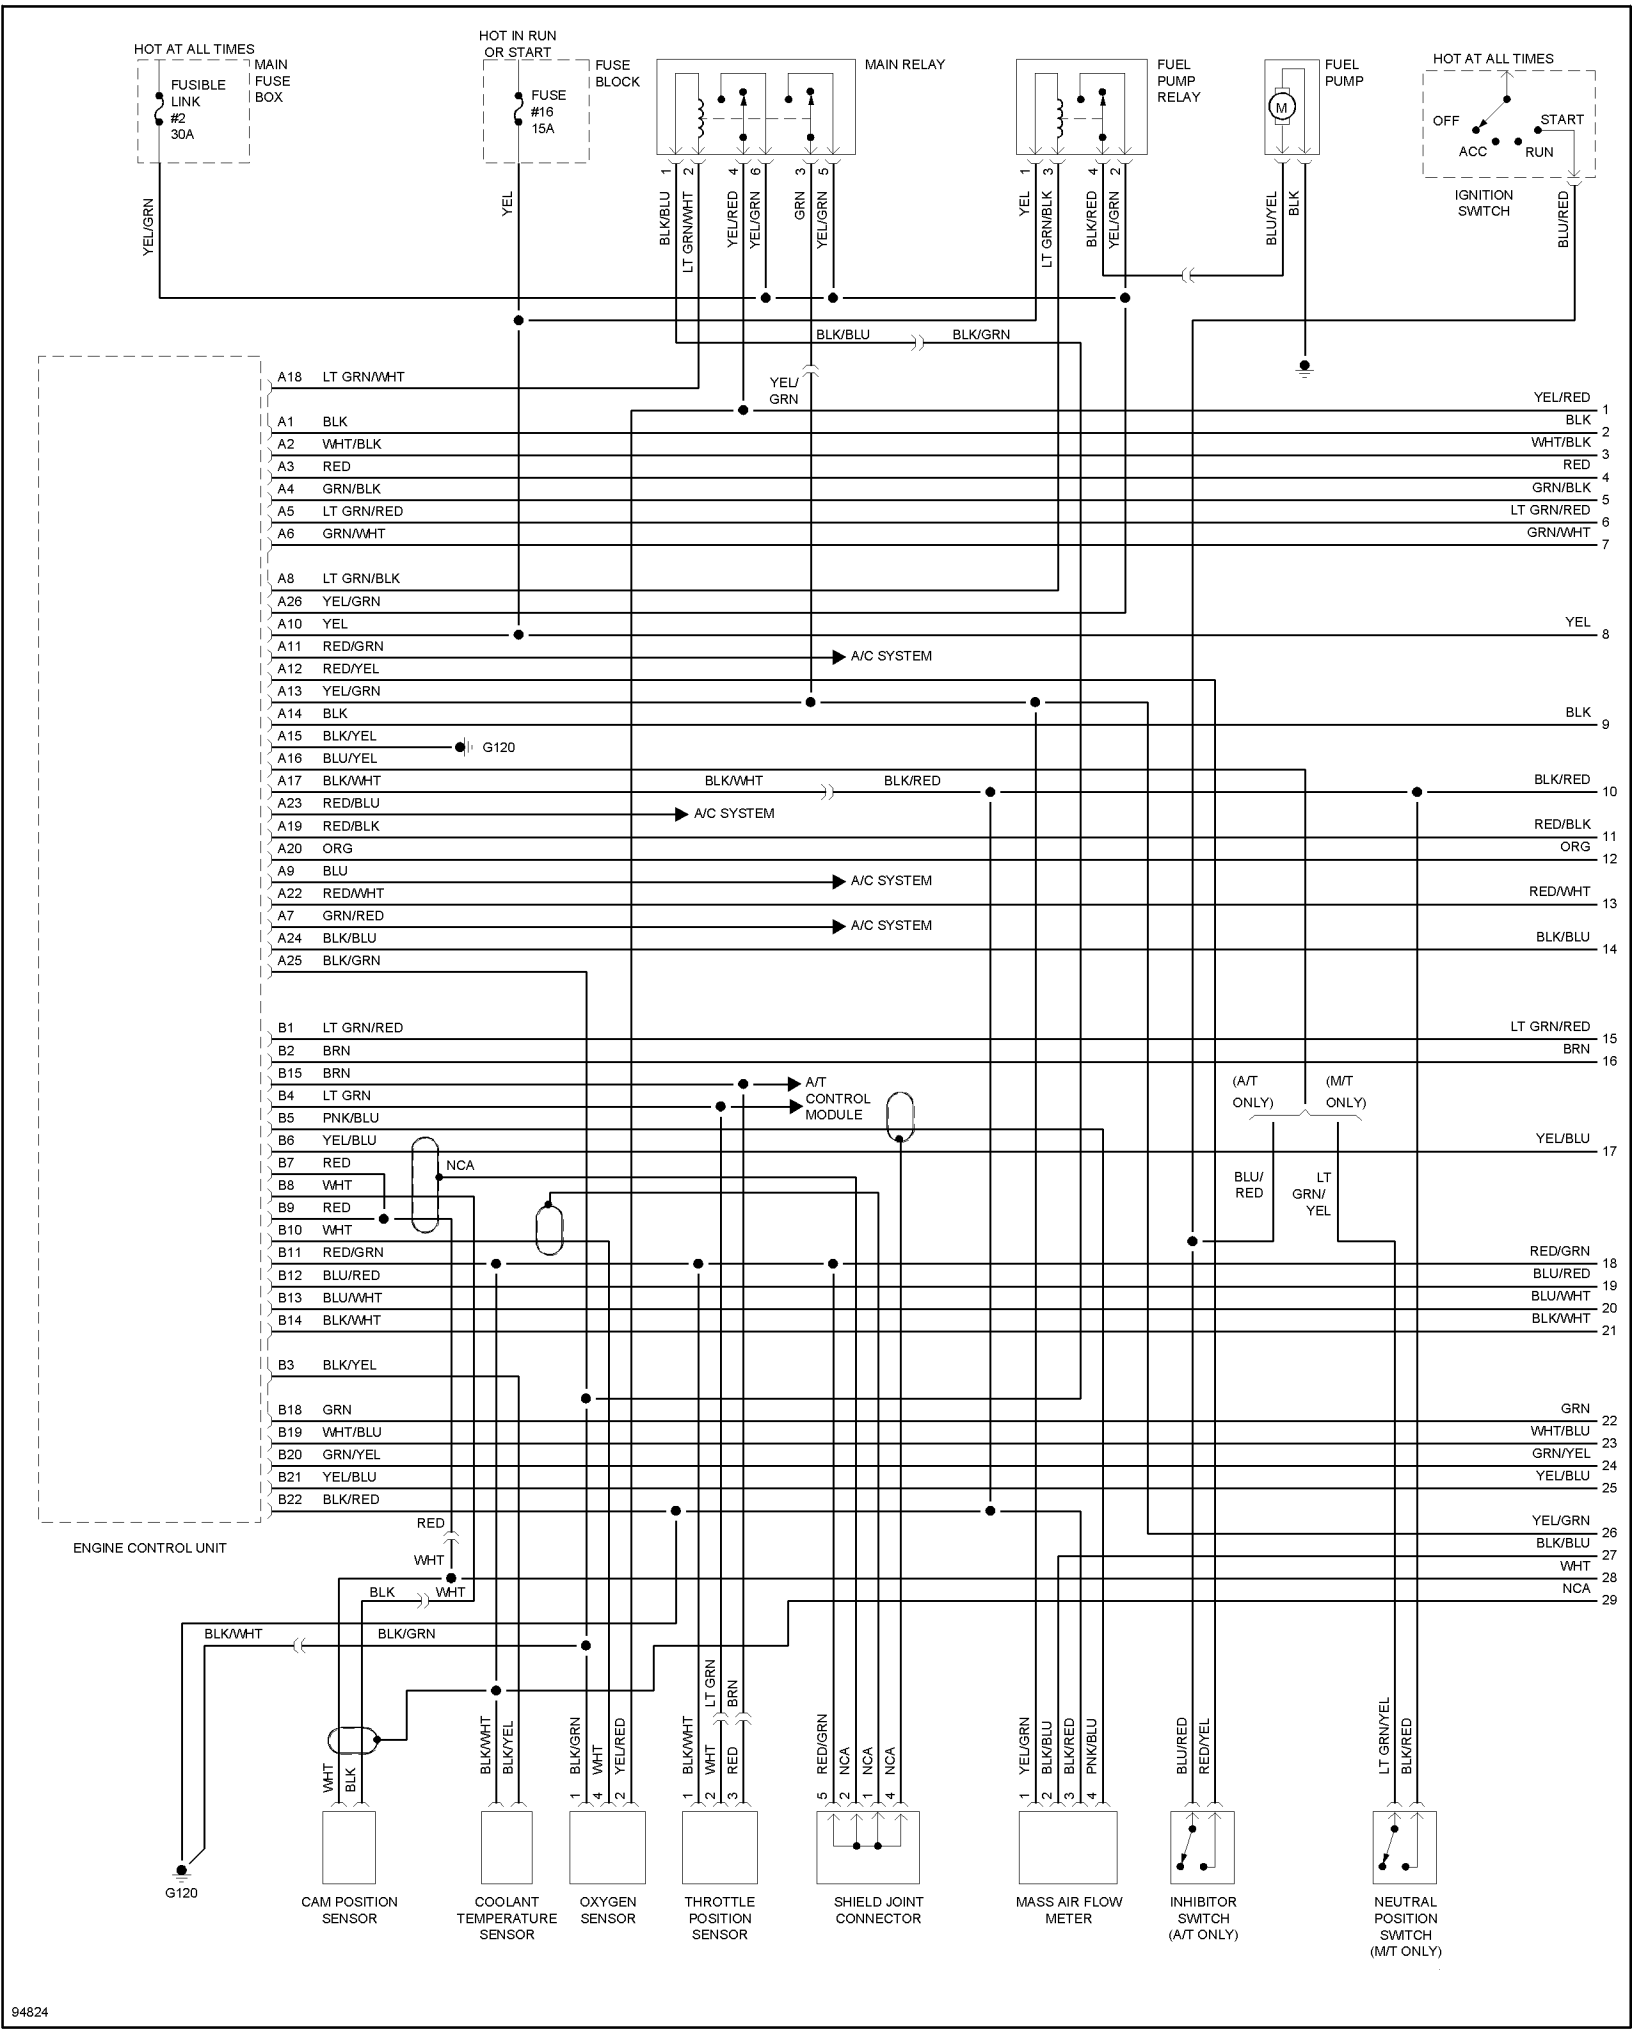
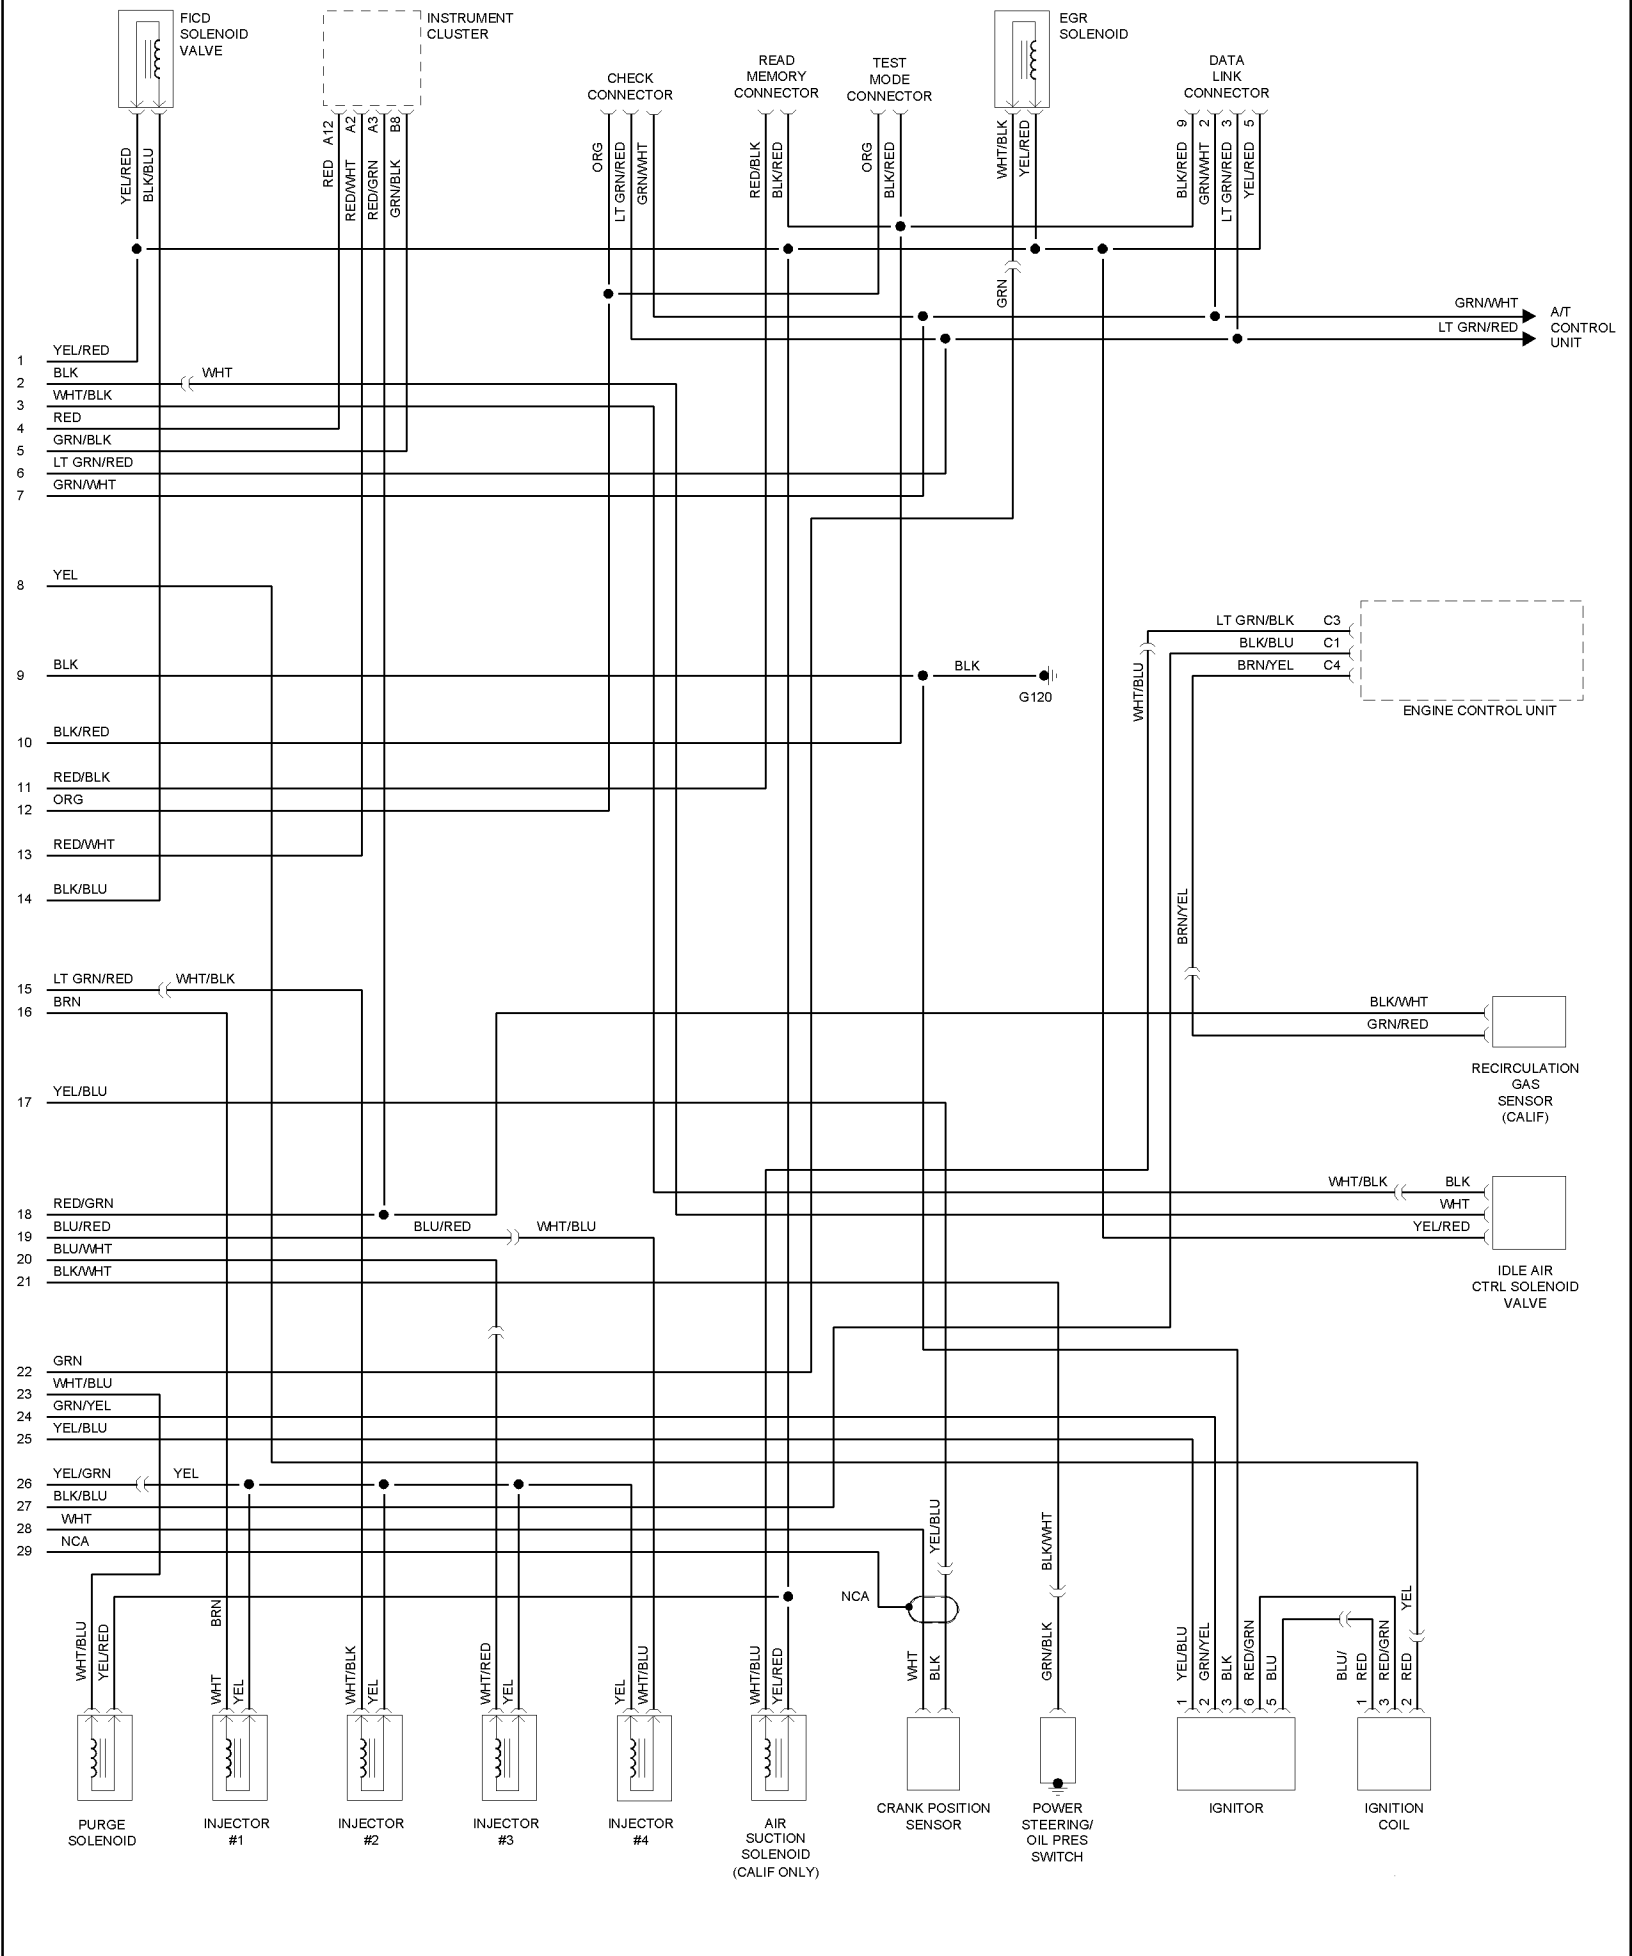
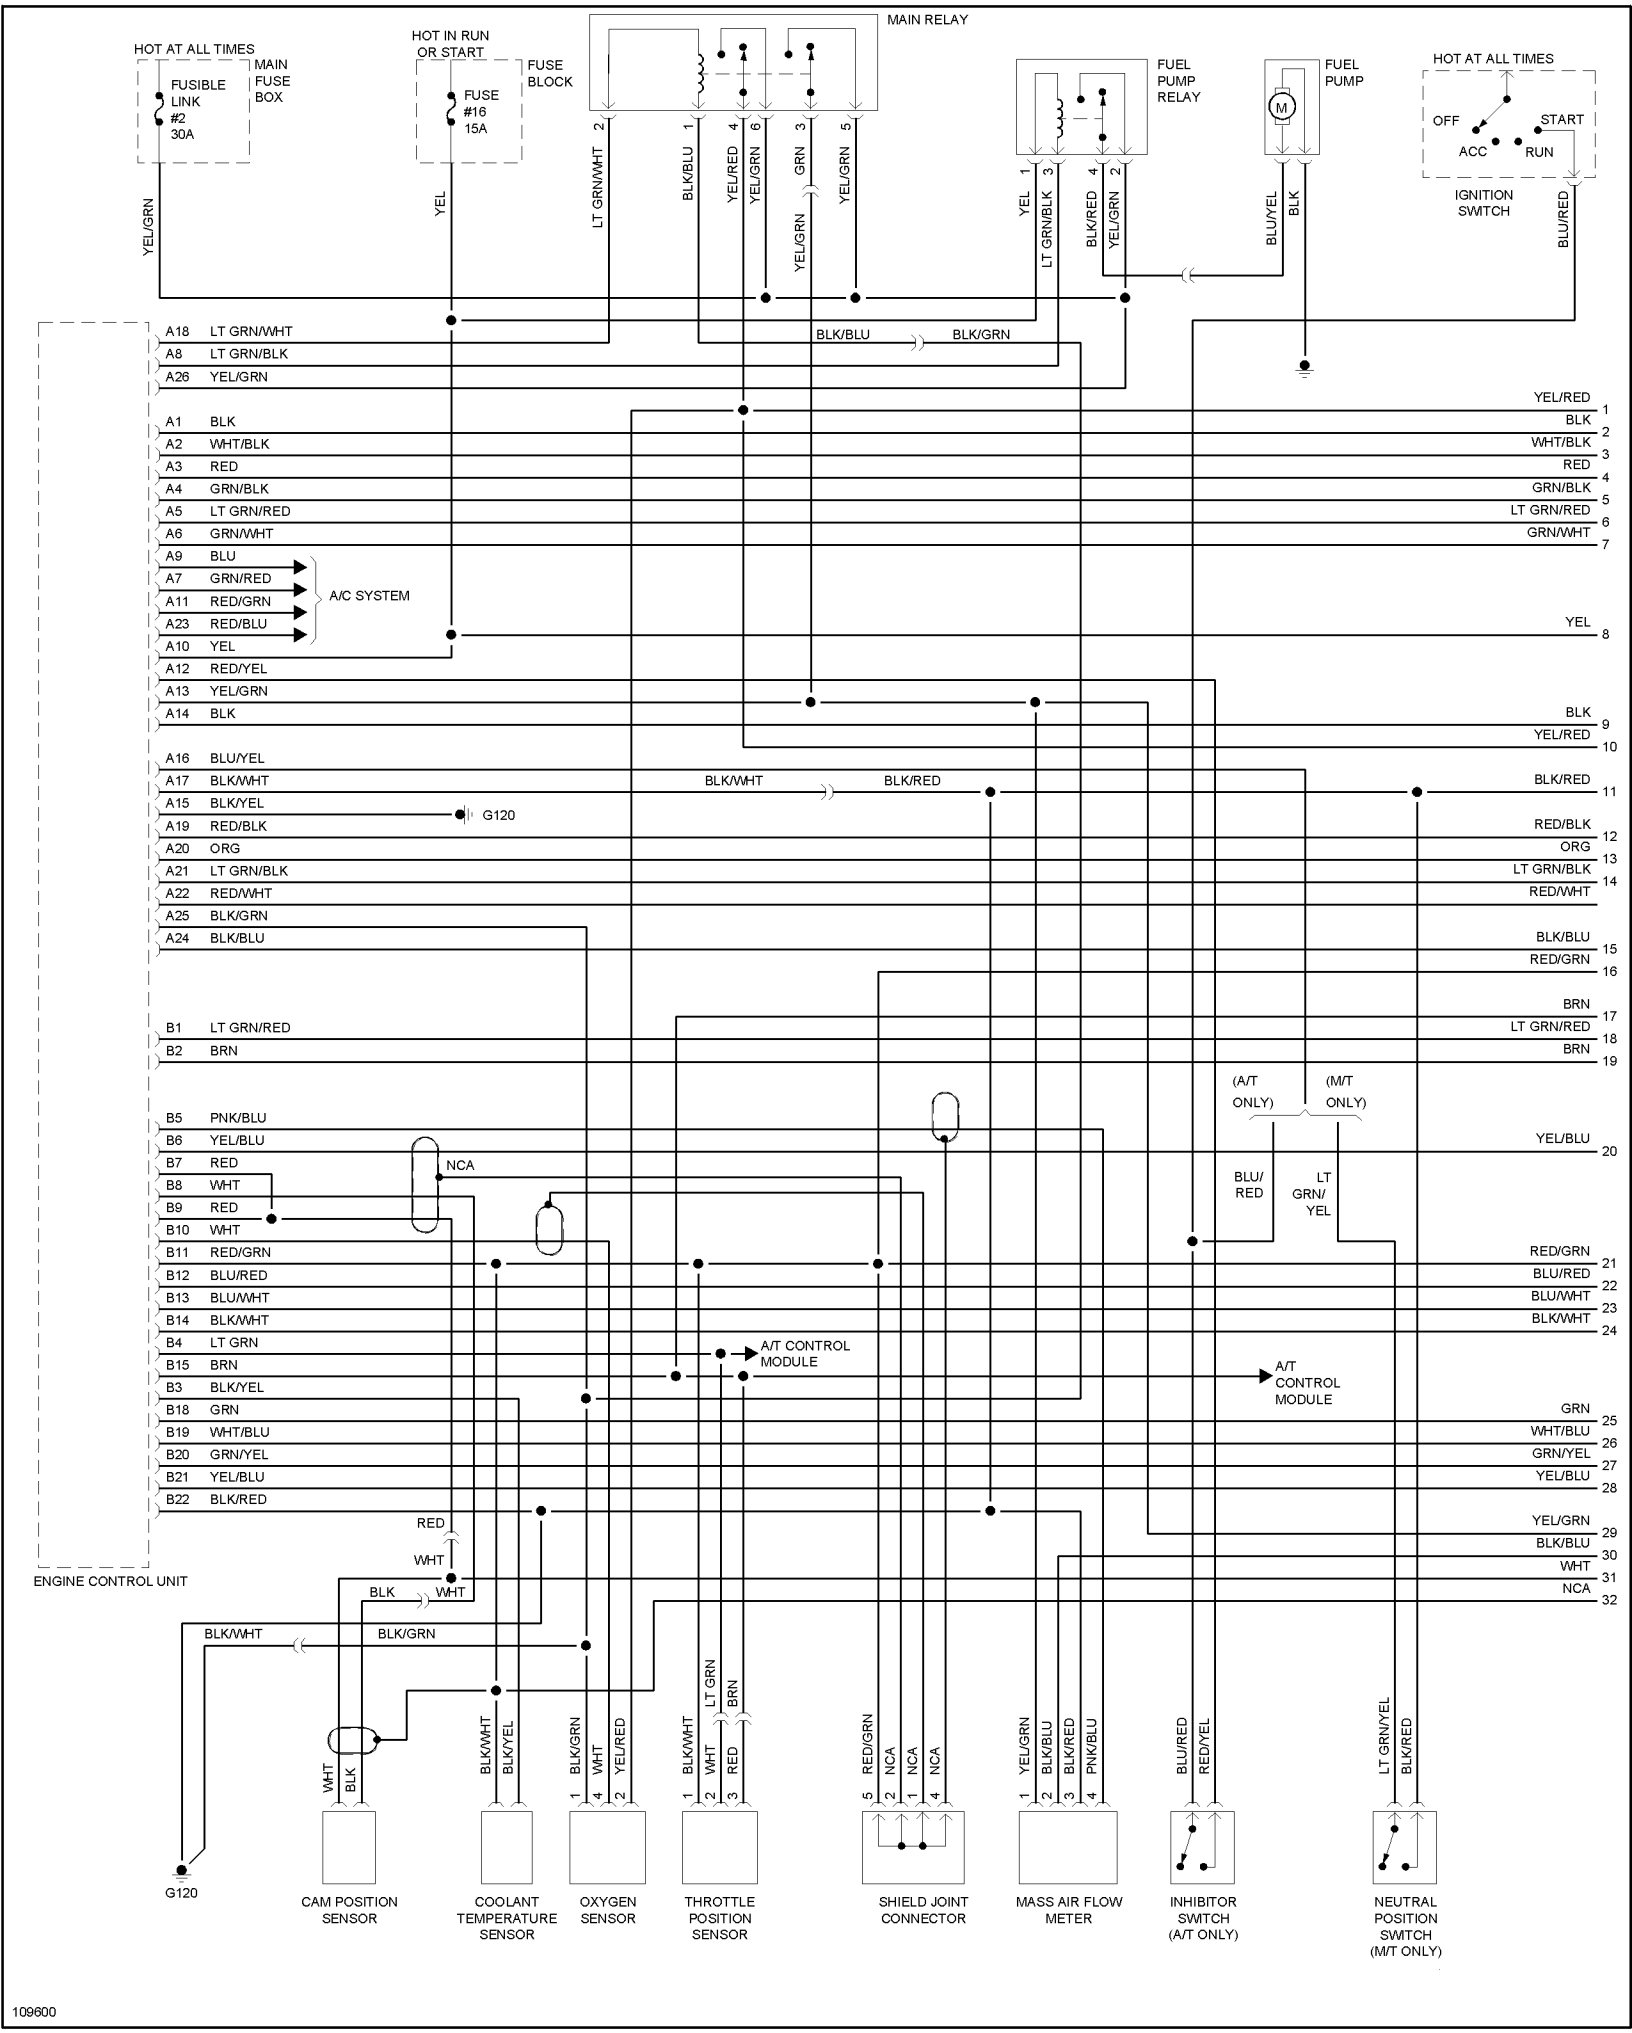

HOT AT ALL TIMES
MAIN FUSE BOX
FUSIBLE LINK #2 30A
HOT IN RUN OR START
FUSE BLOCK
FUSE #16 15A
MAIN RELAY
FUEL PUMP RELAY
FUEL PUMP
HOT AT ALL TIMES
OFF
START
ACC
RUN
IGNITION SWITCH
YEL/GRN
YEL
BLK/BLU
LT GRN/WHT
YEL/RED
YEL/GRN
GRN
YEL/GRN
YEL
LT GRN/BLK
BLK/RED
YEL/GRN
BLU/YEL
BLK
BLU/RED
BLK/BLU
BLK/GRN
YEL/GRN
A18 LT GRN/WHT
A1 BLK
A2 WHT/BLK
A3 RED
A4 GRN/BLK
A5 LT GRN/RED
A6 GRN/WHT
A8 LT GRN/BLK
A26 YEL/GRN
A10 YEL
A11 RED/GRN
A12 RED/YEL
A13 YEL/GRN
A14 BLK
A15 BLK/YEL
A16 BLU/YEL
A17 BLK/WHT
A23 RED/BLU
A19 RED/BLK
A20 ORG
A9 BLU
A22 RED/WHT
A7 GRN/RED
A24 BLK/BLU
A25 BLK/GRN
B1 LT GRN/RED
B2 BRN
B15 BRN
B4 LT GRN
B5 PNK/BLU
B6 YEL/BLU
B7 RED
B8 WHT
B9 RED
B10 WHT
B11 RED/GRN
B12 BLU/RED
B13 BLU/WHT
B14 BLK/WHT
B3 BLK/YEL
B18 GRN
B19 WHT/BLU
B20 GRN/YEL
B21 YEL/BLU
B22 BLK/RED
ENGINE CONTROL UNIT
G120
A/C SYSTEM
A/C SYSTEM
A/C SYSTEM
A/C SYSTEM
BLK/WHT
BLK/RED
A/T CONTROL MODULE
NCA
(A/T ONLY)
(M/T ONLY)
BLU/RED
LT GRN/YEL
RED
WHT
BLK
WHT
BLK/WHT
BLK/GRN
1 YEL/RED
2 BLK
3 WHT/BLK
4 RED
5 GRN/BLK
6 LT GRN/RED
7 GRN/WHT
8 YEL
9 BLK
10 BLK/RED
11 RED/BLK
12 ORG
13 RED/WHT
14 BLK/BLU
15 LT GRN/RED
16 BRN
17 YEL/BLU
18 RED/GRN
19 BLU/RED
20 BLU/WHT
21 BLK/WHT
22 GRN
23 WHT/BLU
24 GRN/YEL
25 YEL/BLU
26 YEL/GRN
27 BLK/BLU
28 WHT
29 NCA
WHT
BLK
BLK/WHT
BLK/YEL
BLK/GRN
WHT
YEL/RED
BLK/WHT
WHT
RED
LT GRN
BRN
RED/GRN
NCA
NCA
NCA
YEL/GRN
BLK/BLU
BLK/RED
PNK/BLU
BLU/RED
RED/YEL
LT GRN/YEL
BLK/RED
G120
CAM POSITION SENSOR
COOLANT TEMPERATURE SENSOR
OXYGEN SENSOR
THROTTLE POSITION SENSOR
SHIELD JOINT CONNECTOR
MASS AIR FLOW METER
INHIBITOR SWITCH (A/T ONLY)
NEUTRAL POSITION SWITCH (M/T ONLY)

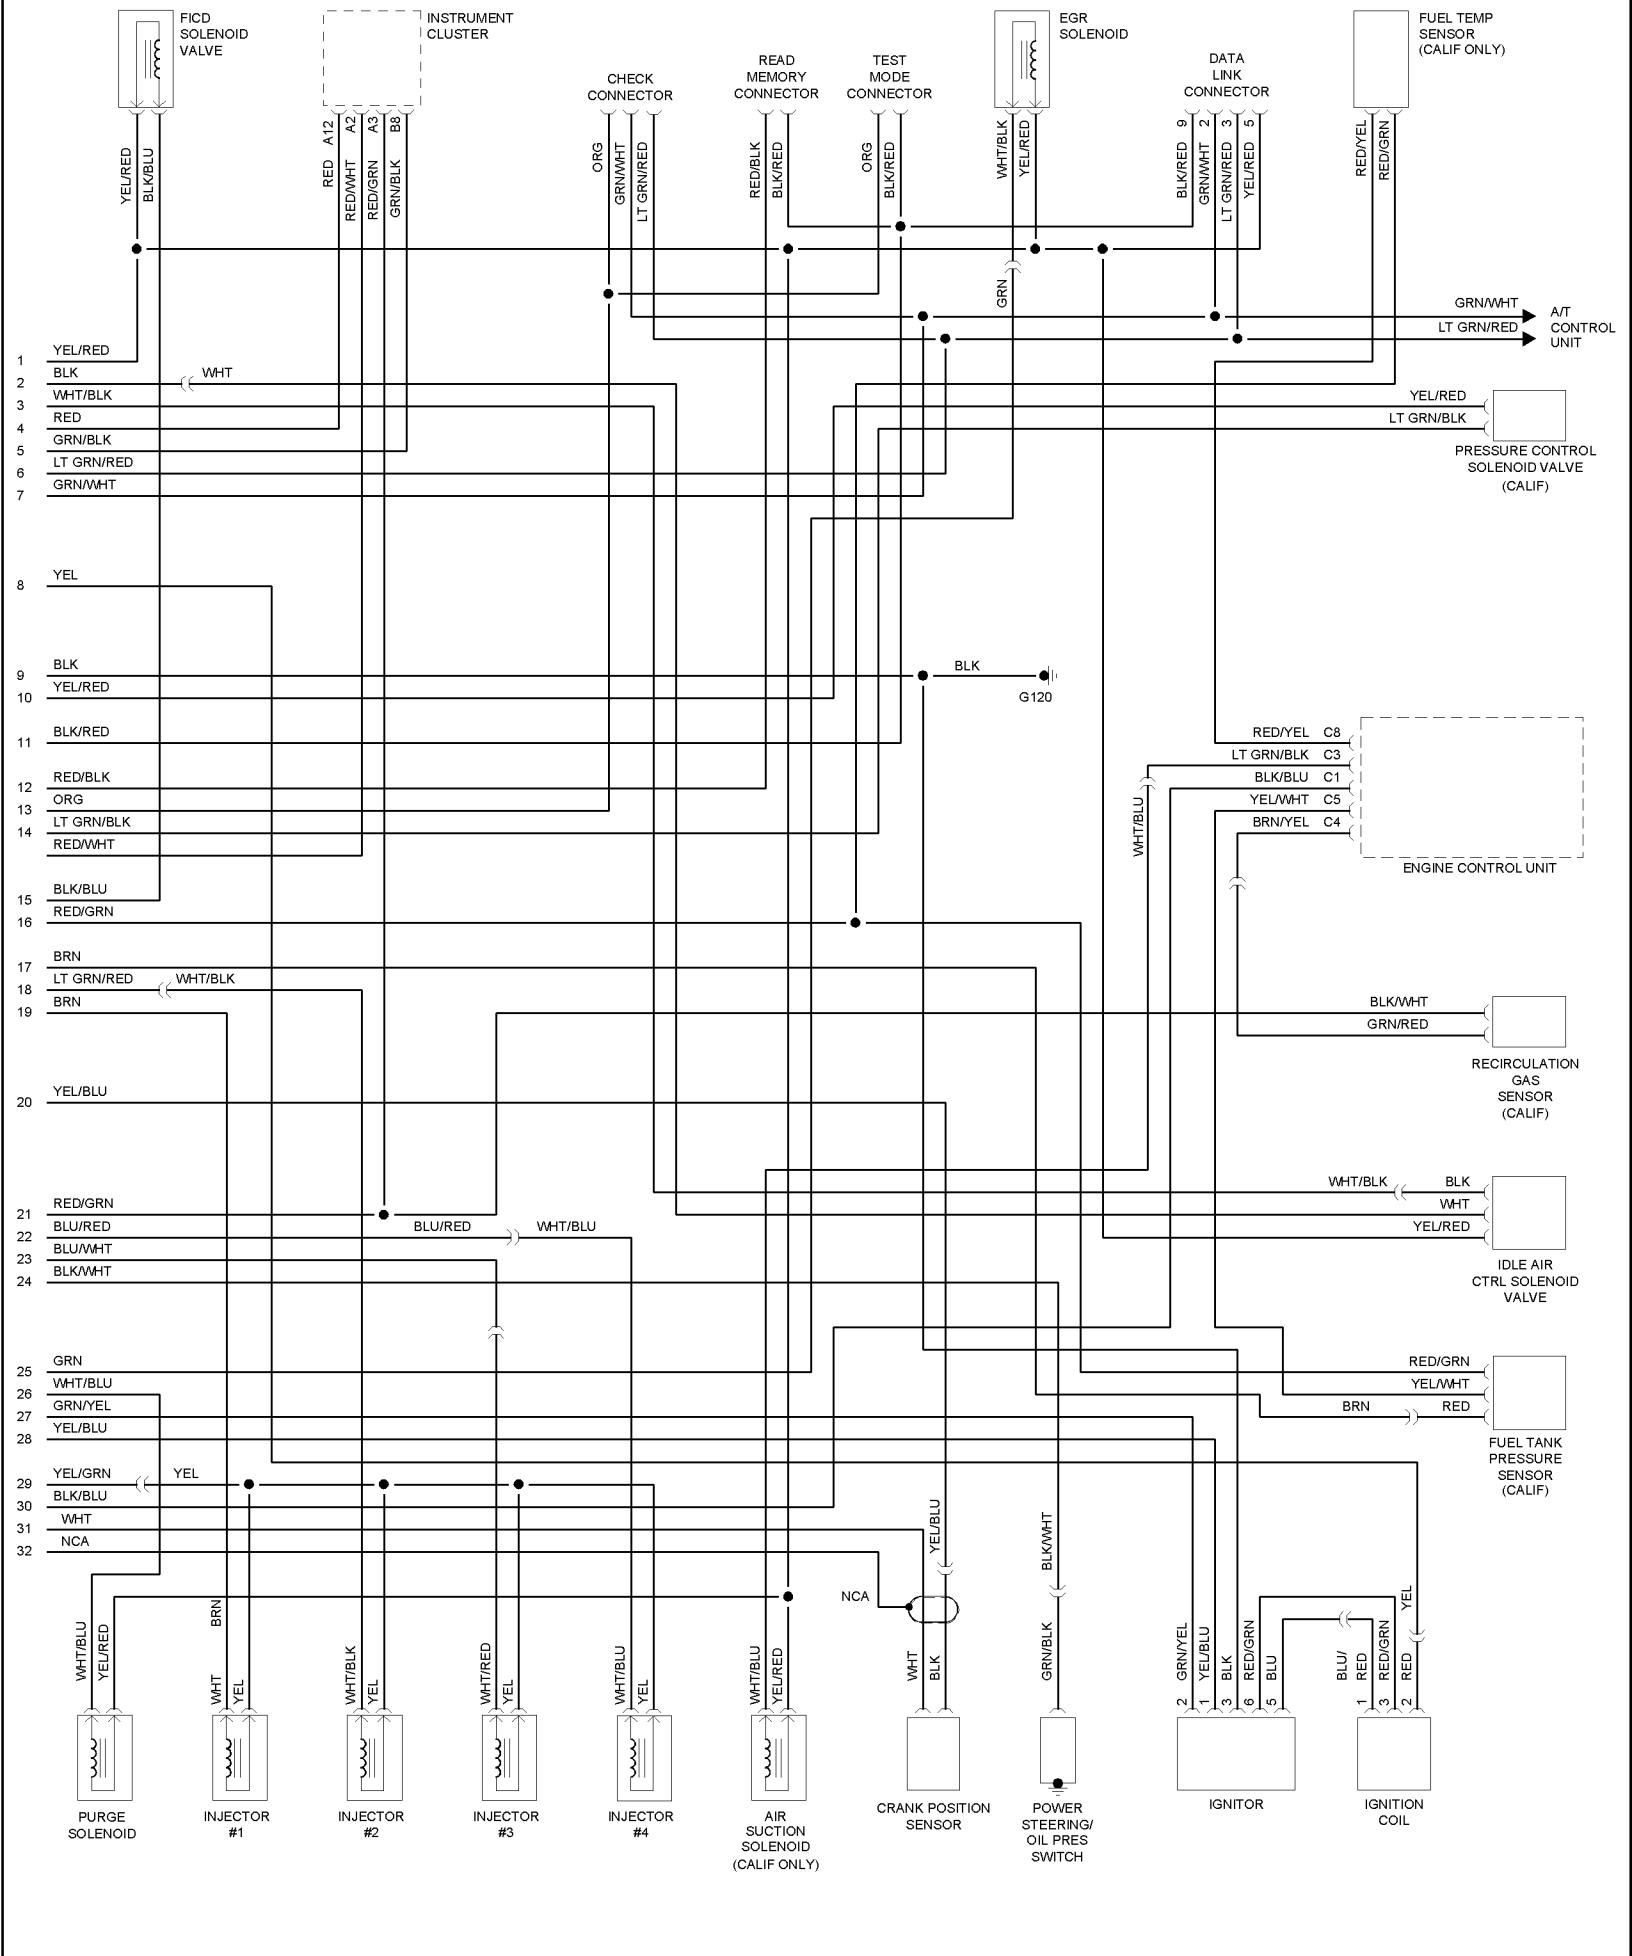
94824


FICD SOLENOID VALVE
INSTRUMENT CLUSTER
CHECK CONNECTOR
READ MEMORY CONNECTOR
TEST MODE CONNECTOR
EGR SOLENOID
DATA LINK CONNECTOR
YEL/RED
BLK/BLU
RED A12
RED/WHT A2
RED/GRN A3
GRN/BLK B8
ORG
LT GRN/RED
GRN/WHT
RED/BLK
BLK/RED
ORG
BLK/RED
WHT/BLK
YEL/RED
GRN
BLK/RED 9
GRN/WHT 2
LT GRN/RED 3
YEL/RED 5
GRN/WHT
LT GRN/RED
A/T CONTROL UNIT
1 YEL/RED
2 BLK
WHT
3 WHT/BLK
4 RED
5 GRN/BLK
6 LT GRN/RED
7 GRN/WHT
8 YEL
9 BLK
BLK
G120
10 BLK/RED
11 RED/BLK
12 ORG
13 RED/WHT
14 BLK/BLU
LT GRN/BLK C3
BLK/BLU C1
BRN/YEL C4
WHT/BLU
BRN/YEL
ENGINE CONTROL UNIT
15 LT GRN/RED
WHT/BLK
16 BRN
BLK/WHT
GRN/RED
RECIRCULATION GAS SENSOR (CALIF)
17 YEL/BLU
18 RED/GRN
19 BLU/RED
BLU/RED
WHT/BLU
20 BLU/WHT
21 BLK/WHT
WHT/BLK
BLK
WHT
YEL/RED
IDLE AIR CTRL SOLENOID VALVE
22 GRN
23 WHT/BLU
24 GRN/YEL
25 YEL/BLU
26 YEL/GRN
YEL
27 BLK/BLU
28 WHT
29 NCA
NCA
YEL/BLU
BLK/WHT
WHT/BLU YEL/RED
BRN WHT YEL
WHT/BLK YEL
WHT/RED YEL
YEL WHT/BLU
WHT/BLU YEL/RED
WHT BLK
GRN/BLK
1 YEL/BLU
2 GRN/YEL
3 BLK
6 RED/GRN
5 BLU
BLU/ RED 1
RED/GRN 3
RED 2
YEL
PURGE SOLENOID
INJECTOR #1
INJECTOR #2
INJECTOR #3
INJECTOR #4
AIR SUCTION SOLENOID (CALIF ONLY)
CRANK POSITION SENSOR
POWER STEERING/ OIL PRES SWITCH
IGNITOR
IGNITION COIL

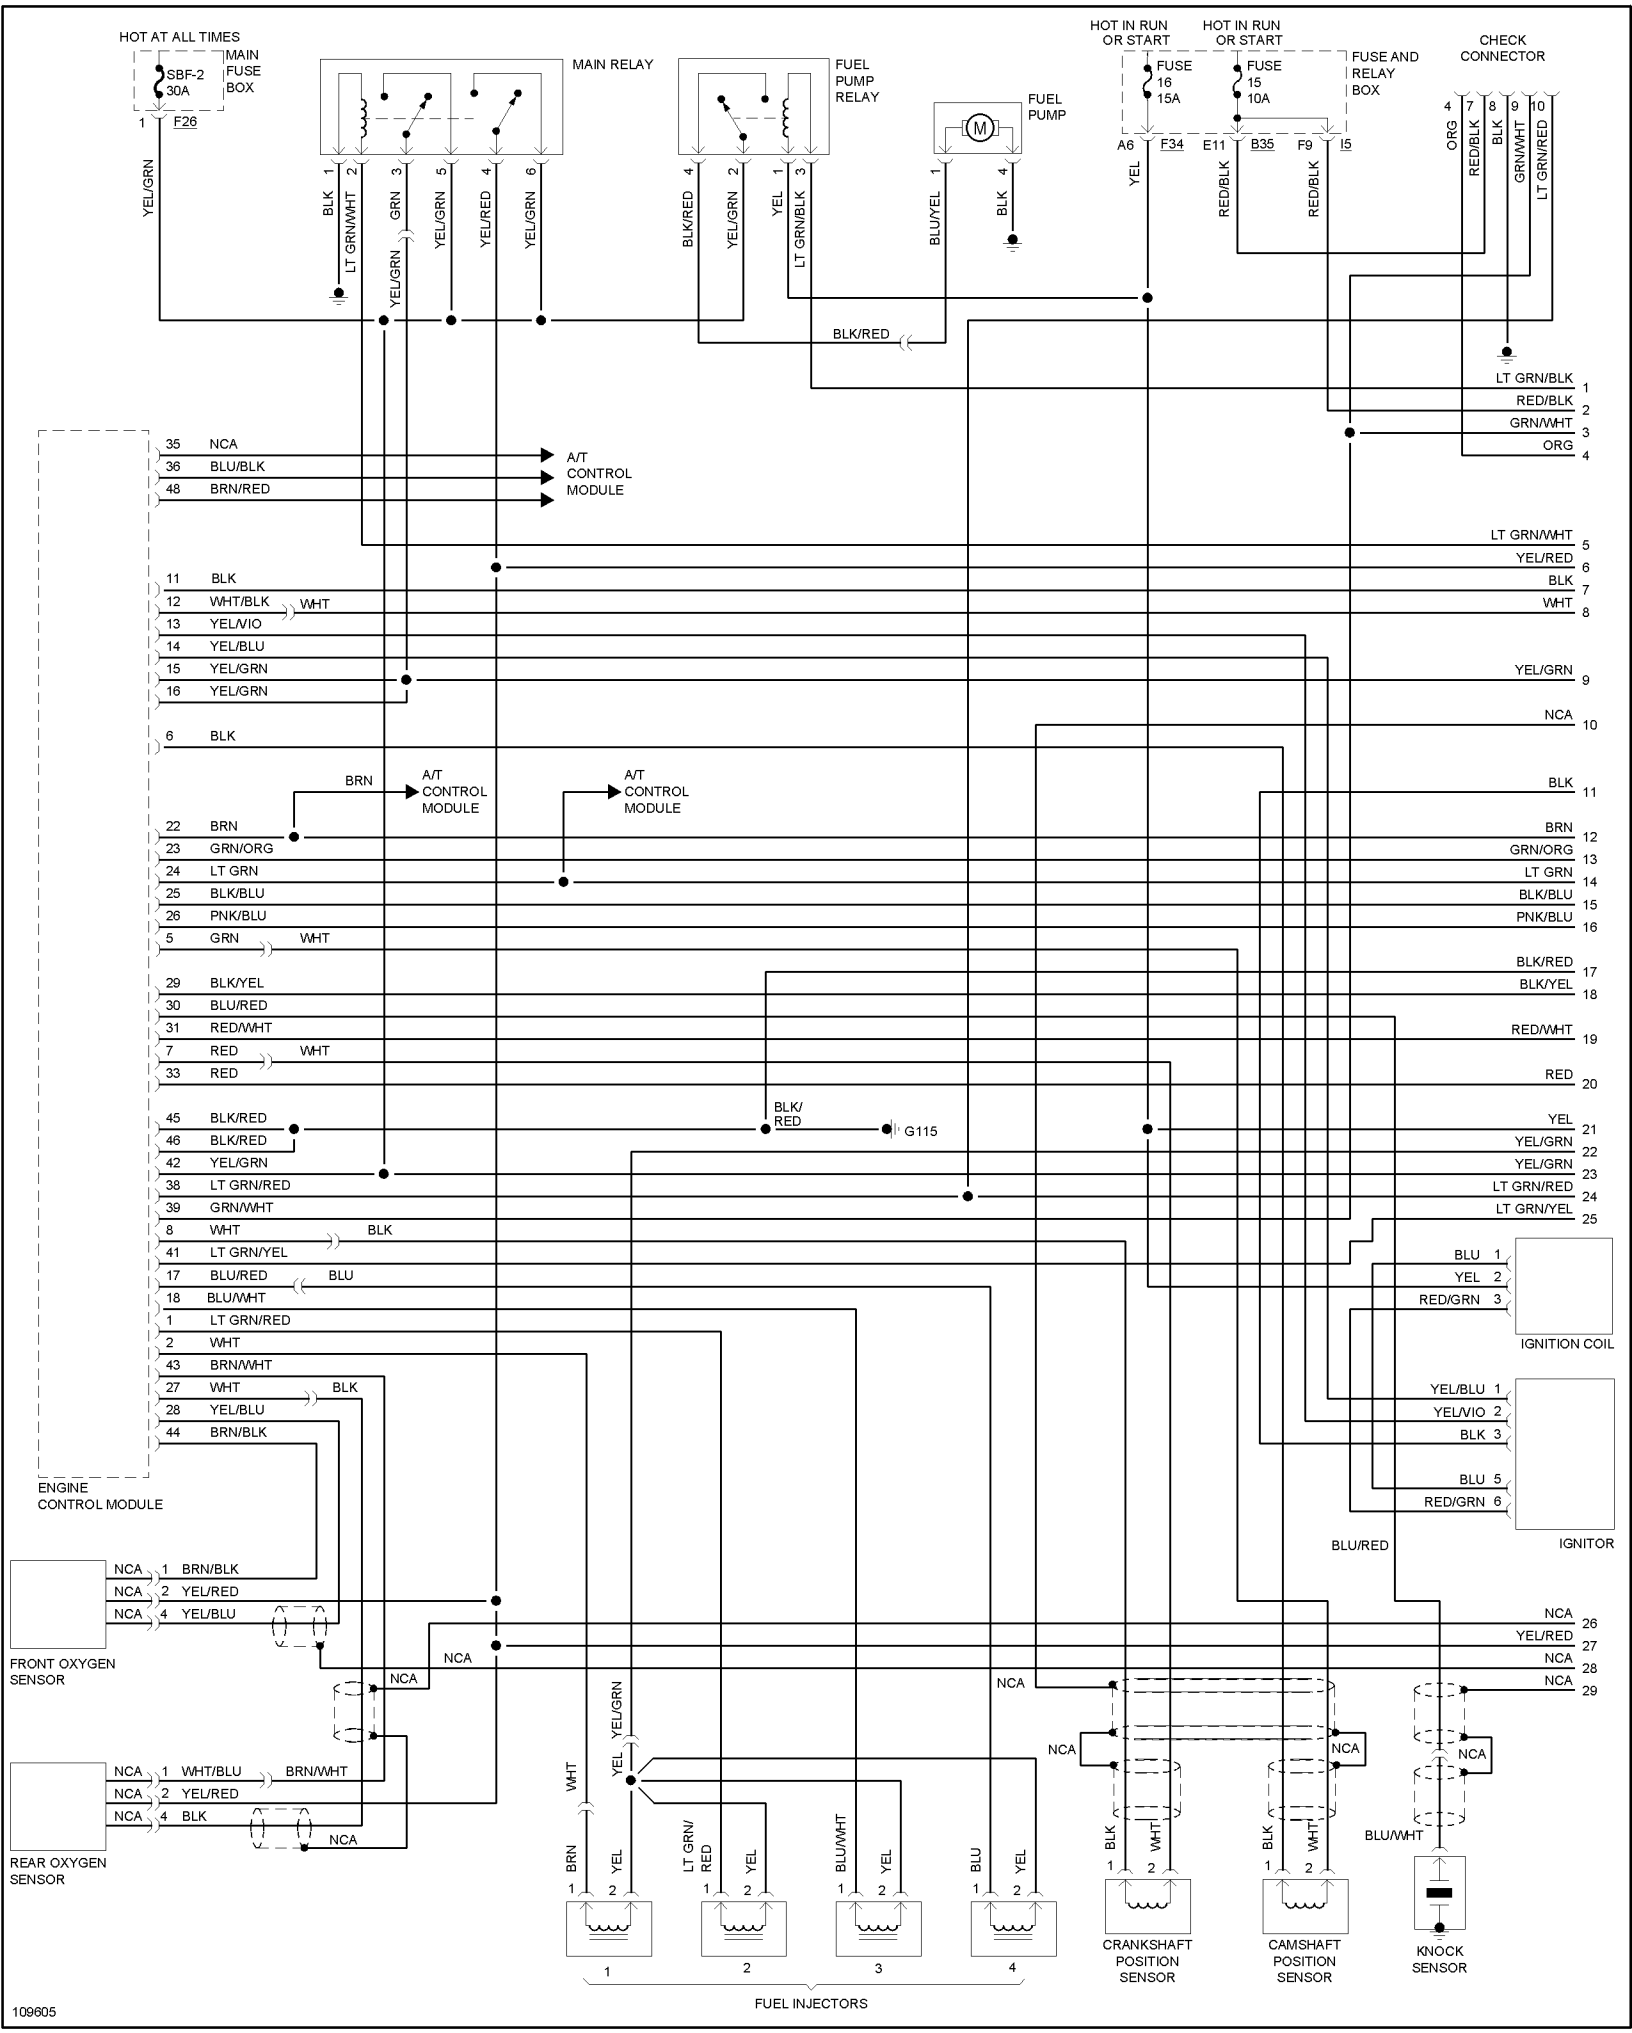
94830

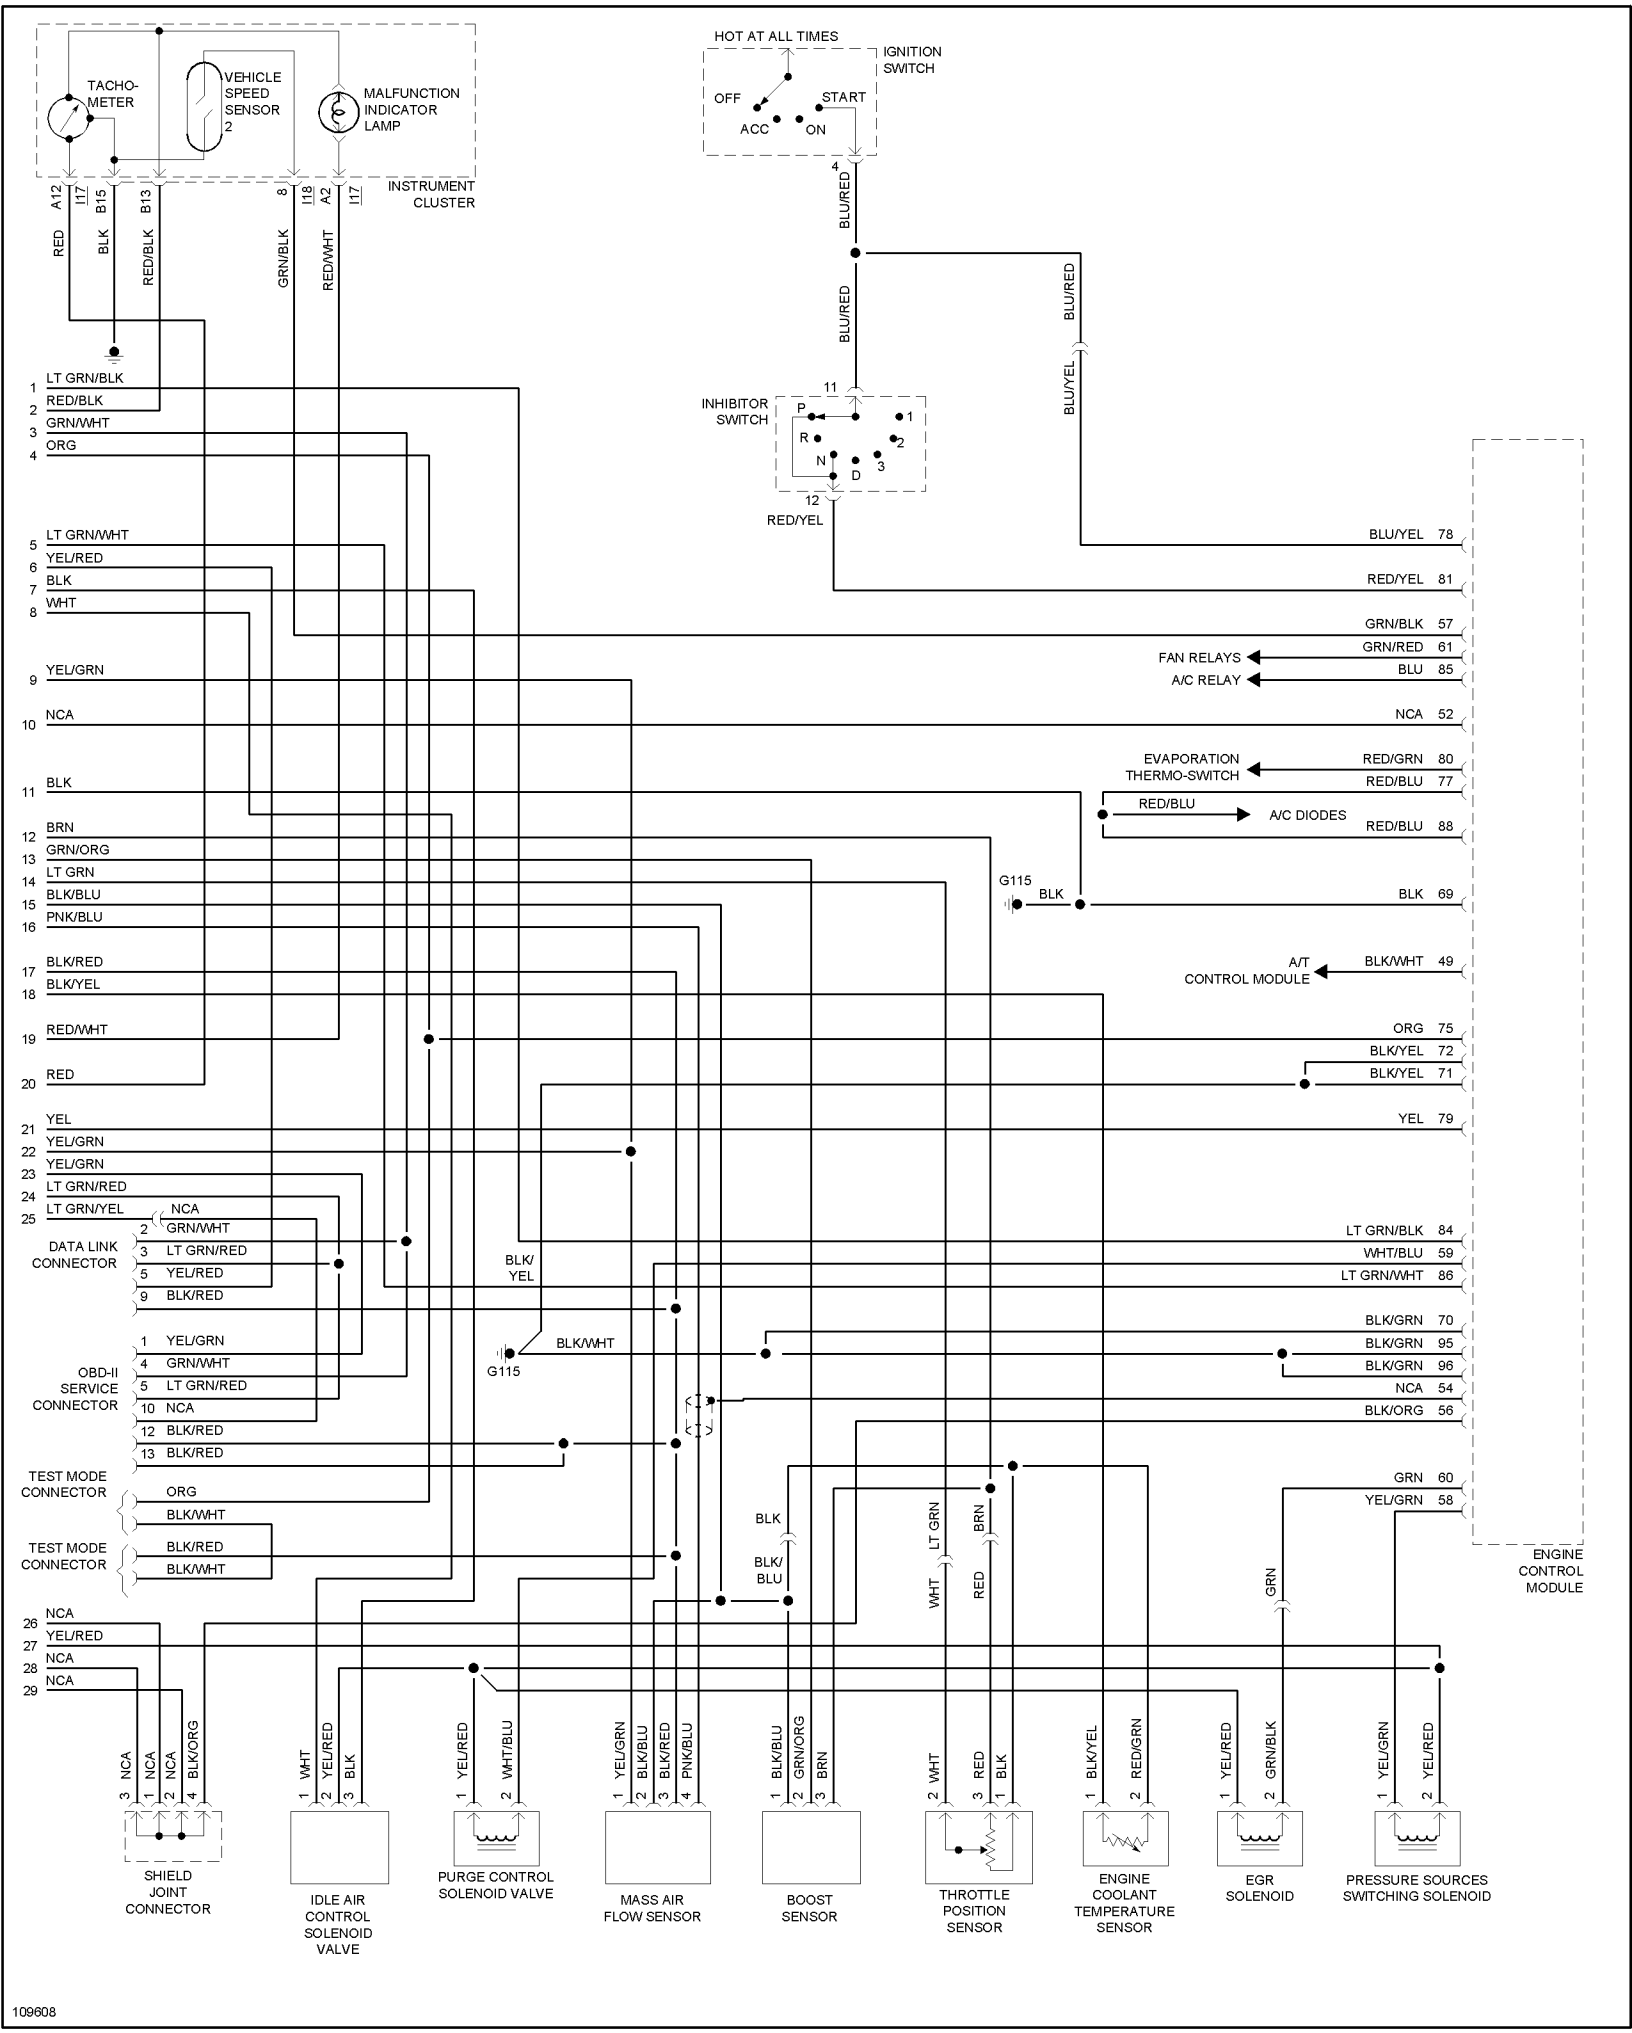

HOT AT ALL TIMES
MAIN FUSE BOX
FUSIBLE LINK #2 30A
HOT IN RUN OR START
FUSE BLOCK
FUSE #16 15A
MAIN RELAY
FUEL PUMP RELAY
FUEL PUMP
HOT AT ALL TIMES
OFF
START
ACC
RUN
IGNITION SWITCH
YEL/GRN
YEL
LT GRN/WHT
BLK/BLU
YEL/RED
YEL/GRN
GRN
YEL/GRN
YEL
LT GRN/BLK
BLK/RED
YEL/GRN
BLU/YEL
BLK
BLU/RED
A18 LT GRN/WHT
A8 LT GRN/BLK
A26 YEL/GRN
BLK/BLU
BLK/GRN
A1 BLK
A2 WHT/BLK
A3 RED
A4 GRN/BLK
A5 LT GRN/RED
A6 GRN/WHT
A9 BLU
A7 GRN/RED
A11 RED/GRN
A23 RED/BLU
A/C SYSTEM
A10 YEL
A12 RED/YEL
A13 YEL/GRN
A14 BLK
A16 BLU/YEL
A17 BLK/WHT
A15 BLK/YEL
G120
A19 RED/BLK
A20 ORG
A21 LT GRN/BLK
A22 RED/WHT
A25 BLK/GRN
A24 BLK/BLU
B1 LT GRN/RED
B2 BRN
B5 PNK/BLU
B6 YEL/BLU
B7 RED
B8 WHT
B9 RED
B10 WHT
B11 RED/GRN
B12 BLU/RED
B13 BLU/WHT
B14 BLK/WHT
B4 LT GRN
B15 BRN
B3 BLK/YEL
B18 GRN
B19 WHT/BLU
B20 GRN/YEL
B21 YEL/BLU
B22 BLK/RED
ENGINE CONTROL UNIT
BLK/WHT
BLK/GRN
BLK/RED
YEL
BLK
YEL/RED
WHT/BLK
RED
GRN/BLK
LT GRN/RED
GRN/WHT
YEL
BLK
YEL/RED
BLK/RED
RED/BLK
ORG
LT GRN/BLK
RED/WHT
BLK/BLU
RED/GRN
BRN
LT GRN/RED
BRN
(A/T ONLY)
(M/T ONLY)
YEL/BLU
BLU/RED
LT GRN/YEL
RED/GRN
BLU/RED
BLU/WHT
BLK/WHT
GRN
WHT/BLU
GRN/YEL
YEL/BLU
YEL/GRN
BLK/BLU
WHT
NCA
RED
WHT
BLK
WHT
NCA
A/T CONTROL MODULE
A/T CONTROL MODULE
BLK/WHT
BLK/GRN
WHT
BLK
BLK/WHT
BLK/YEL
BLK/GRN
WHT
YEL/RED
BLK/WHT
WHT
RED
LT GRN
BRN
RED/GRN
NCA
NCA
NCA
YEL/GRN
BLK/BLU
BLK/RED
PNK/BLU
BLU/RED
RED/YEL
LT GRN/YEL
BLK/RED
G120
CAM POSITION SENSOR
COOLANT TEMPERATURE SENSOR
OXYGEN SENSOR
THROTTLE POSITION SENSOR
SHIELD JOINT CONNECTOR
MASS AIR FLOW METER
INHIBITOR SWITCH (A/T ONLY)
NEUTRAL POSITION SWITCH (M/T ONLY)

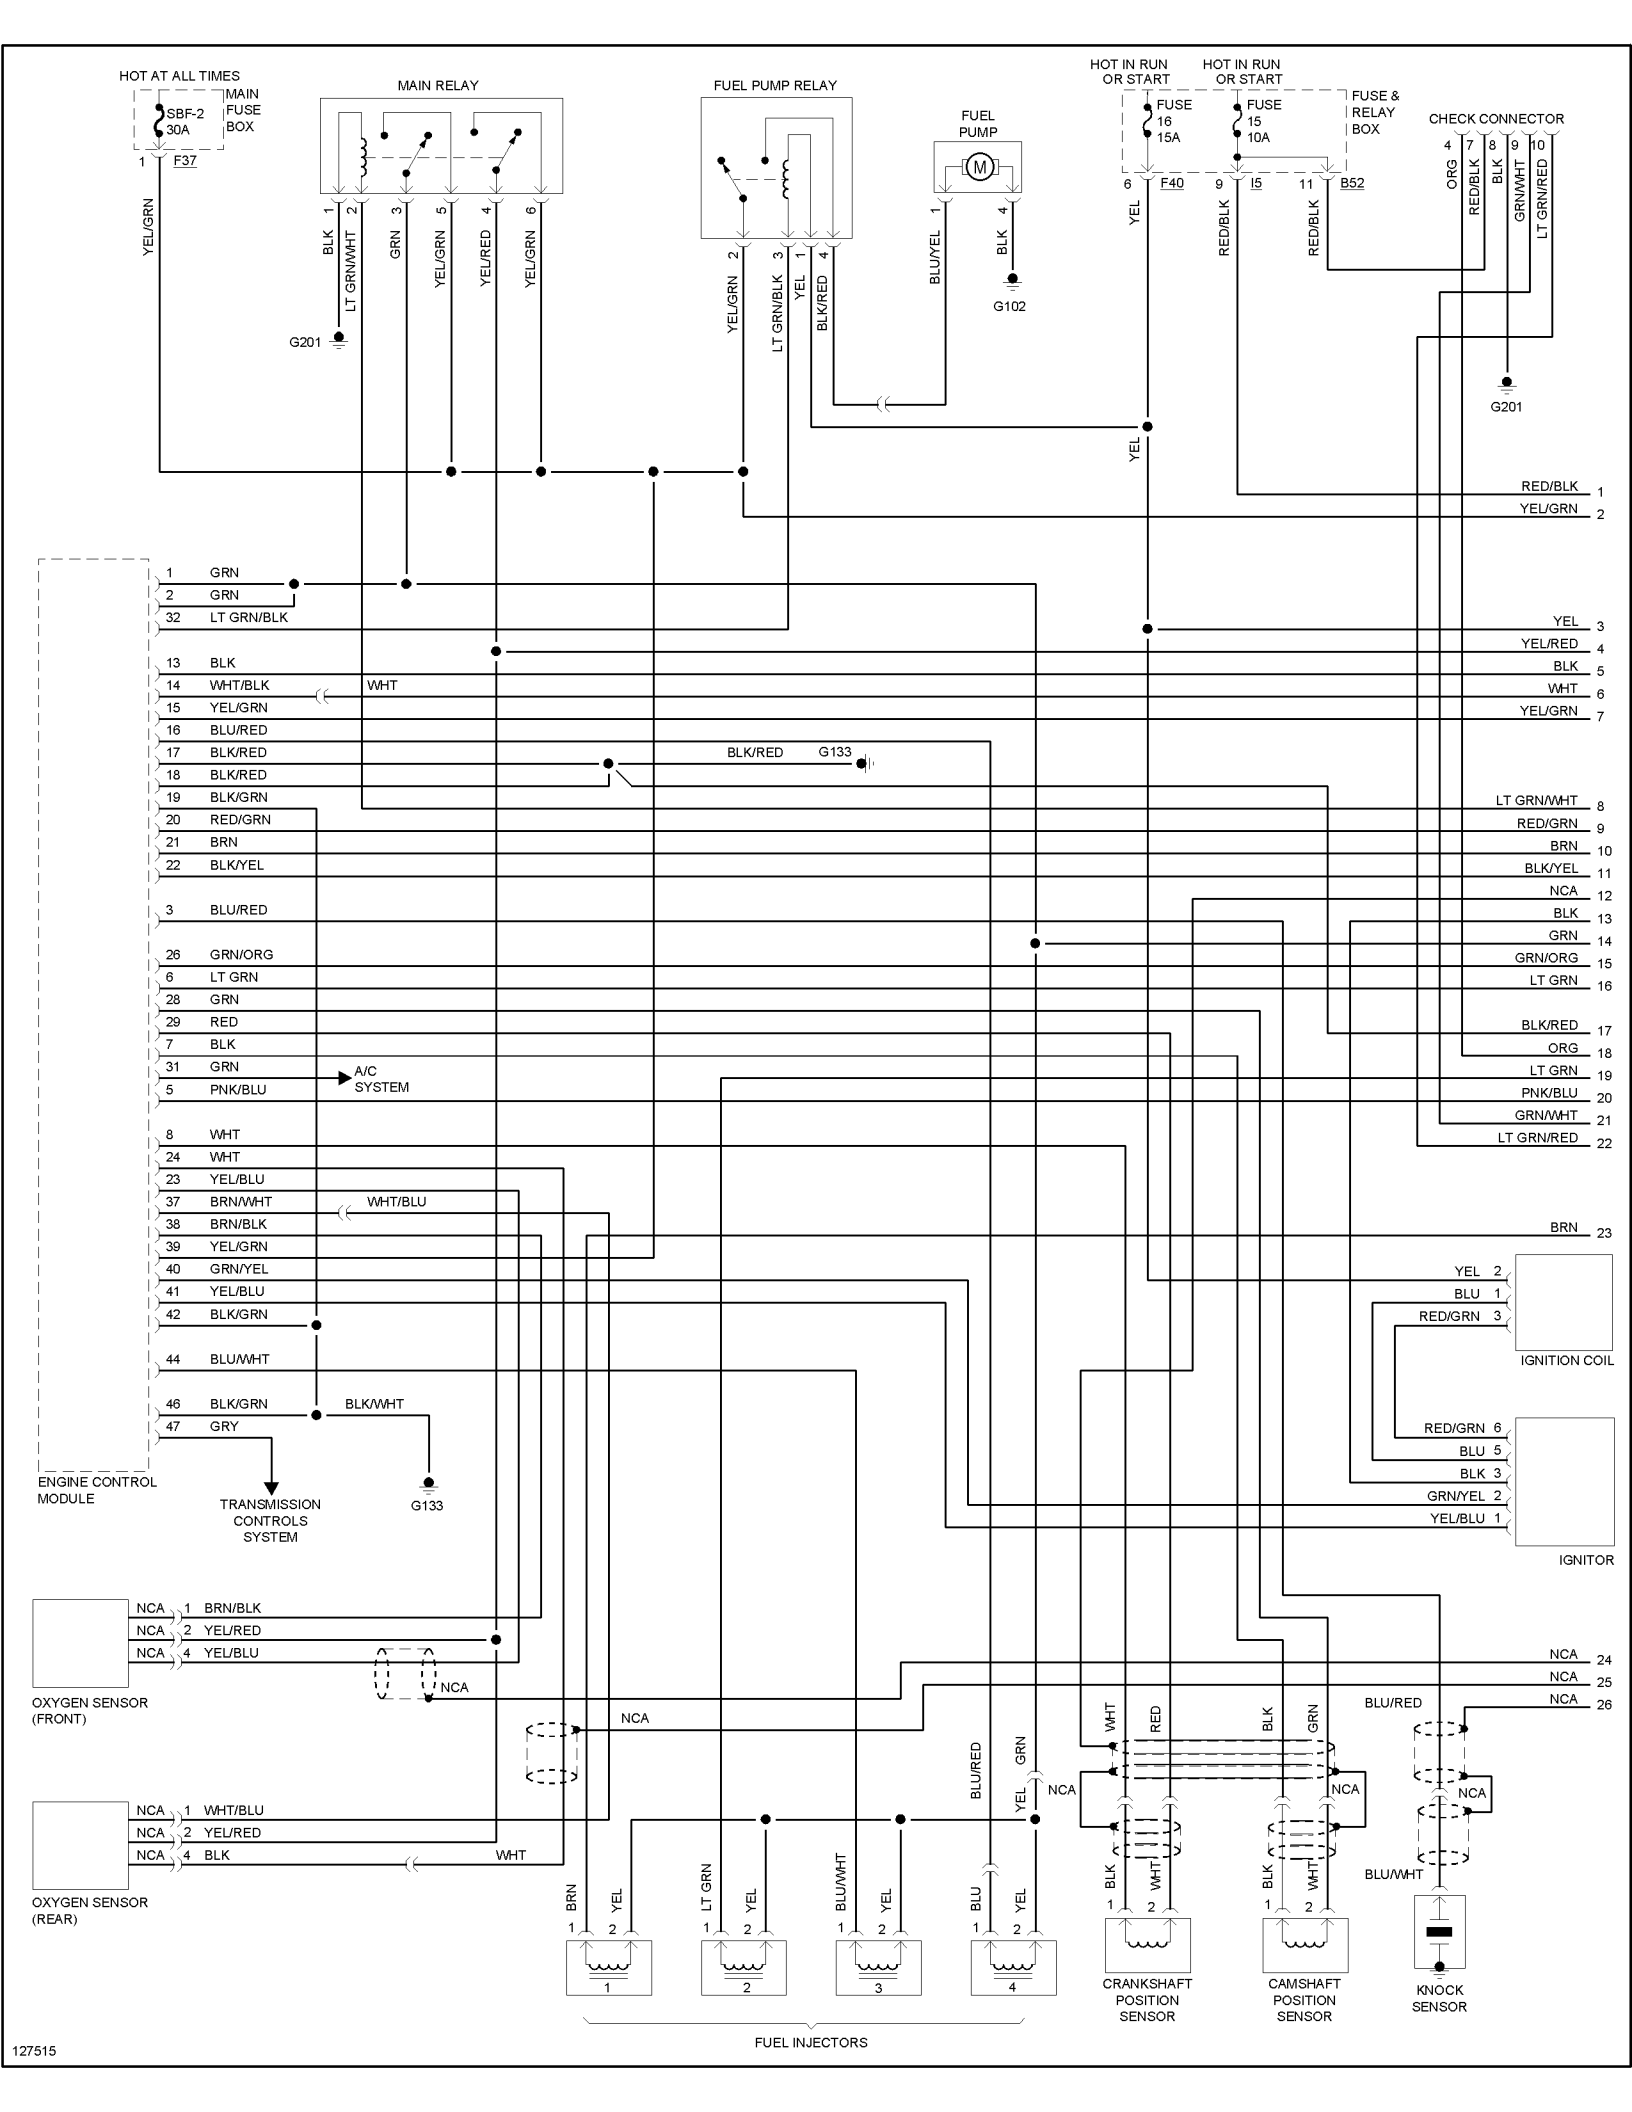
109600

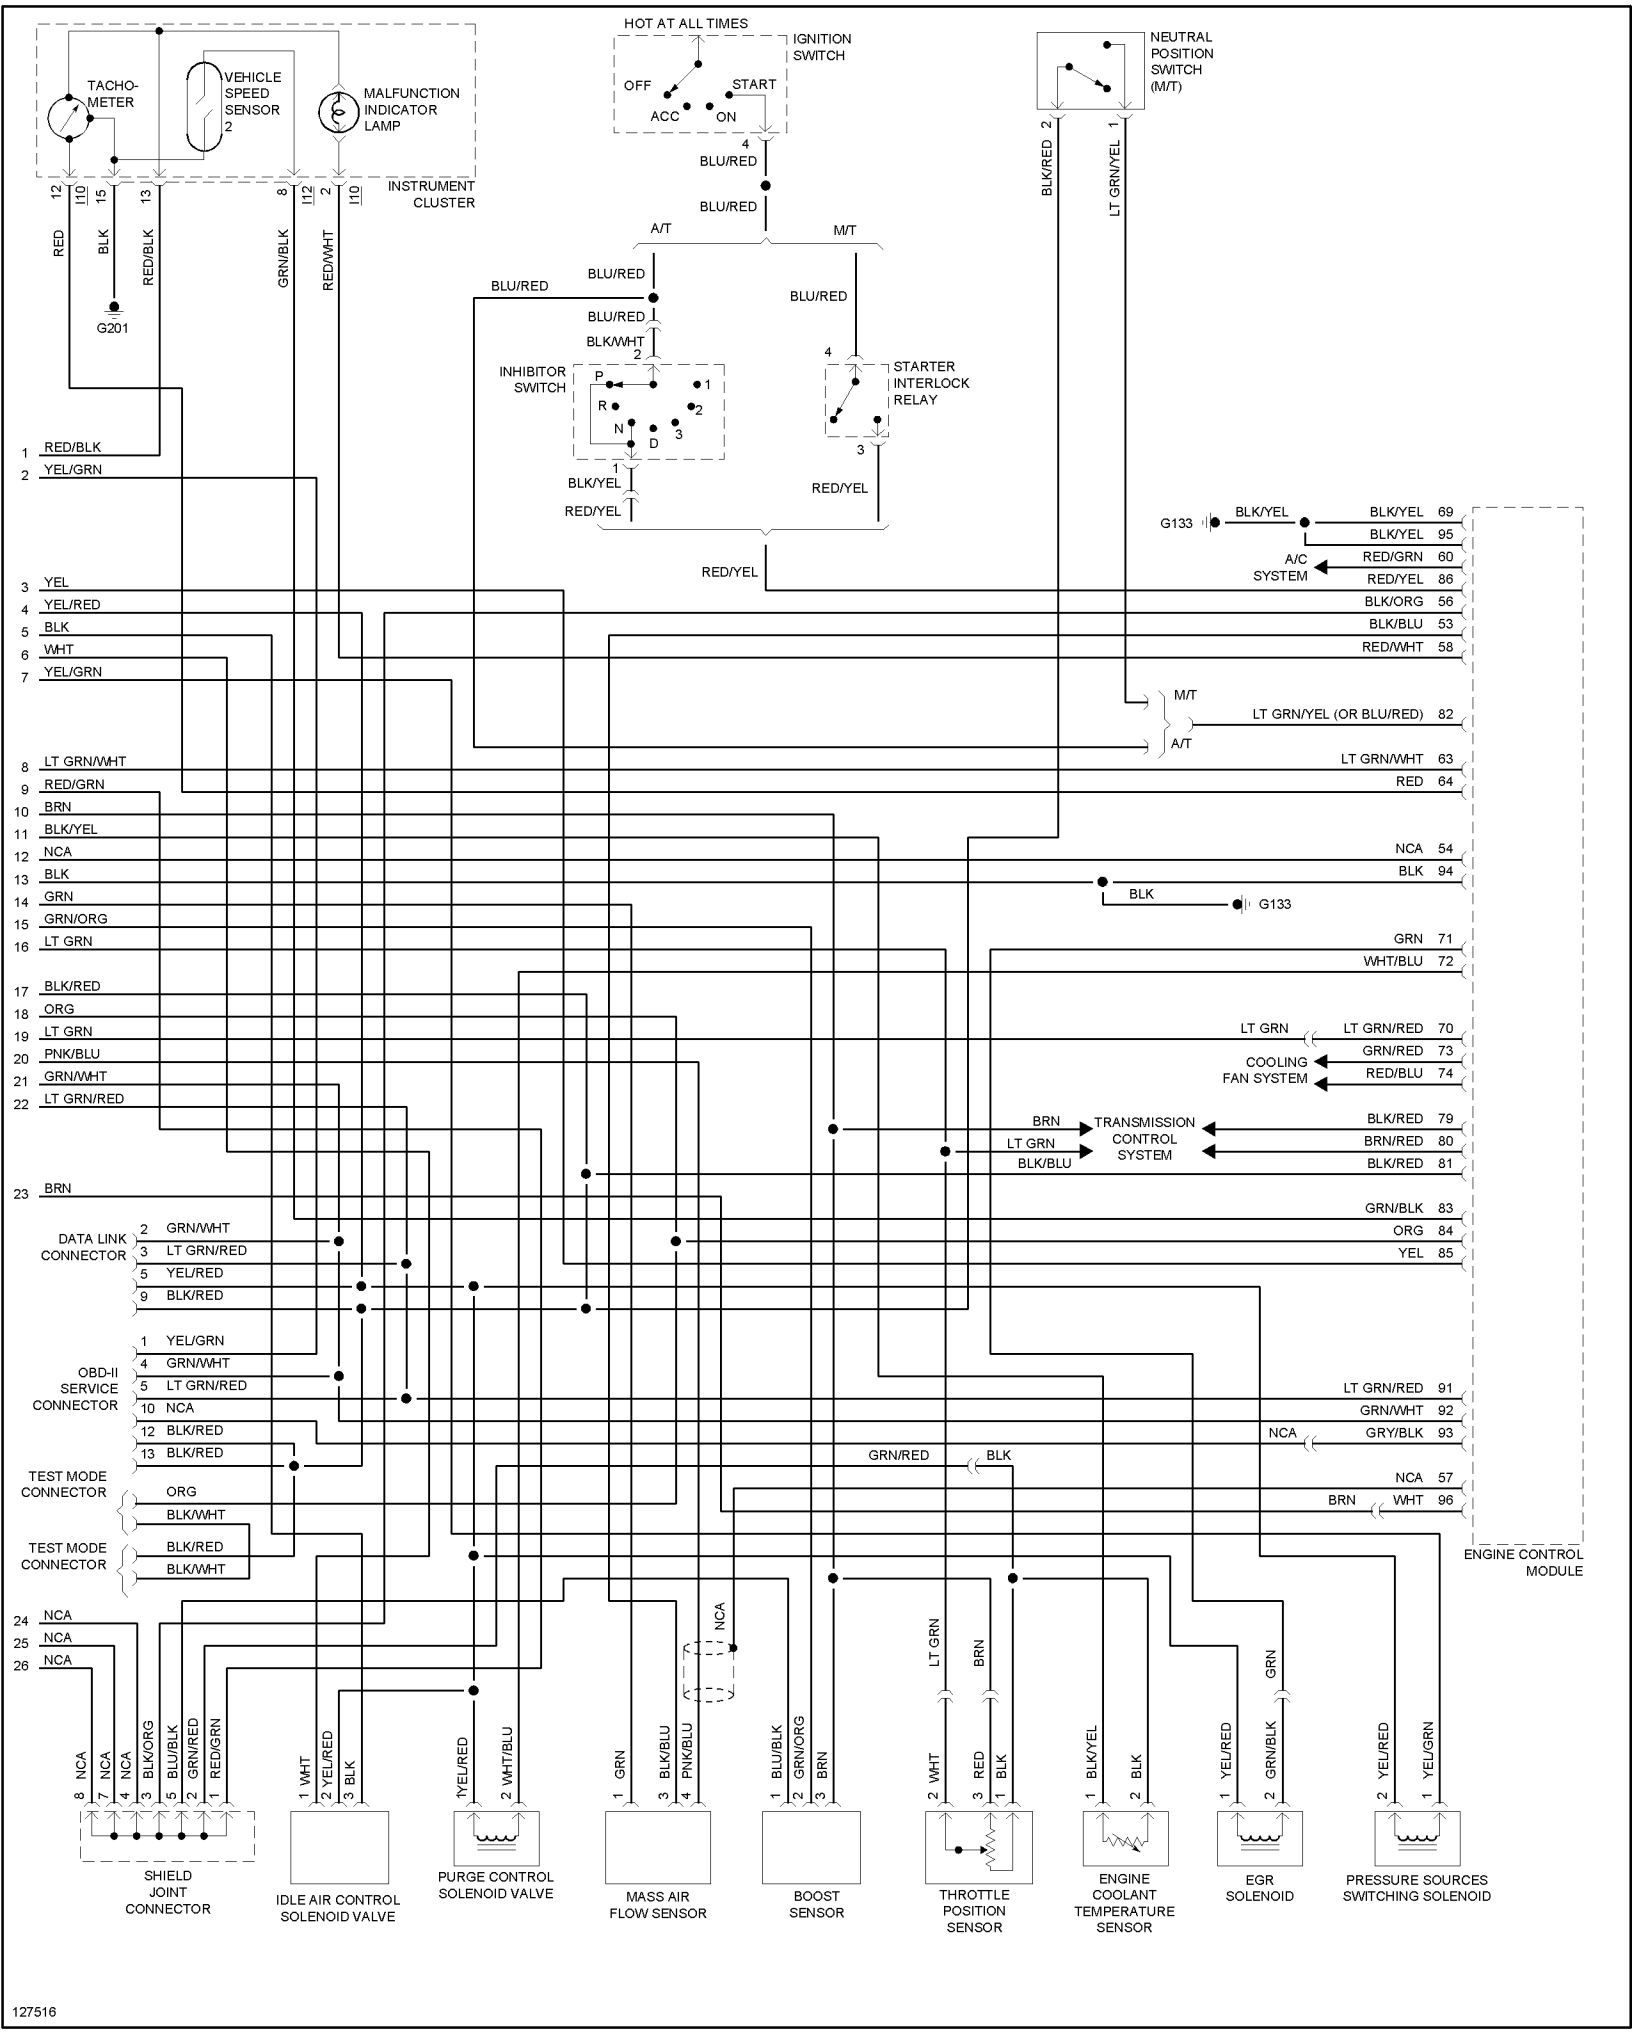

FICD SOLENOID VALVE
INSTRUMENT CLUSTER
CHECK CONNECTOR
READ MEMORY CONNECTOR
TEST MODE CONNECTOR
EGR SOLENOID
DATA LINK CONNECTOR
FUEL TEMP SENSOR (CALIF ONLY)
A/T CONTROL UNIT
PRESSURE CONTROL SOLENOID VALVE (CALIF)
G120
ENGINE CONTROL UNIT
RECIRCULATION GAS SENSOR (CALIF)
IDLE AIR CTRL SOLENOID VALVE
FUEL TANK PRESSURE SENSOR (CALIF)
PURGE SOLENOID
INJECTOR #1
INJECTOR #2
INJECTOR #3
INJECTOR #4
AIR SUCTION SOLENOID (CALIF ONLY)
CRANK POSITION SENSOR
POWER STEERING/ OIL PRES SWITCH
IGNITOR
IGNITION COIL
YEL/RED
BLK/BLU
RED A12
RED/WHT A2
RED/GRN A3
GRN/BLK B8
ORG
GRN/WHT
LT GRN/RED
RED/BLK
BLK/RED
WHT/BLK
YEL/RED
GRN
BLK/RED 9
GRN/WHT 2
LT GRN/RED 3
YEL/RED 5
RED/YEL
RED/GRN
GRN/WHT
LT GRN/RED
1 YEL/RED
2 BLK
WHT
3 WHT/BLK
4 RED
5 GRN/BLK
6 LT GRN/RED
7 GRN/WHT
8 YEL
9 BLK
10 YEL/RED
11 BLK/RED
12 RED/BLK
13 ORG
14 LT GRN/BLK
RED/WHT
15 BLK/BLU
16 RED/GRN
17 BRN
18 LT GRN/RED
WHT/BLK
19 BRN
20 YEL/BLU
21 RED/GRN
22 BLU/RED
BLU/RED
WHT/BLU
23 BLU/WHT
24 BLK/WHT
25 GRN
26 WHT/BLU
27 GRN/YEL
28 YEL/BLU
29 YEL/GRN
YEL
30 BLK/BLU
31 WHT
32 NCA
RED/YEL C8
LT GRN/BLK C3
BLK/BLU C1
YEL/WHT C5
BRN/YEL C4
WHT/BLU
BLK/WHT
GRN/RED
WHT/BLK
BLK
WHT
YEL/RED
BRN
RED
YEL/BLU
BLK/WHT
NCA
WHT/BLU
YEL/RED
BRN
WHT
YEL
WHT/BLK
YEL
WHT/RED
YEL
WHT/BLU
YEL
WHT/BLU
YEL/RED
WHT
BLK
GRN/BLK
2 GRN/YEL
1 YEL/BLU
3 BLK
6 RED/GRN
5 BLU
BLU/ RED 1
RED/GRN 3
YEL 2
RED 2

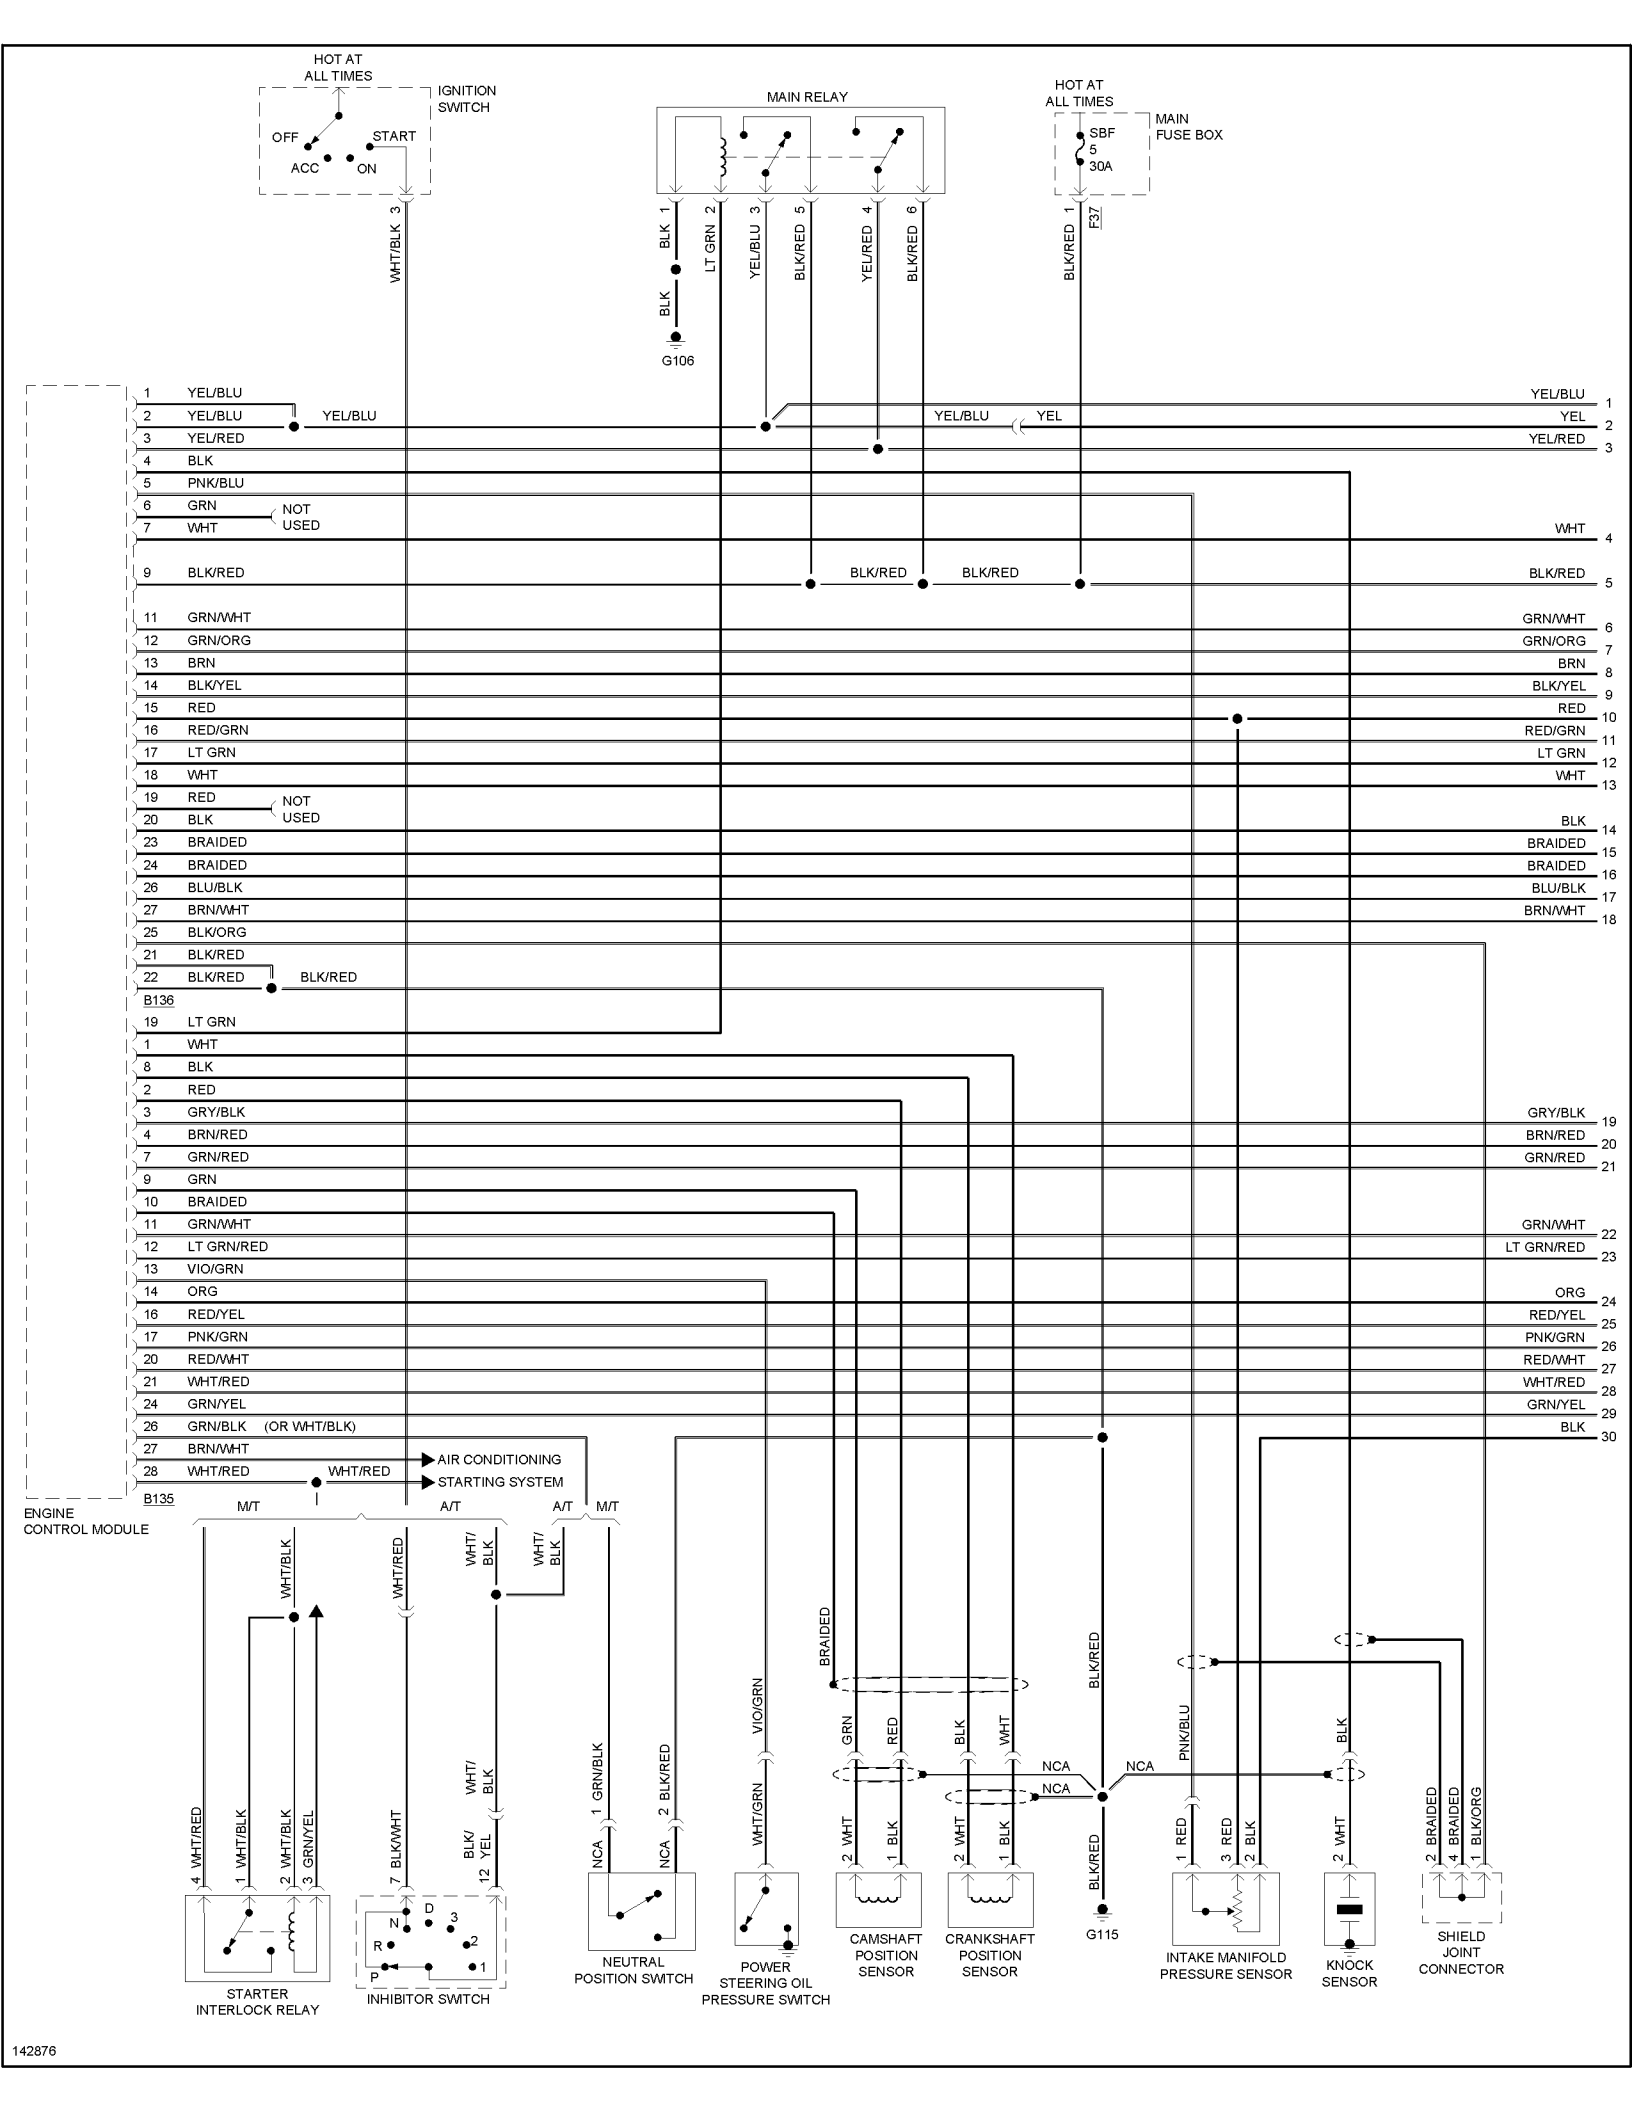
109603


HOT AT ALL TIMES
MAIN FUSE BOX
SBF-2 30A
F26
MAIN RELAY
FUEL PUMP RELAY
FUEL PUMP
HOT IN RUN OR START
FUSE 16 15A
HOT IN RUN OR START
FUSE 15 10A
FUSE AND RELAY BOX
CHECK CONNECTOR
A6 F34 E11 B35 F9 I5
YEL/GRN
BLK
LT GRN/WHT
GRN
YEL/GRN
YEL/RED
YEL/GRN
BLK/RED
YEL/GRN
YEL
LT GRN/BLK
BLU/YEL
BLK
YEL
RED/BLK
RED/BLK
ORG
RED/BLK
BLK
GRN/WHT
LT GRN/RED
BLK/RED
LT GRN/BLK 1
RED/BLK 2
GRN/WHT 3
ORG 4
35 NCA
36 BLU/BLK
48 BRN/RED
A/T CONTROL MODULE
LT GRN/WHT 5
YEL/RED 6
BLK 7
WHT 8
11 BLK
12 WHT/BLK
WHT
13 YEL/VIO
14 YEL/BLU
15 YEL/GRN
16 YEL/GRN
YEL/GRN 9
NCA 10
6 BLK
BRN
A/T CONTROL MODULE
A/T CONTROL MODULE
BLK 11
22 BRN
23 GRN/ORG
24 LT GRN
25 BLK/BLU
26 PNK/BLU
5 GRN
WHT
BRN 12
GRN/ORG 13
LT GRN 14
BLK/BLU 15
PNK/BLU 16
BLK/RED 17
BLK/YEL 18
29 BLK/YEL
30 BLU/RED
31 RED/WHT
7 RED
WHT
33 RED
RED/WHT 19
RED 20
45 BLK/RED
46 BLK/RED
BLK/RED
G115
YEL 21
YEL/GRN 22
42 YEL/GRN
38 LT GRN/RED
39 GRN/WHT
YEL/GRN 23
LT GRN/RED 24
LT GRN/YEL 25
8 WHT
BLK
41 LT GRN/YEL
17 BLU/RED
BLU
18 BLU/WHT
1 LT GRN/RED
2 WHT
43 BRN/WHT
27 WHT
BLK
28 YEL/BLU
44 BRN/BLK
BLU 1
YEL 2
RED/GRN 3
IGNITION COIL
YEL/BLU 1
YEL/VIO 2
BLK 3
BLU 5
RED/GRN 6
IGNITOR
BLU/RED
ENGINE CONTROL MODULE
NCA 1 BRN/BLK
NCA 2 YEL/RED
NCA 4 YEL/BLU
FRONT OXYGEN SENSOR
NCA 26
YEL/RED 27
NCA 28
NCA 29
NCA
NCA
NCA 1 WHT/BLU
BRN/WHT
NCA 2 YEL/RED
NCA 4 BLK
REAR OXYGEN SENSOR
NCA
WHT
YEL
YEL/GRN
BRN
YEL
LT GRN/RED
YEL
BLU/WHT
YEL
BLU
YEL
BLK
WHT
CRANKSHAFT POSITION SENSOR
BLK
WHT
CAMSHAFT POSITION SENSOR
BLU/WHT
KNOCK SENSOR
1
2
3
4
FUEL INJECTORS
109605

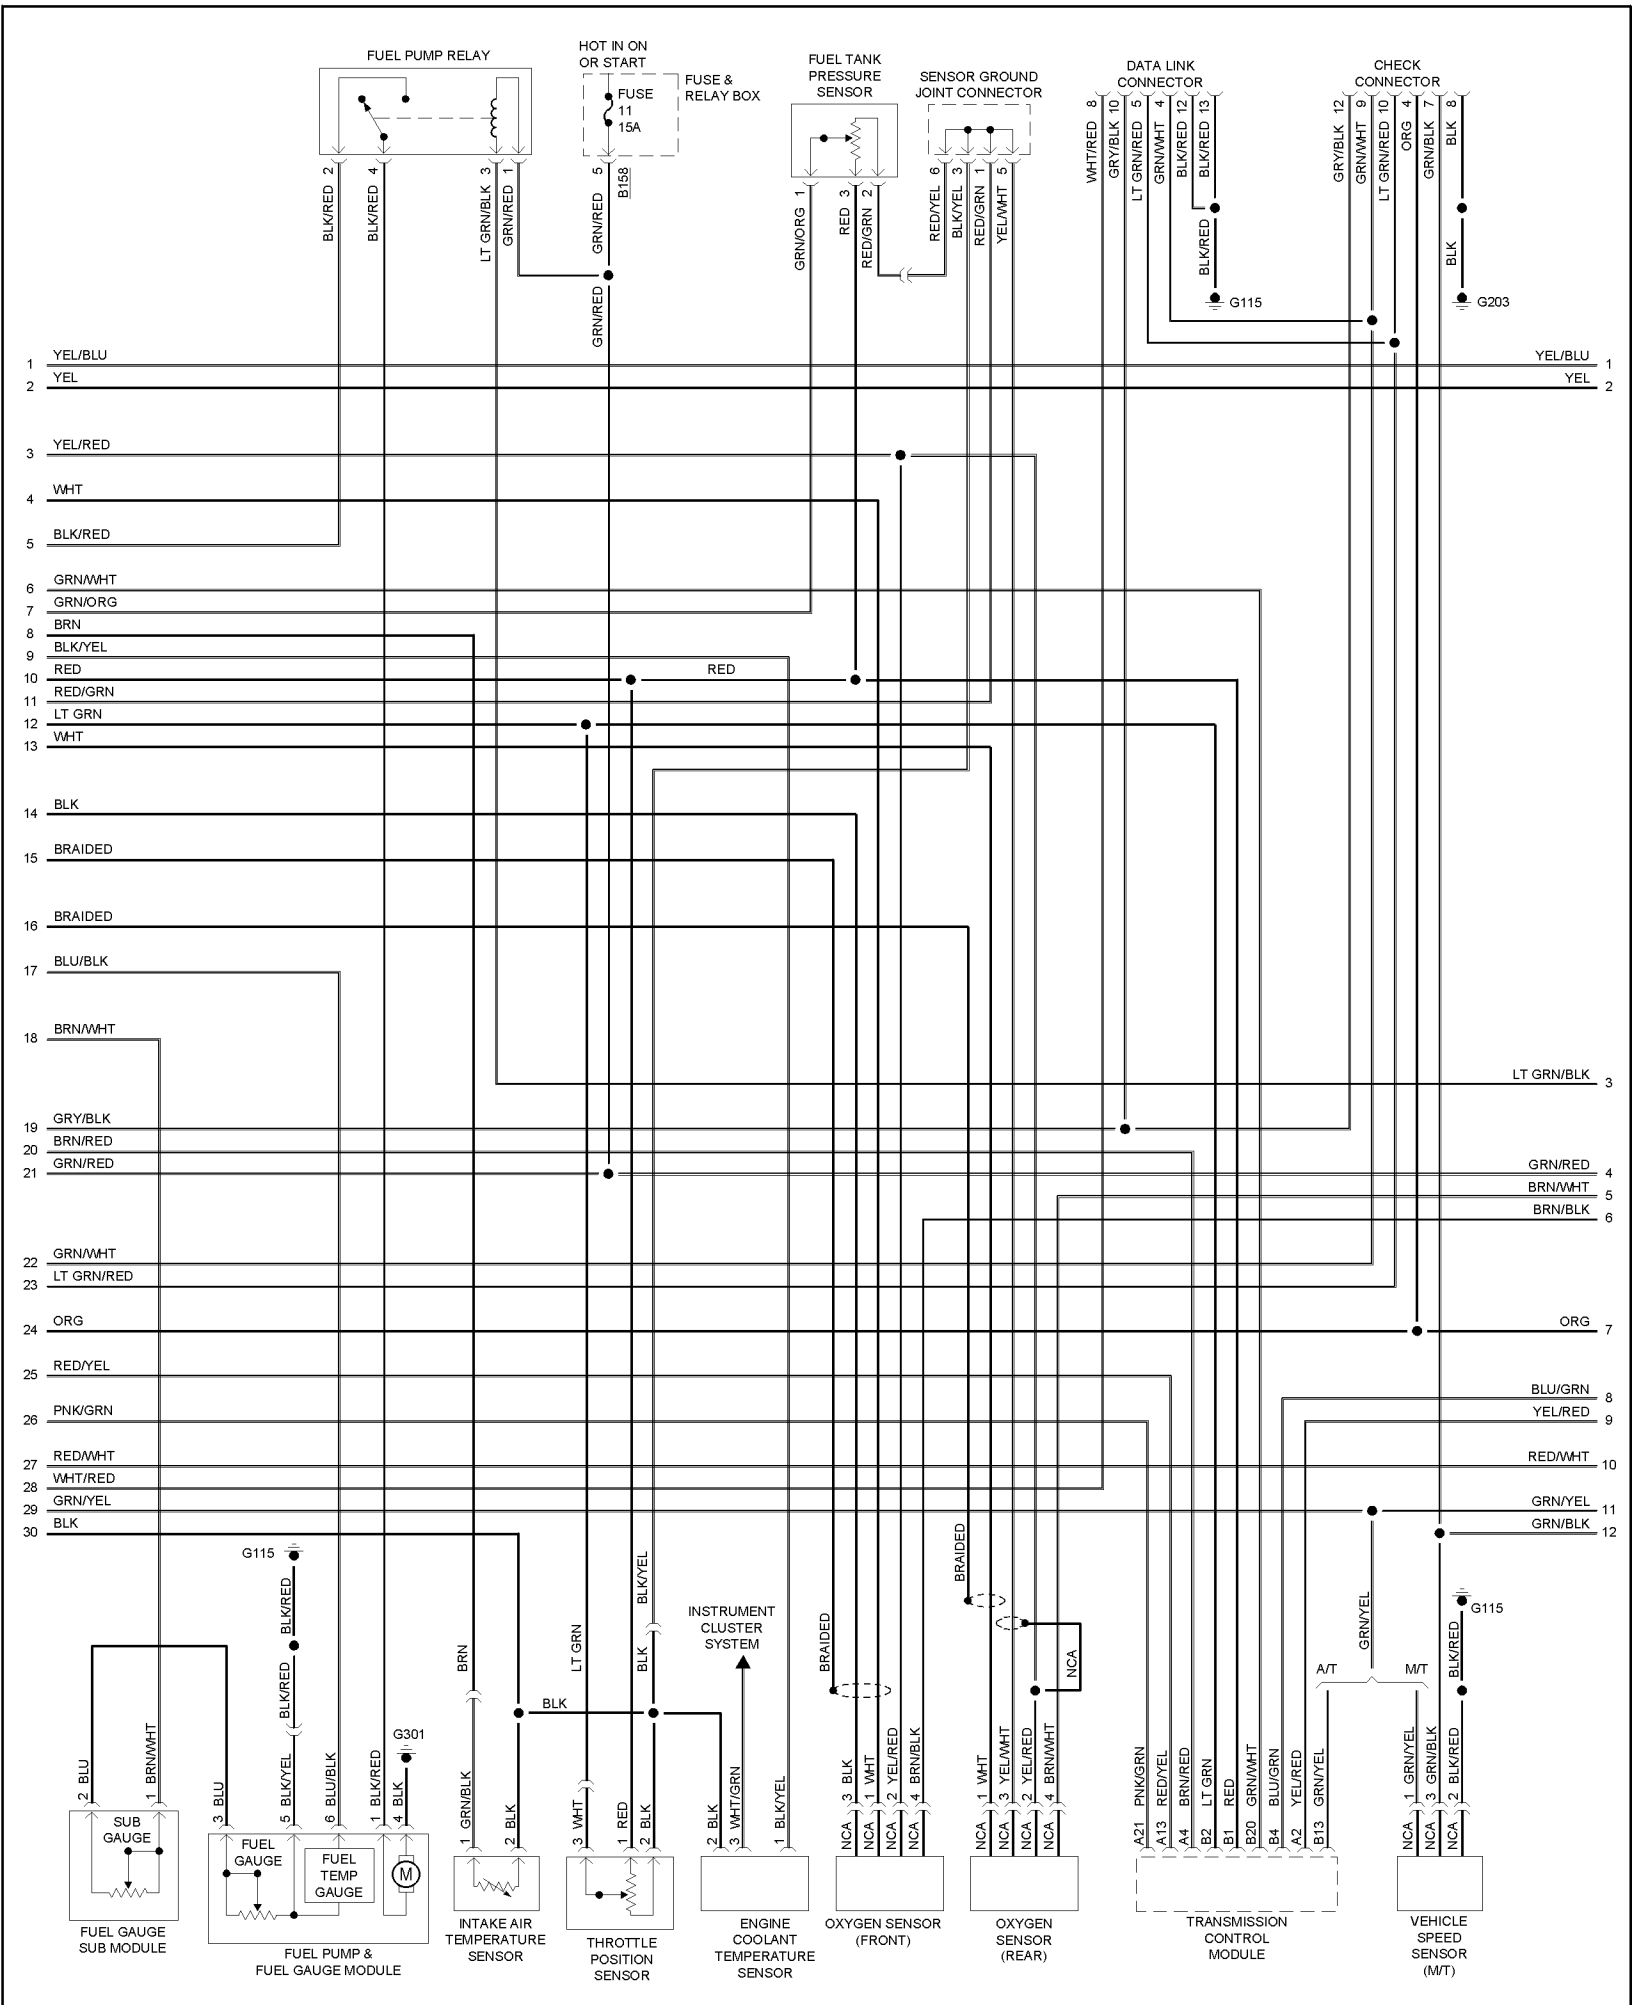

TACHO-METER
VEHICLE SPEED SENSOR 2
MALFUNCTION INDICATOR LAMP
INSTRUMENT CLUSTER
A12 I17 B15 B13 8 I18 A2 I17
RED BLK RED/BLK GRN/BLK RED/WHT
HOT AT ALL TIMES
IGNITION SWITCH
OFF START ACC ON
4
BLU/RED
BLU/RED
BLU/RED
BLU/YEL
INHIBITOR SWITCH
11
P R N D 1 2 3
12
RED/YEL
1 LT GRN/BLK
2 RED/BLK
3 GRN/WHT
4 ORG
5 LT GRN/WHT
6 YEL/RED
7 BLK
8 WHT
9 YEL/GRN
10 NCA
11 BLK
12 BRN
13 GRN/ORG
14 LT GRN
15 BLK/BLU
16 PNK/BLU
17 BLK/RED
18 BLK/YEL
19 RED/WHT
20 RED
21 YEL
22 YEL/GRN
23 YEL/GRN
24 LT GRN/RED
25 LT GRN/YEL
BLU/YEL 78
RED/YEL 81
GRN/BLK 57
GRN/RED 61
FAN RELAYS
BLU 85
A/C RELAY
NCA 52
EVAPORATION THERMO-SWITCH
RED/GRN 80
RED/BLU 77
RED/BLU
A/C DIODES
RED/BLU 88
G115
BLK
BLK 69
A/T CONTROL MODULE
BLK/WHT 49
ORG 75
BLK/YEL 72
BLK/YEL 71
YEL 79
DATA LINK CONNECTOR
2 NCA
3 GRN/WHT
5 LT GRN/RED
9 YEL/RED
BLK/YEL
LT GRN/BLK 84
WHT/BLU 59
LT GRN/WHT 86
OBD-II SERVICE CONNECTOR
1 YEL/GRN
4 GRN/WHT
5 LT GRN/RED
10 NCA
12 BLK/RED
13 BLK/RED
G115
BLK/WHT
BLK/GRN 70
BLK/GRN 95
BLK/GRN 96
NCA 54
BLK/ORG 56
TEST MODE CONNECTOR
ORG
BLK/WHT
TEST MODE CONNECTOR
BLK/RED
BLK/WHT
BLK
BLK/BLU
LT GRN
WHT
BRN
RED
GRN
GRN 60
YEL/GRN 58
ENGINE CONTROL MODULE
26 NCA
27 YEL/RED
28 NCA
29 NCA
3 NCA 1 NCA 2 NCA 4 BLK/ORG
SHIELD JOINT CONNECTOR
1 WHT 2 YEL/RED 3 BLK
IDLE AIR CONTROL SOLENOID VALVE
1 YEL/RED 2 WHT/BLU
PURGE CONTROL SOLENOID VALVE
1 YEL/GRN 2 BLK/BLU 3 BLK/RED 4 PNK/BLU
MASS AIR FLOW SENSOR
1 BLK/BLU 2 GRN/ORG 3 BRN
BOOST SENSOR
2 WHT 3 RED 1 BLK
THROTTLE POSITION SENSOR
1 BLK/YEL 2 RED/GRN
ENGINE COOLANT TEMPERATURE SENSOR
1 YEL/RED 2 GRN/BLK
EGR SOLENOID
1 YEL/GRN 2 YEL/RED
PRESSURE SOURCES SWITCHING SOLENOID
109608


HOT AT ALL TIMES
SBF-2
30A
MAIN FUSE BOX
F37
MAIN RELAY
FUEL PUMP RELAY
FUEL PUMP
HOT IN RUN OR START
FUSE 16 15A
HOT IN RUN OR START
FUSE 15 10A
FUSE & RELAY BOX
F40
I5
B52
CHECK CONNECTOR
G201
G102
G133
ENGINE CONTROL MODULE
TRANSMISSION CONTROLS SYSTEM
A/C SYSTEM
IGNITION COIL
IGNITOR
OXYGEN SENSOR (FRONT)
OXYGEN SENSOR (REAR)
CRANKSHAFT POSITION SENSOR
CAMSHAFT POSITION SENSOR
KNOCK SENSOR
FUEL INJECTORS
NCA
127515

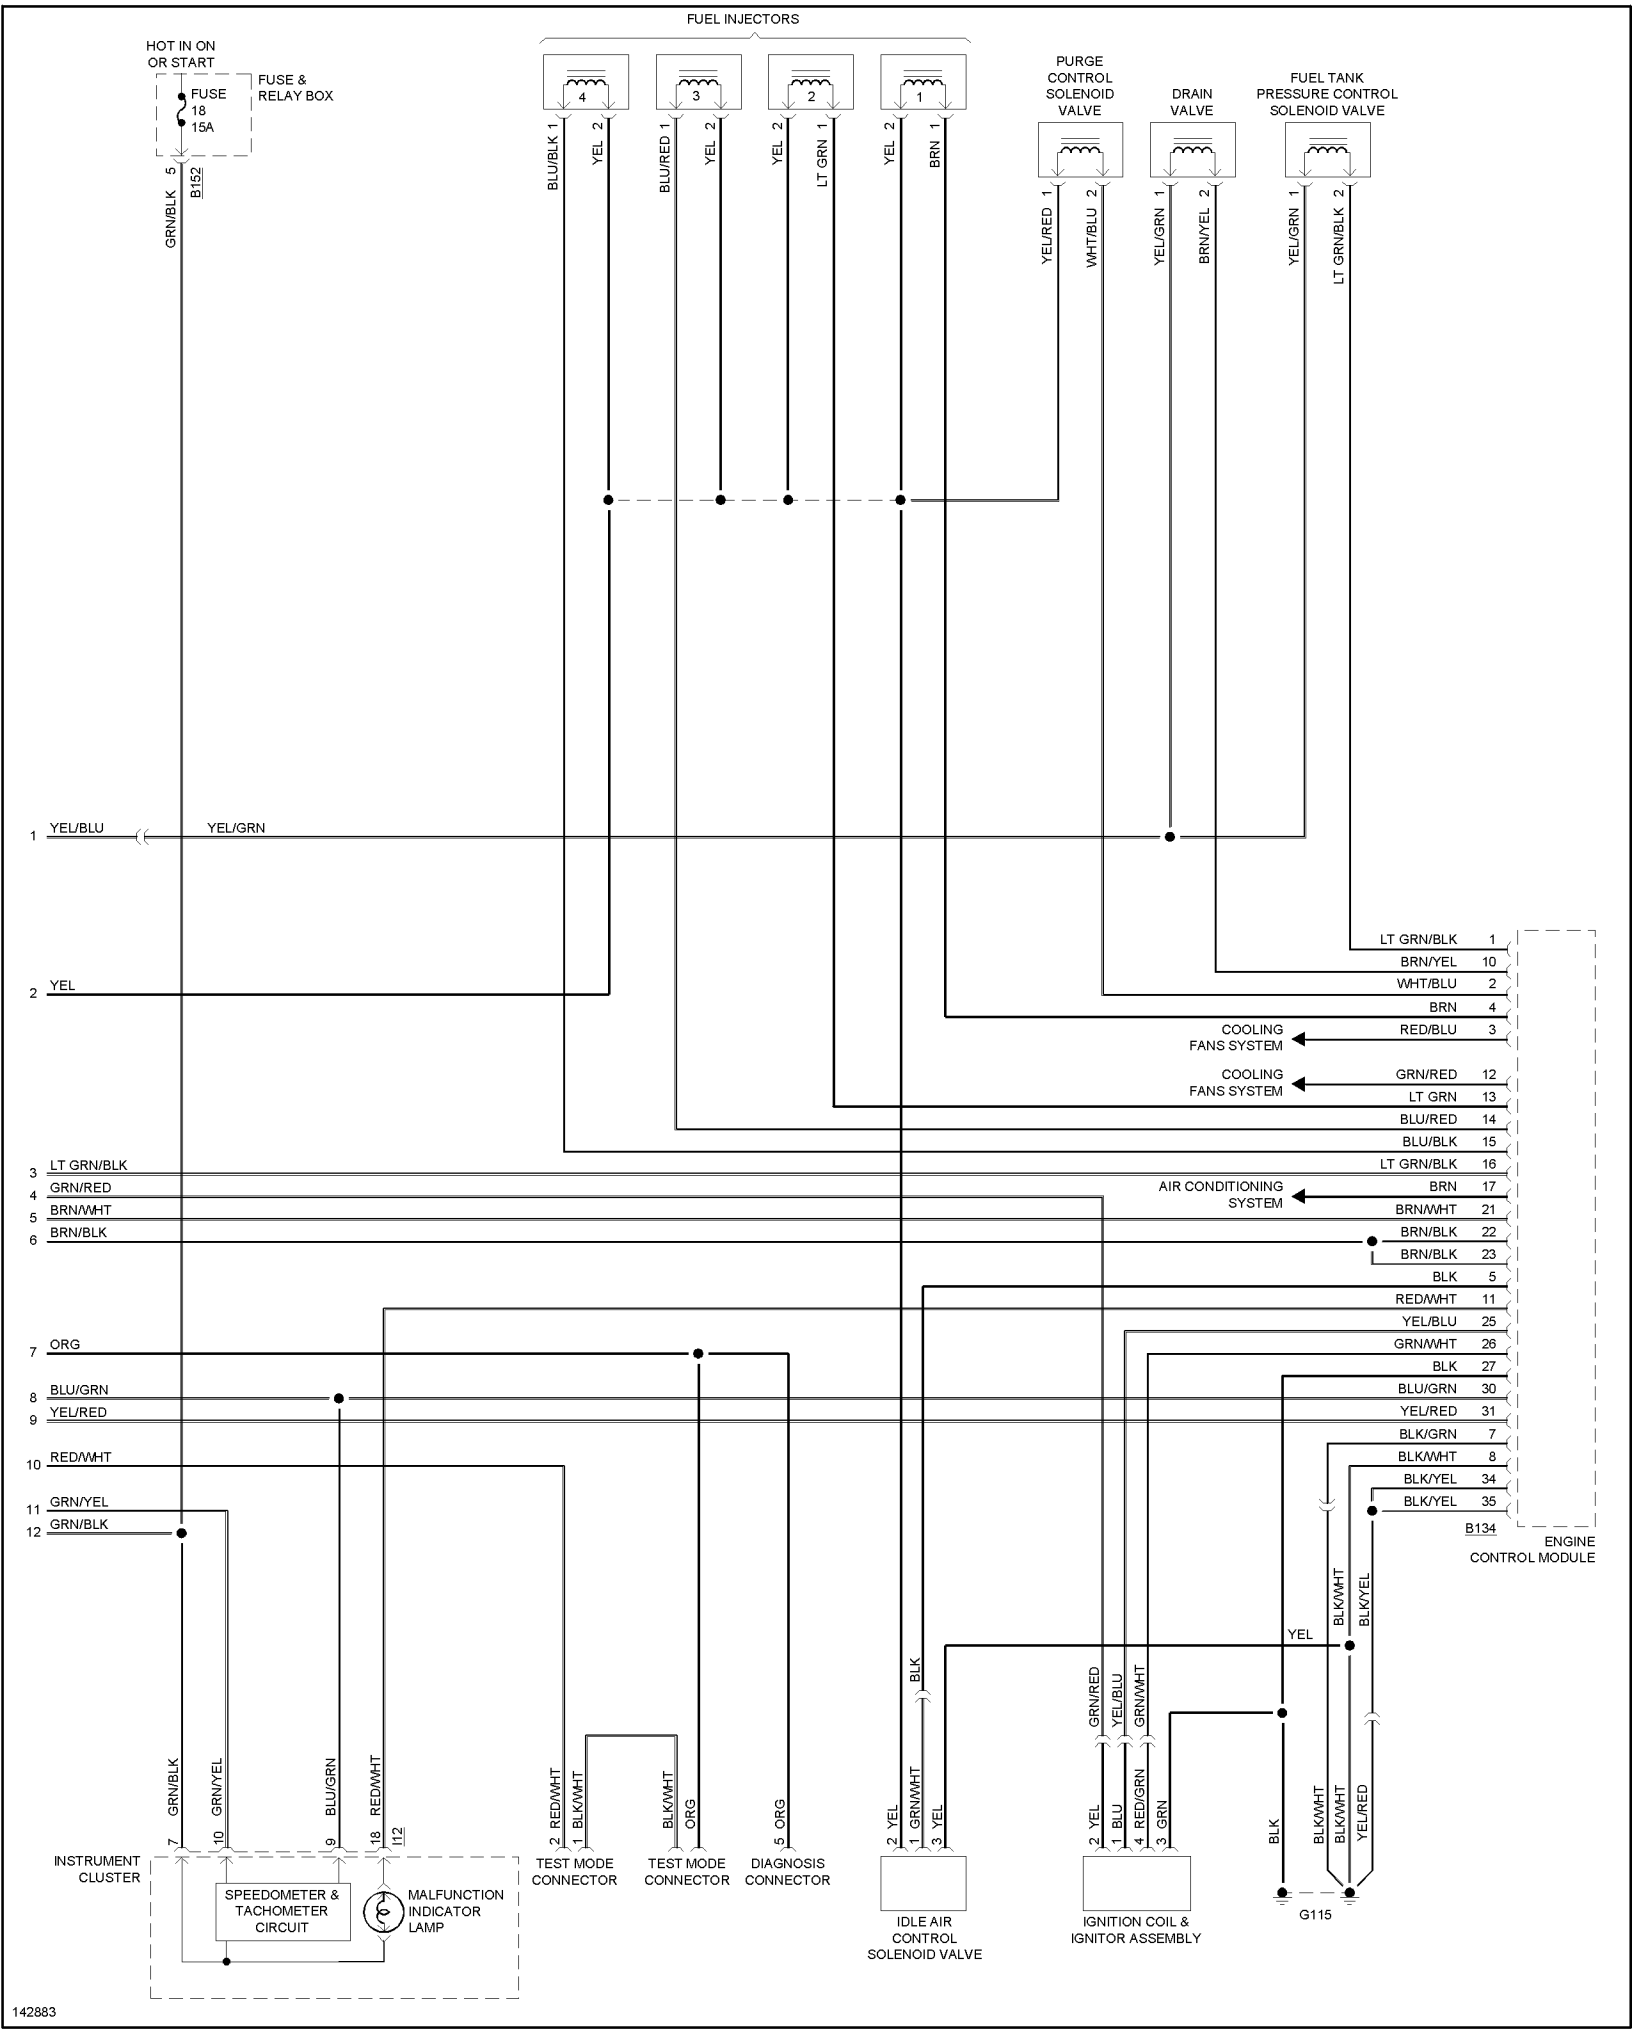

TACHO-METER
VEHICLE SPEED SENSOR 2
MALFUNCTION INDICATOR LAMP
INSTRUMENT CLUSTER
HOT AT ALL TIMES
IGNITION SWITCH
OFF
START
ACC
ON
NEUTRAL POSITION SWITCH (M/T)
A/T
M/T
INHIBITOR SWITCH
P
R
N
D
STARTER INTERLOCK RELAY
G201
G133
A/C SYSTEM
COOLING FAN SYSTEM
TRANSMISSION CONTROL SYSTEM
DATA LINK CONNECTOR
OBD-II SERVICE CONNECTOR
TEST MODE CONNECTOR
TEST MODE CONNECTOR
ENGINE CONTROL MODULE
SHIELD JOINT CONNECTOR
IDLE AIR CONTROL SOLENOID VALVE
PURGE CONTROL SOLENOID VALVE
MASS AIR FLOW SENSOR
BOOST SENSOR
THROTTLE POSITION SENSOR
ENGINE COOLANT TEMPERATURE SENSOR
EGR SOLENOID
PRESSURE SOURCES SWITCHING SOLENOID
127516

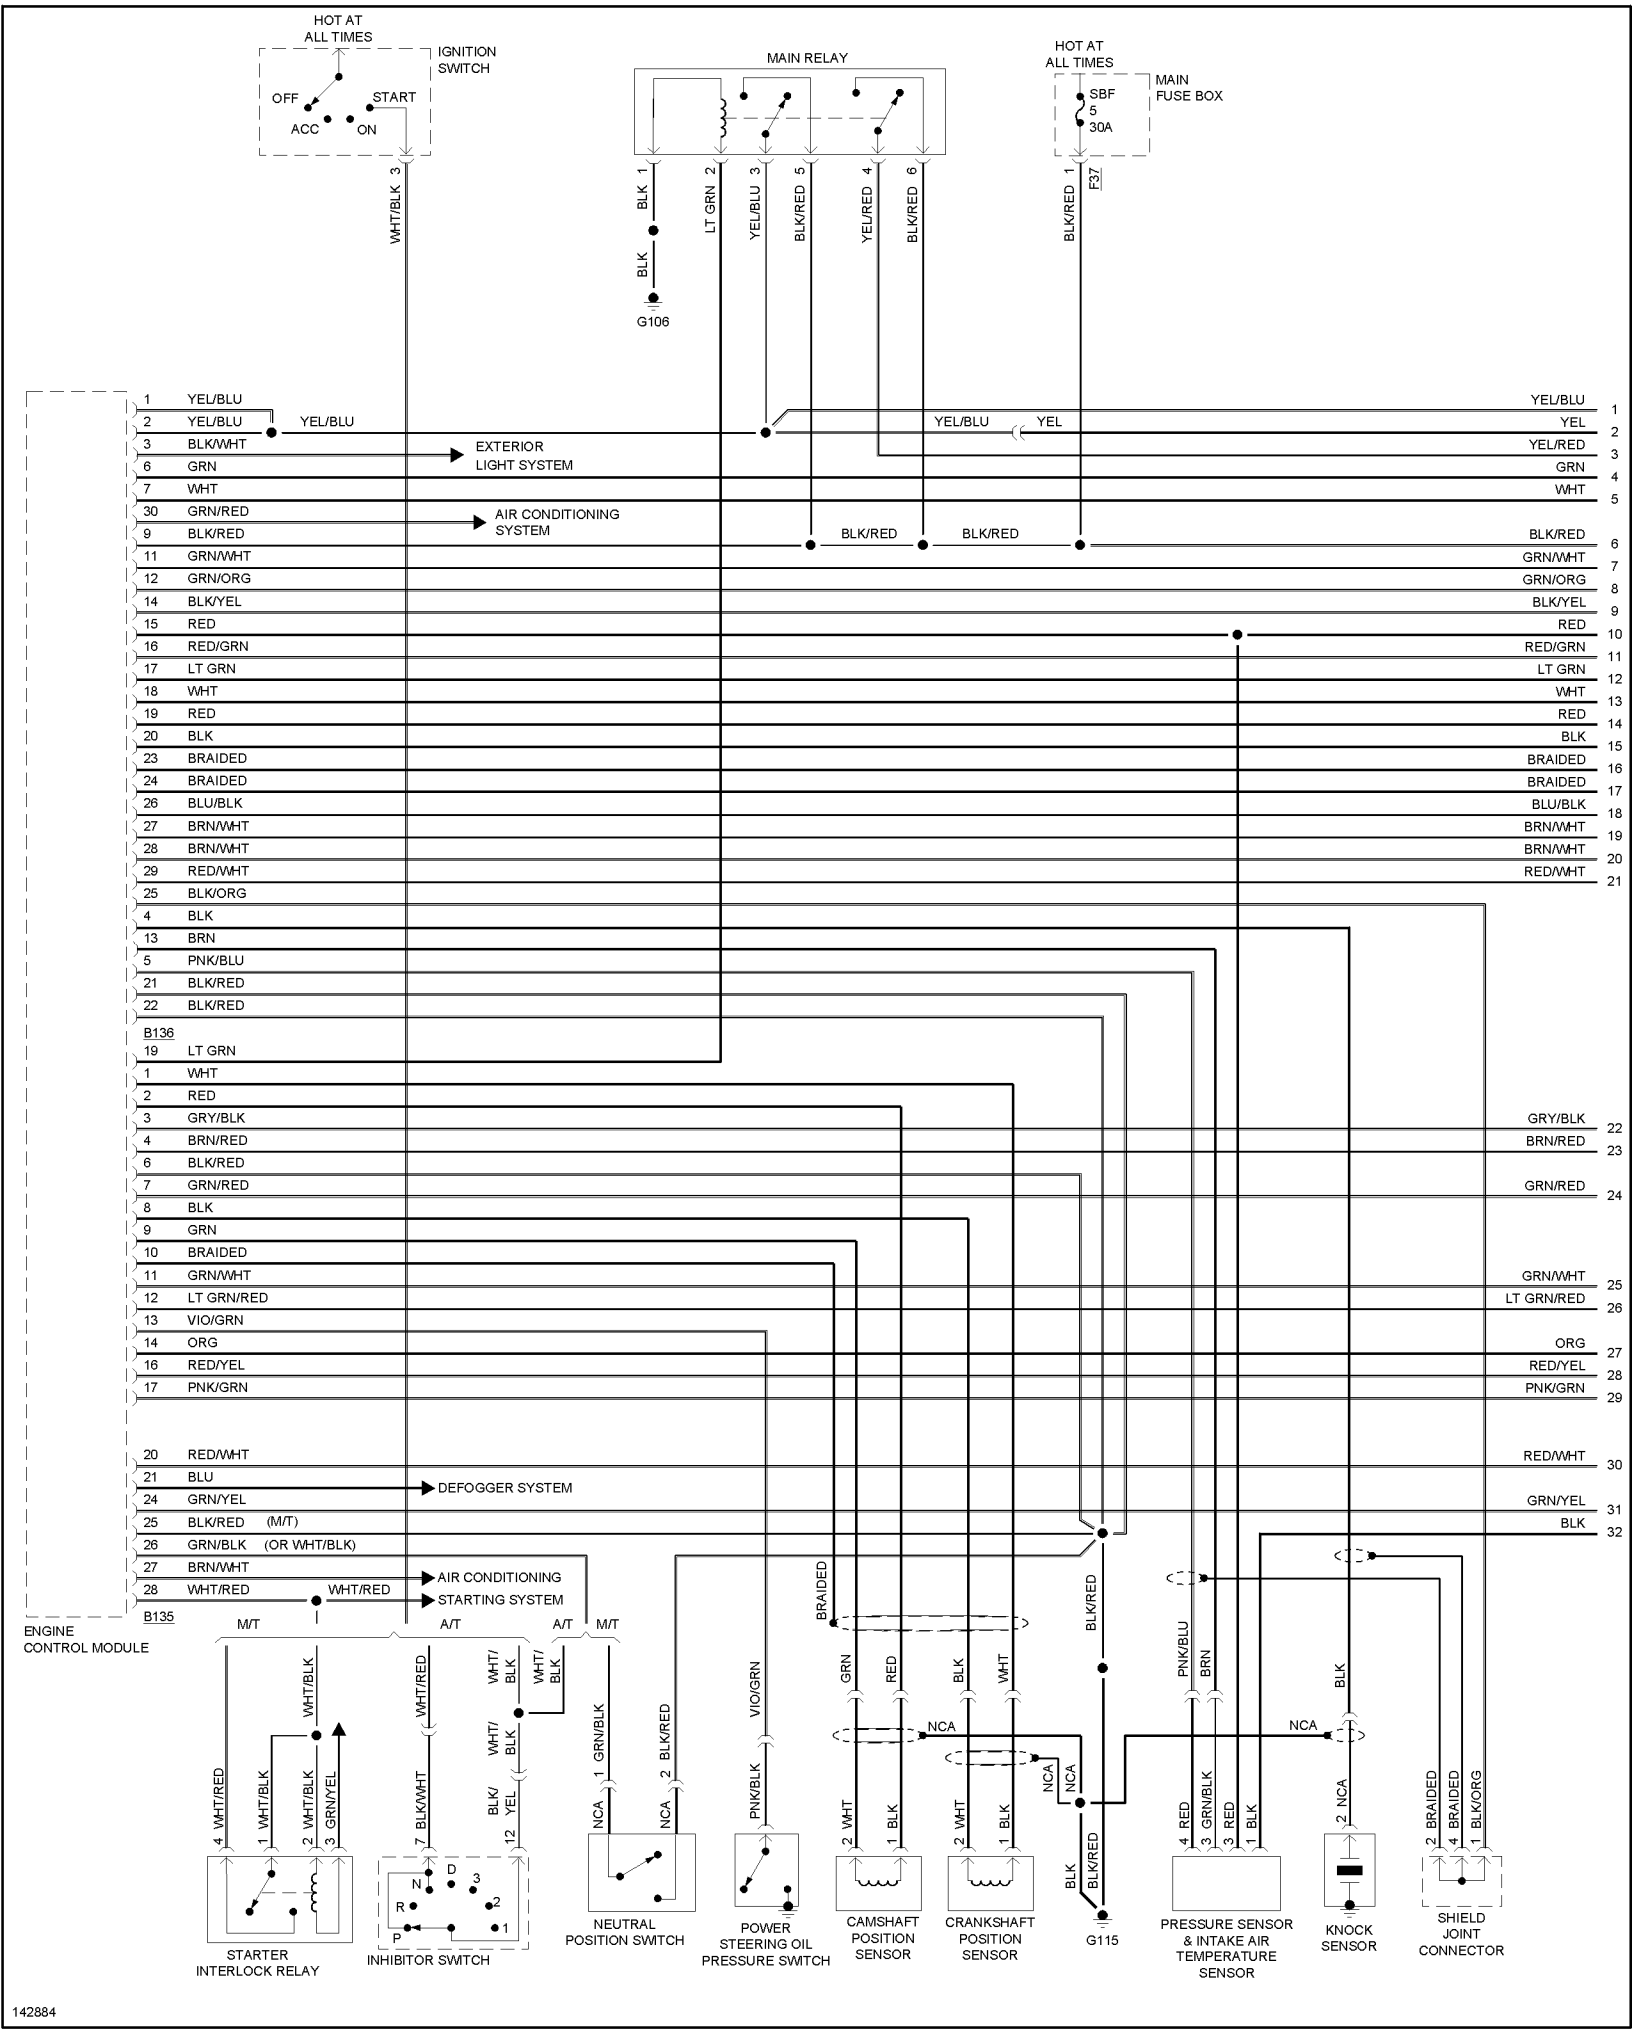

HOT AT ALL TIMES
IGNITION SWITCH
OFF
START
ACC
ON
MAIN RELAY
HOT AT ALL TIMES
SBF 5 30A
MAIN FUSE BOX
F37
G106
G115
ENGINE CONTROL MODULE
B135
B136
AIR CONDITIONING
STARTING SYSTEM
M/T
A/T
STARTER INTERLOCK RELAY
INHIBITOR SWITCH
NEUTRAL POSITION SWITCH
POWER STEERING OIL PRESSURE SWITCH
CAMSHAFT POSITION SENSOR
CRANKSHAFT POSITION SENSOR
INTAKE MANIFOLD PRESSURE SENSOR
KNOCK SENSOR
SHIELD JOINT CONNECTOR
NCA

142876

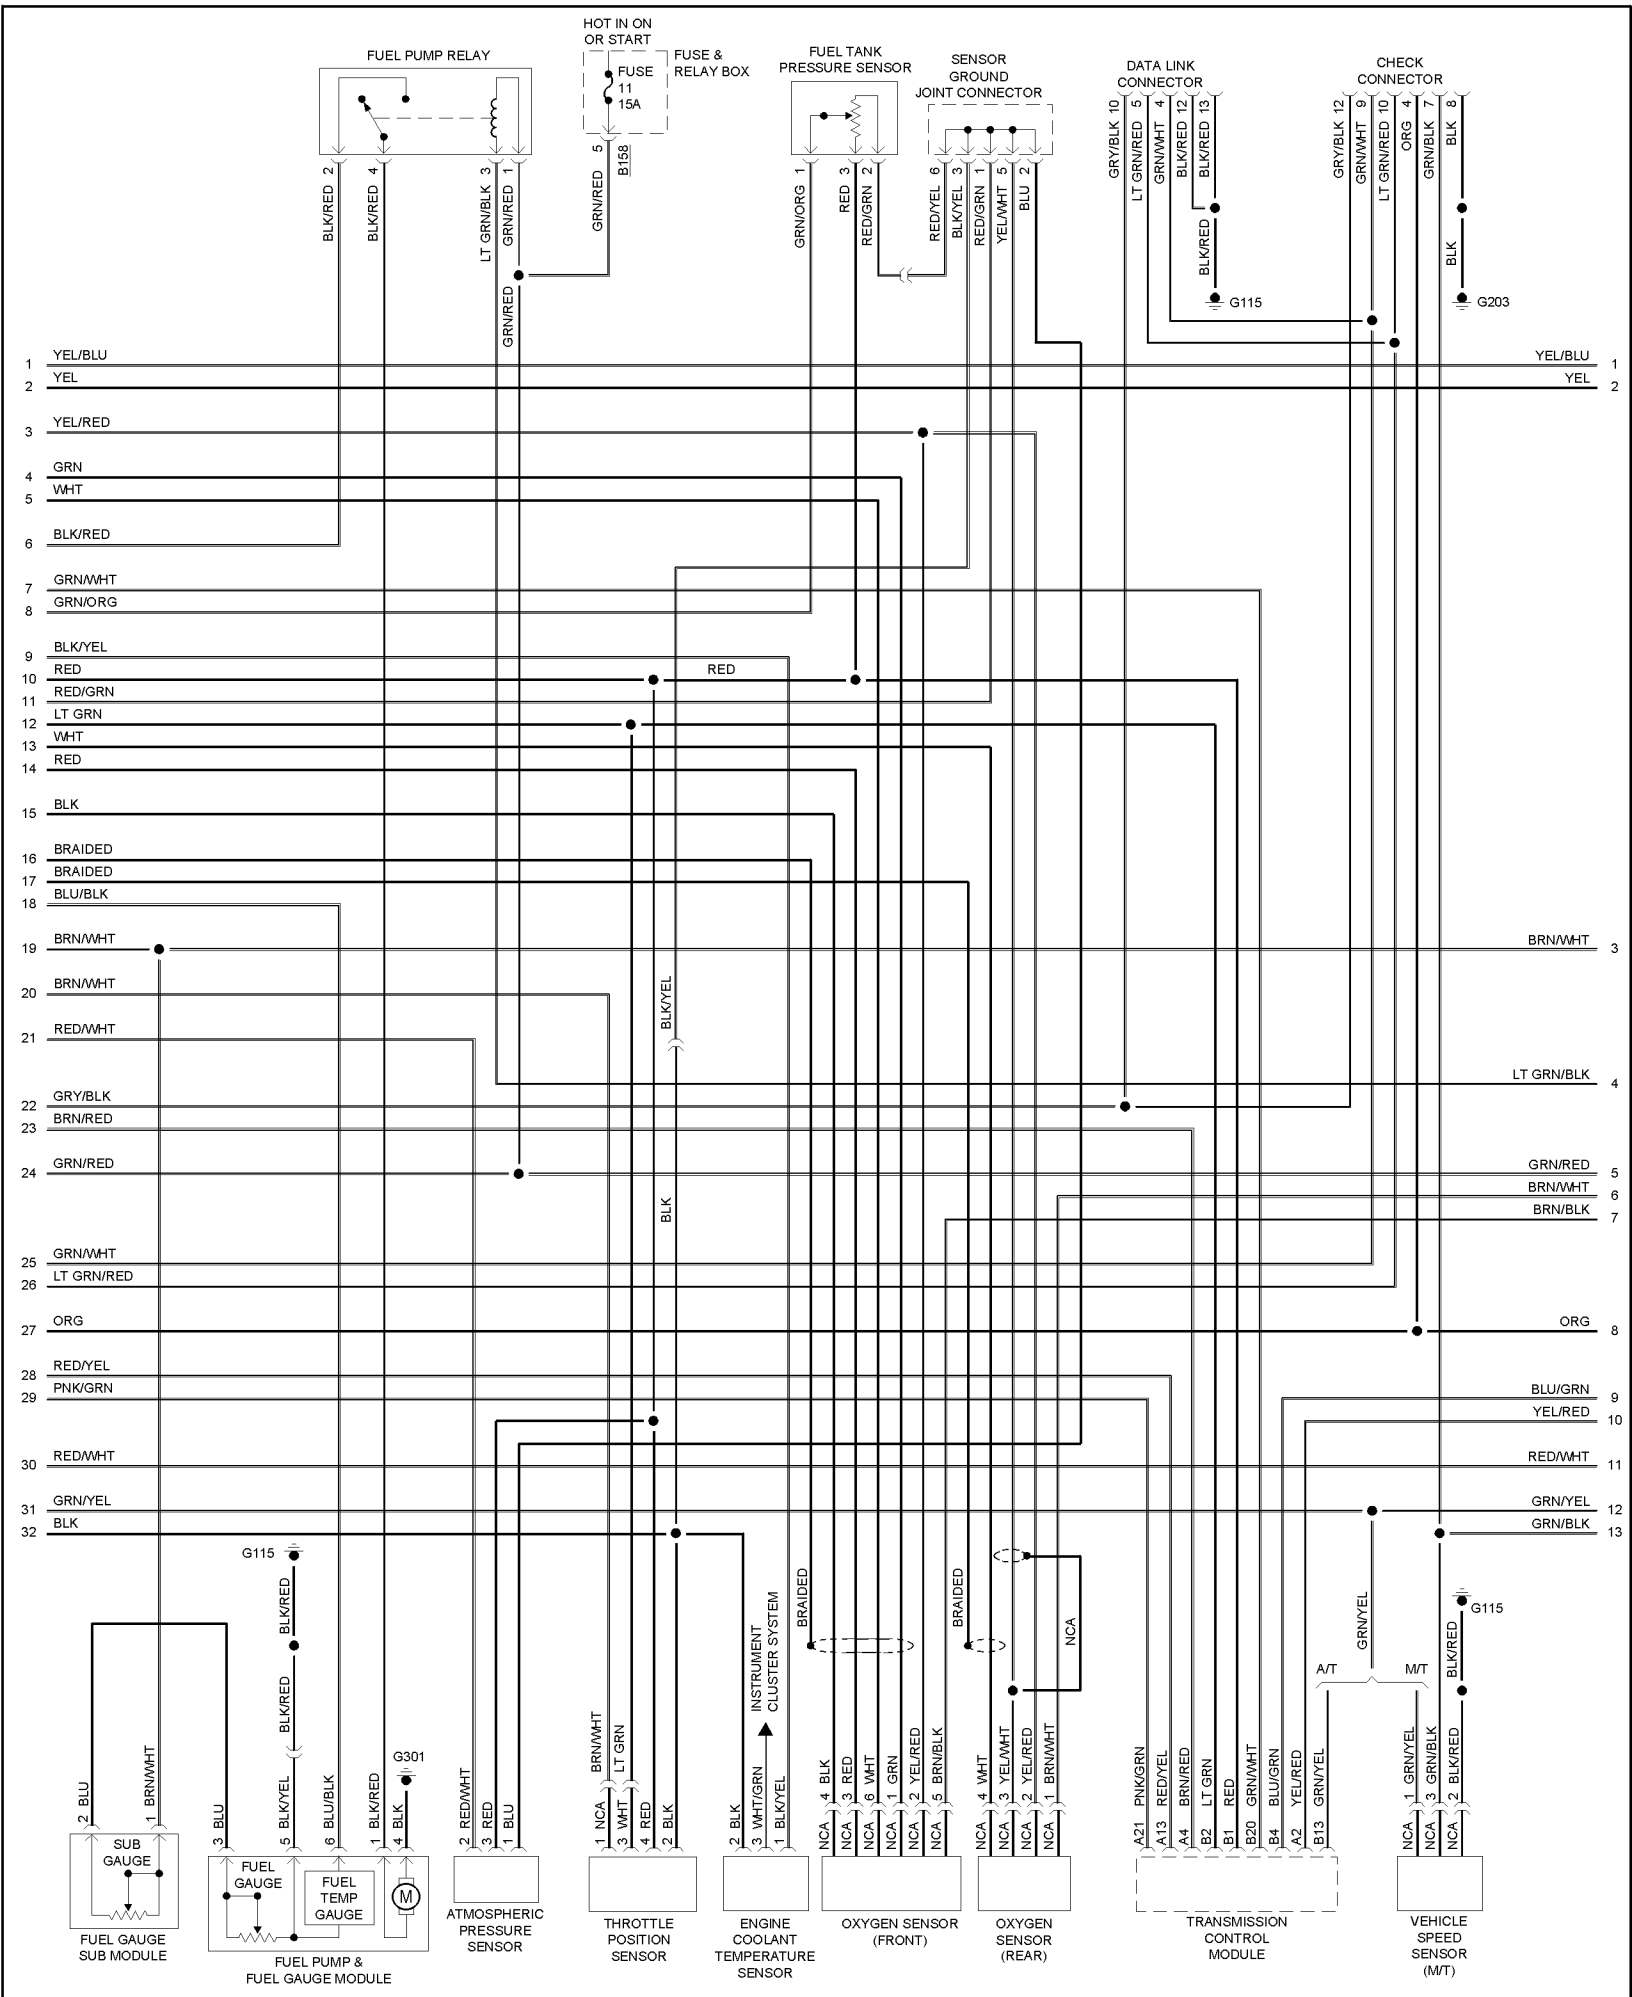

FUEL PUMP RELAY
HOT IN ON OR START
FUSE & RELAY BOX
FUSE 11 15A
B158
FUEL TANK PRESSURE SENSOR
SENSOR GROUND JOINT CONNECTOR
DATA LINK CONNECTOR
CHECK CONNECTOR
G115
G203
YEL/BLU
YEL
YEL/RED
WHT
BLK/RED
GRN/WHT
GRN/ORG
BRN
BLK/YEL
RED
RED/GRN
LT GRN
WHT
BLK
BRAIDED
BLU/BLK
BRN/WHT
GRY/BLK
BRN/RED
GRN/RED
LT GRN/BLK
BRN/BLK
LT GRN/RED
ORG
RED/YEL
PNK/GRN
BLU/GRN
YEL/RED
RED/WHT
WHT/RED
GRN/YEL
GRN/BLK
INSTRUMENT CLUSTER SYSTEM
A/T
M/T
SUB GAUGE
FUEL GAUGE
FUEL TEMP GAUGE
G301
FUEL GAUGE SUB MODULE
FUEL PUMP & FUEL GAUGE MODULE
INTAKE AIR TEMPERATURE SENSOR
THROTTLE POSITION SENSOR
ENGINE COOLANT TEMPERATURE SENSOR
OXYGEN SENSOR (FRONT)
OXYGEN SENSOR (REAR)
TRANSMISSION CONTROL MODULE
VEHICLE SPEED SENSOR (M/T)
NCA

142880

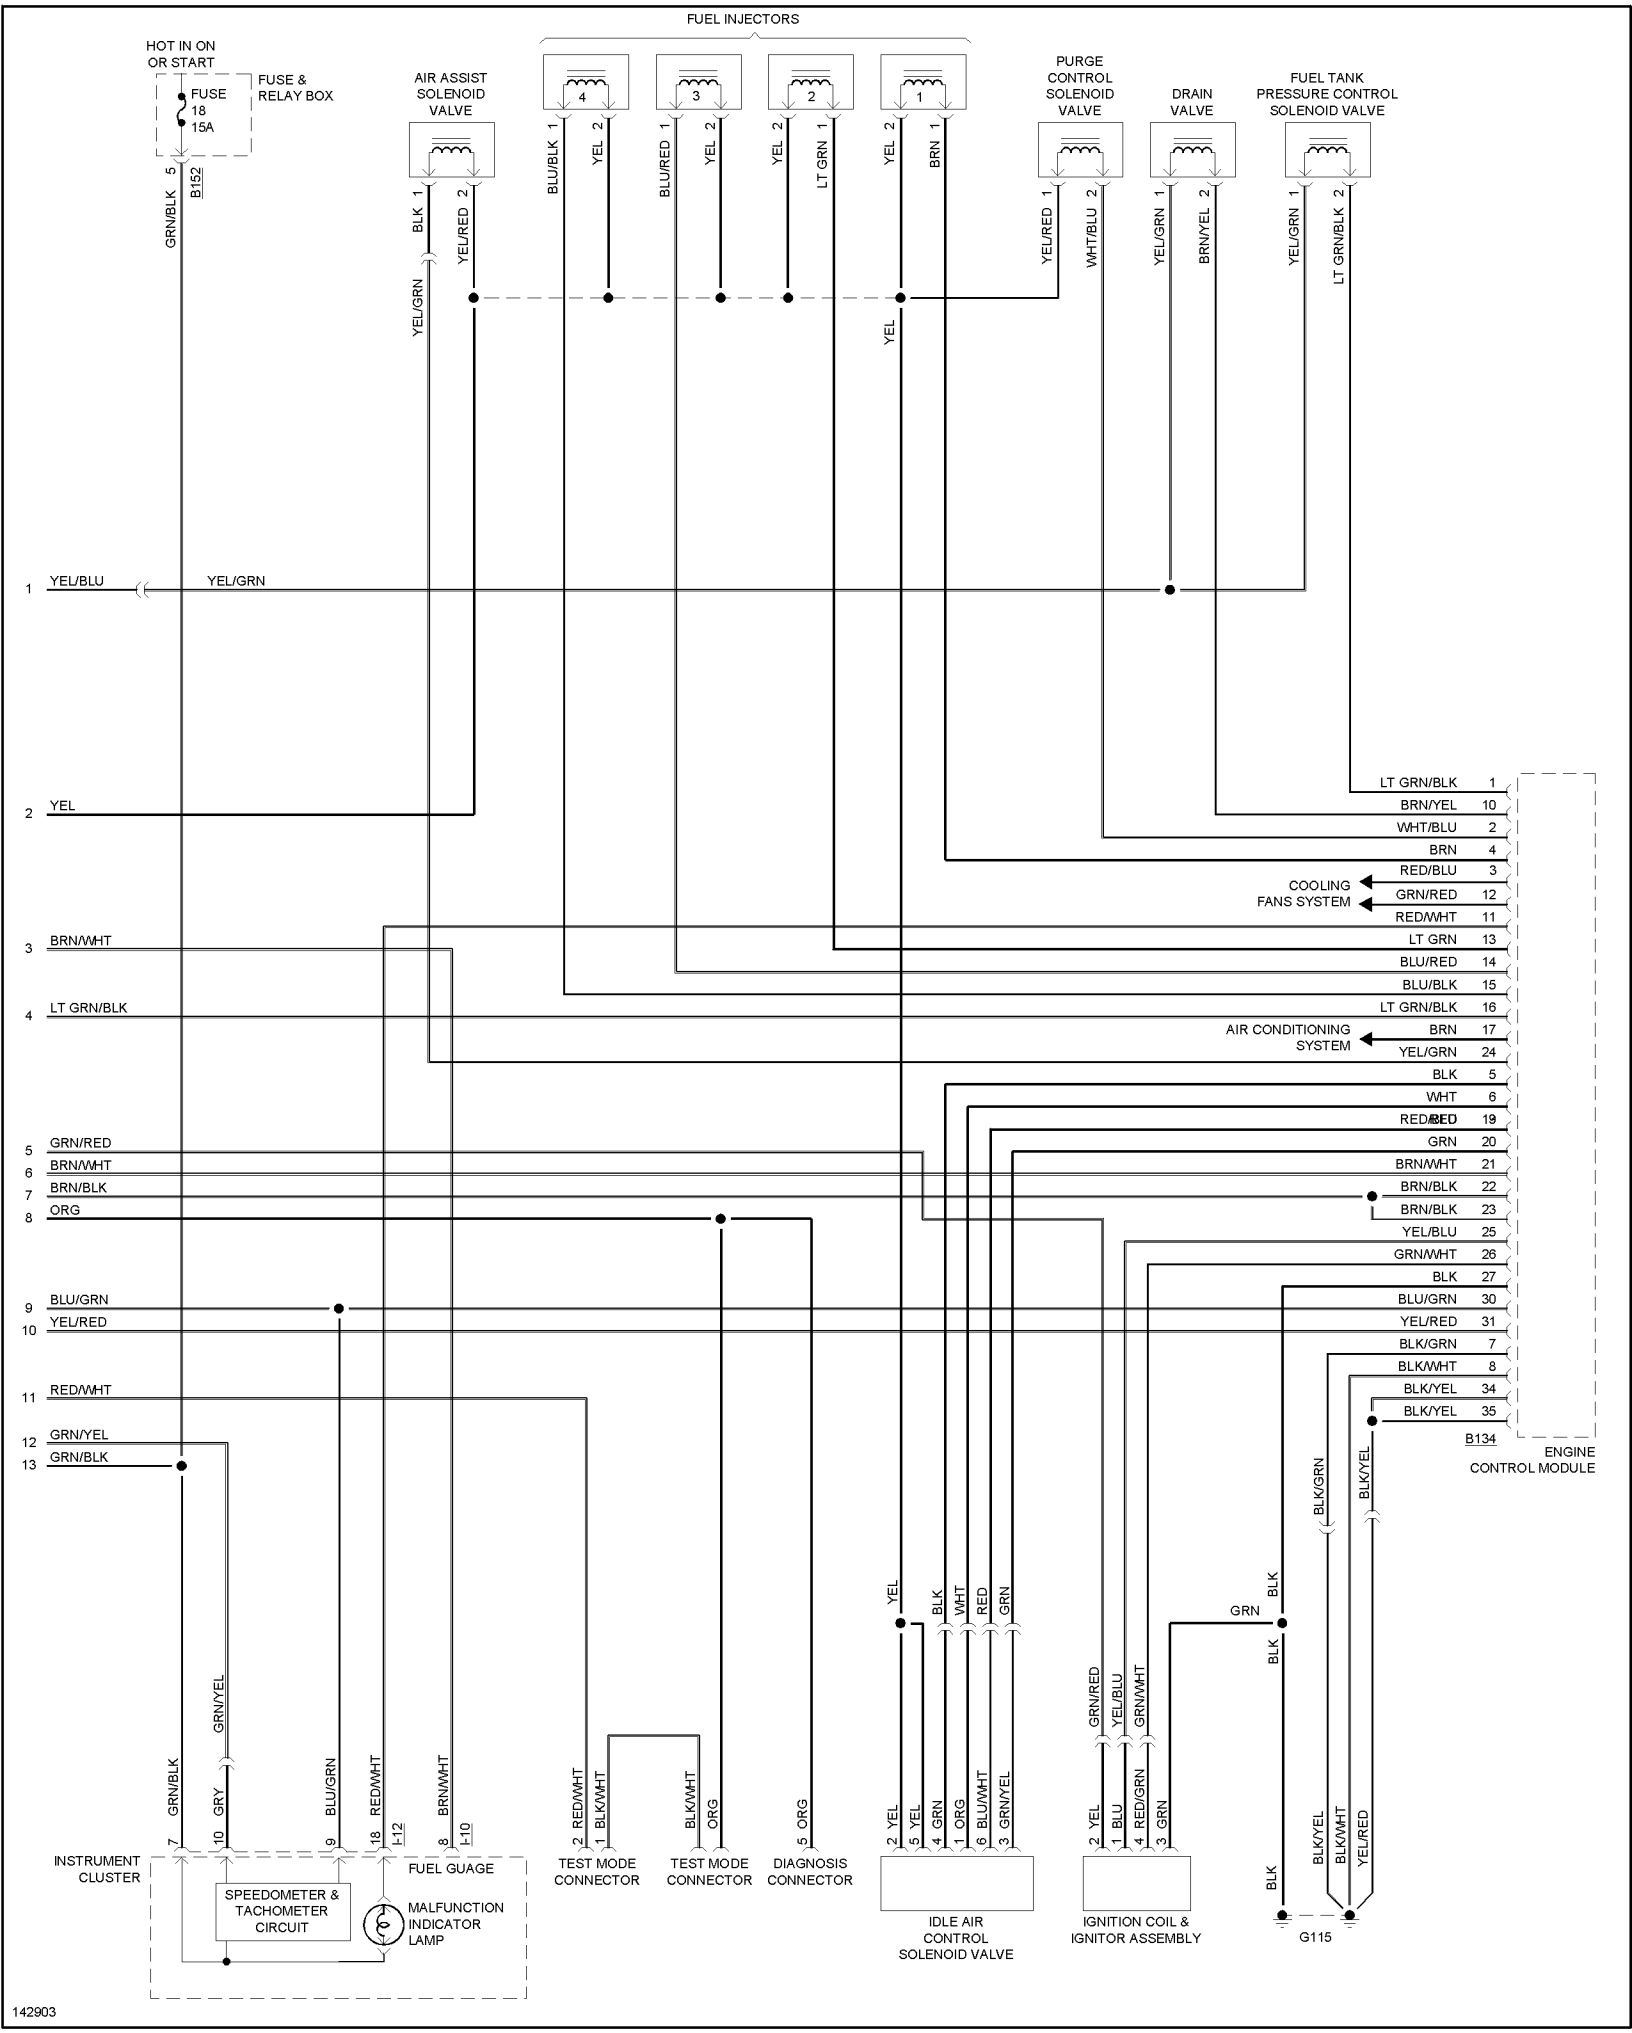

HOT IN ON OR START
FUSE & RELAY BOX
FUSE 18 15A
GRN/BLK 5 B152
FUEL INJECTORS
4
3
2
1
BLU/BLK 1
YEL 2
BLU/RED 1
YEL 2
YEL 2
LT GRN 1
YEL 2
BRN 1
PURGE CONTROL SOLENOID VALVE
YEL/RED 1
WHT/BLU 2
DRAIN VALVE
YEL/GRN 1
BRN/YEL 2
FUEL TANK PRESSURE CONTROL SOLENOID VALVE
YEL/GRN 1
LT GRN/BLK 2
1 YEL/BLU
YEL/GRN
2 YEL
3 LT GRN/BLK
4 GRN/RED
5 BRN/WHT
6 BRN/BLK
7 ORG
8 BLU/GRN
9 YEL/RED
10 RED/WHT
11 GRN/YEL
12 GRN/BLK
LT GRN/BLK 1
BRN/YEL 10
WHT/BLU 2
BRN 4
COOLING FANS SYSTEM
RED/BLU 3
COOLING FANS SYSTEM
GRN/RED 12
LT GRN 13
BLU/RED 14
BLU/BLK 15
LT GRN/BLK 16
AIR CONDITIONING SYSTEM
BRN 17
BRN/WHT 21
BRN/BLK 22
BRN/BLK 23
BLK 5
RED/WHT 11
YEL/BLU 25
GRN/WHT 26
BLK 27
BLU/GRN 30
YEL/RED 31
BLK/GRN 7
BLK/WHT 8
BLK/YEL 34
BLK/YEL 35
B134
ENGINE CONTROL MODULE
GRN/BLK 7
GRN/YEL 10
BLU/GRN 9
RED/WHT 18
I12
INSTRUMENT CLUSTER
SPEEDOMETER & TACHOMETER CIRCUIT
MALFUNCTION INDICATOR LAMP
RED/WHT 2
BLK/WHT 1
TEST MODE CONNECTOR
BLK/WHT
ORG
TEST MODE CONNECTOR
ORG 5
DIAGNOSIS CONNECTOR
BLK
YEL 2
GRN/WHT 1
YEL 3
IDLE AIR CONTROL SOLENOID VALVE
GRN/RED
YEL/BLU
GRN/WHT
YEL 2
BLU 1
RED/GRN 4
GRN 3
IGNITION COIL & IGNITOR ASSEMBLY
YEL
BLK
G115
BLK/WHT
BLK/YEL
BLK/WHT
BLK/WHT
YEL/RED
142883

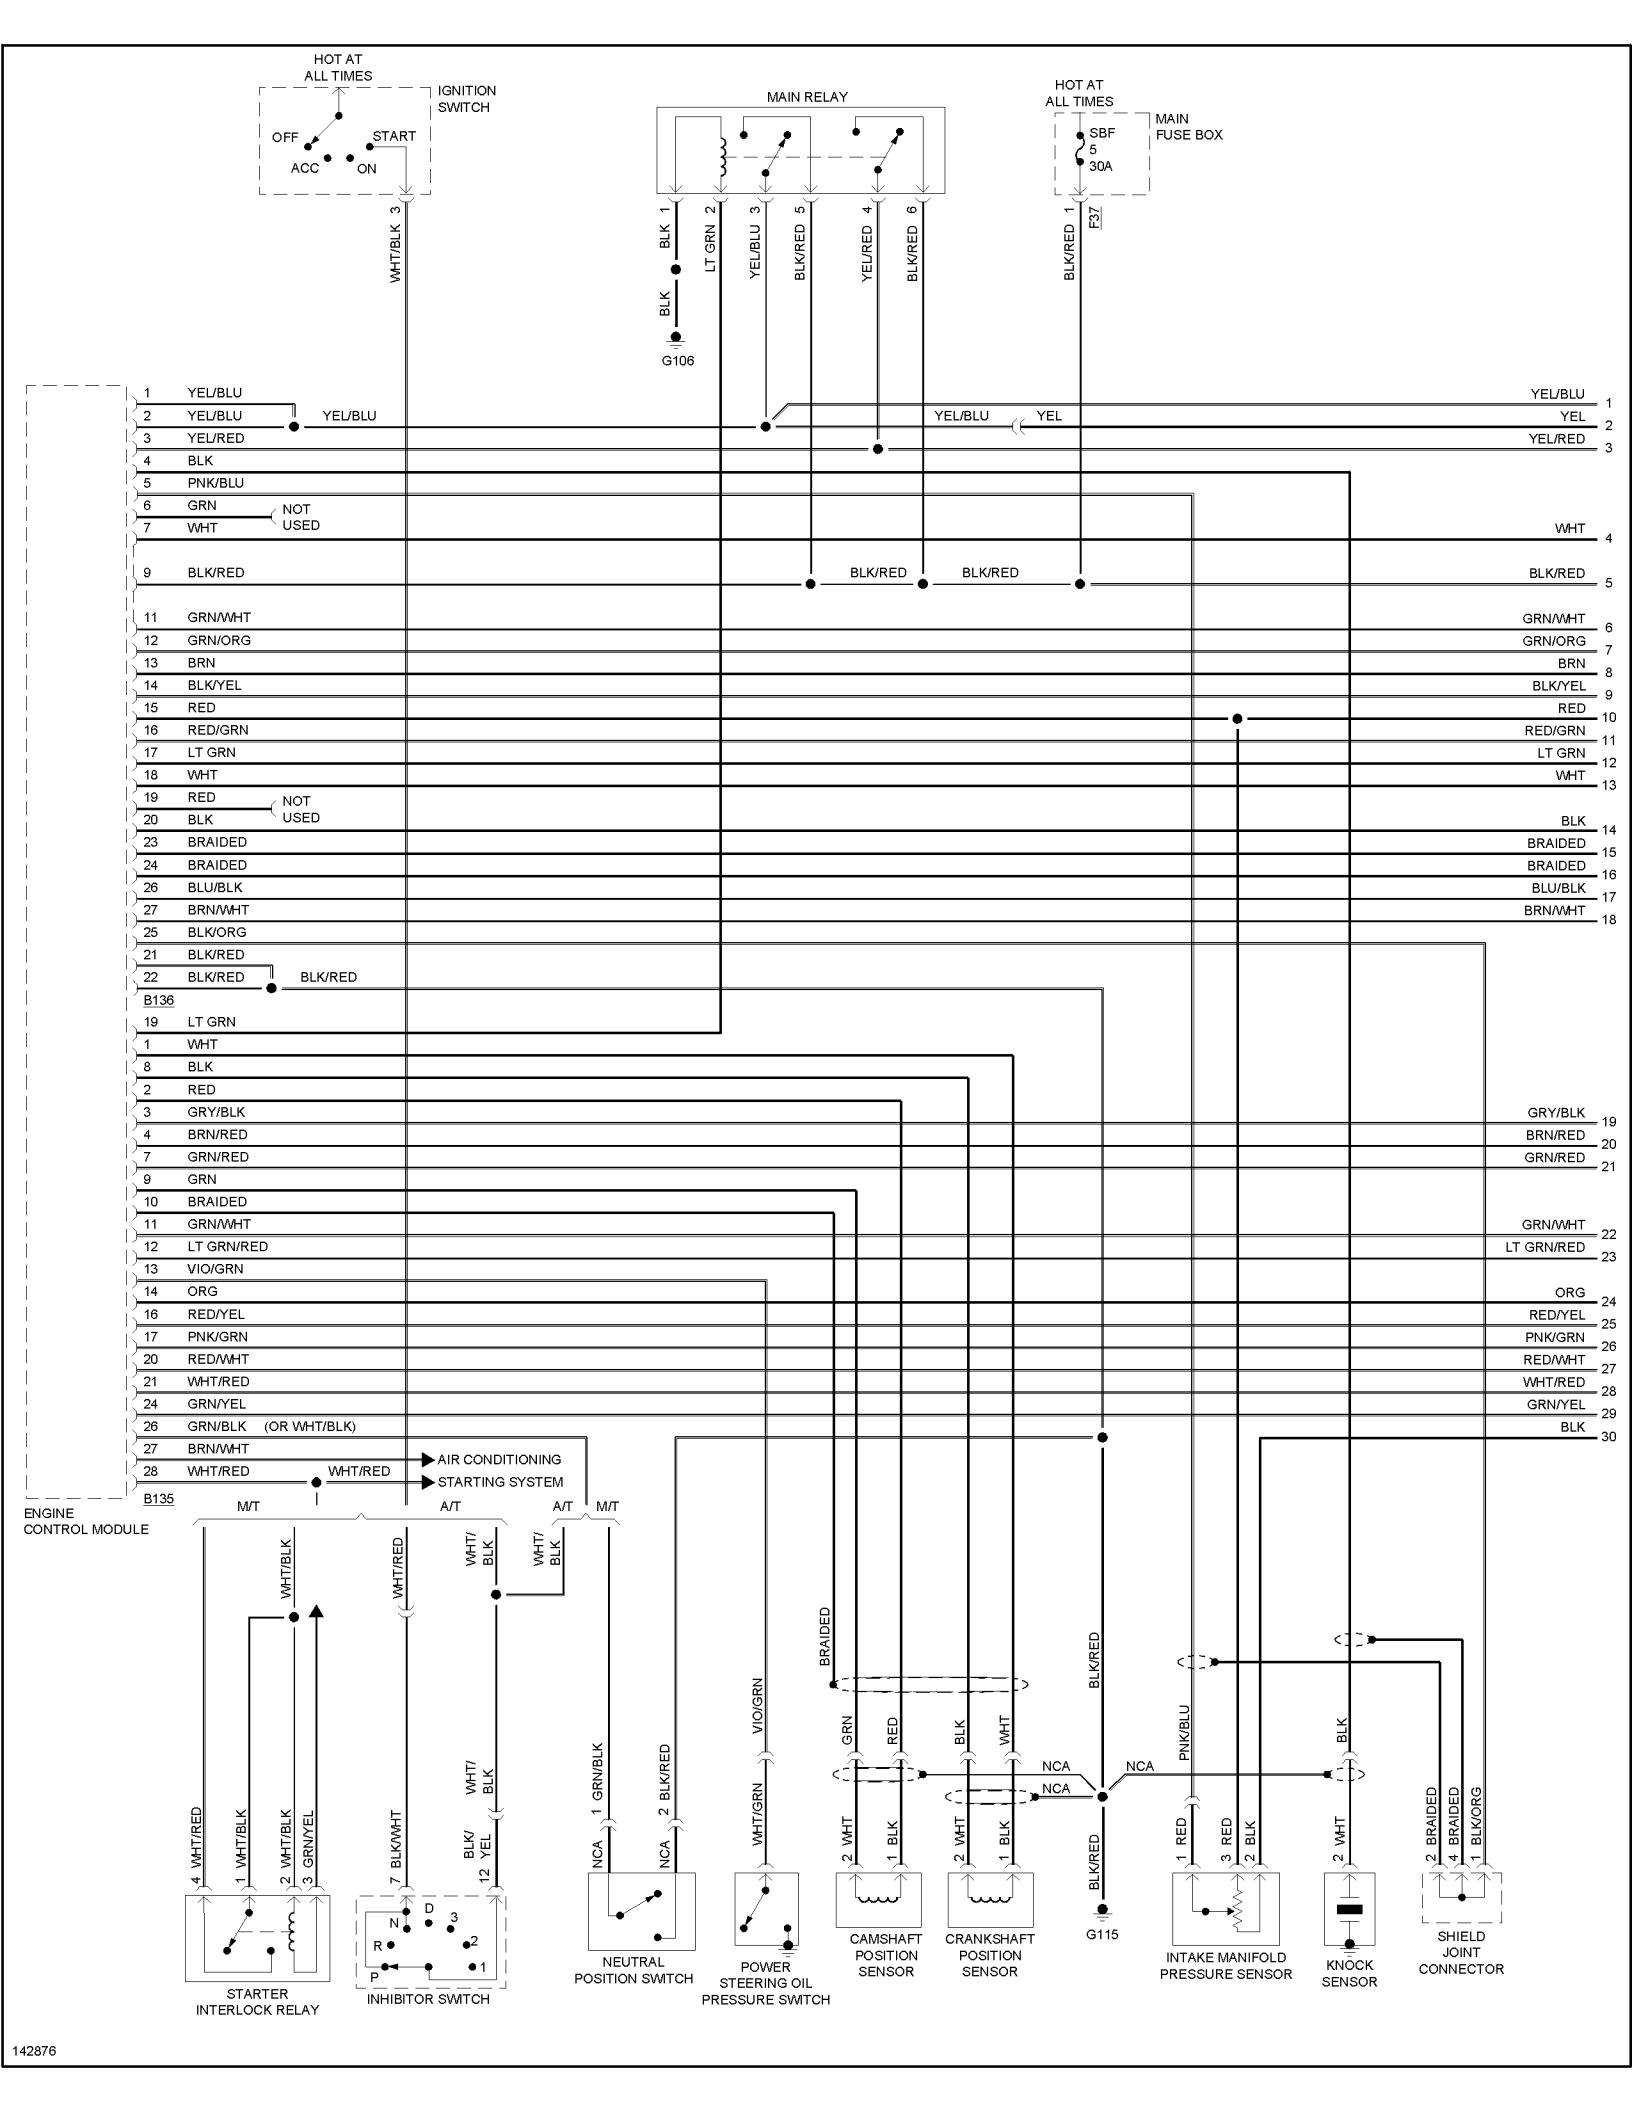

HOT AT ALL TIMES
IGNITION SWITCH
OFF
START
ACC
ON
MAIN RELAY
HOT AT ALL TIMES
SBF 5 30A
MAIN FUSE BOX
F37
G106
WHT/BLK 3
BLK 1
BLK
LT GRN 2
YEL/BLU 3
BLK/RED 5
YEL/RED 4
BLK/RED 6
BLK/RED 1
1 YEL/BLU
2 YEL/BLU
3 BLK/WHT
6 GRN
7 WHT
30 GRN/RED
9 BLK/RED
11 GRN/WHT
12 GRN/ORG
14 BLK/YEL
15 RED
16 RED/GRN
17 LT GRN
18 WHT
19 RED
20 BLK
23 BRAIDED
24 BRAIDED
26 BLU/BLK
27 BRN/WHT
28 BRN/WHT
29 RED/WHT
25 BLK/ORG
4 BLK
13 BRN
5 PNK/BLU
21 BLK/RED
22 BLK/RED
EXTERIOR LIGHT SYSTEM
AIR CONDITIONING SYSTEM
YEL/BLU
YEL/BLU
YEL
BLK/RED
BLK/RED
YEL/BLU 1
YEL 2
YEL/RED 3
GRN 4
WHT 5
BLK/RED 6
GRN/WHT 7
GRN/ORG 8
BLK/YEL 9
RED 10
RED/GRN 11
LT GRN 12
WHT 13
RED 14
BLK 15
BRAIDED 16
BRAIDED 17
BLU/BLK 18
BRN/WHT 19
BRN/WHT 20
RED/WHT 21
B136
19 LT GRN
1 WHT
2 RED
3 GRY/BLK
4 BRN/RED
6 BLK/RED
7 GRN/RED
8 BLK
9 GRN
10 BRAIDED
11 GRN/WHT
12 LT GRN/RED
13 VIO/GRN
14 ORG
16 RED/YEL
17 PNK/GRN
GRY/BLK 22
BRN/RED 23
GRN/RED 24
GRN/WHT 25
LT GRN/RED 26
ORG 27
RED/YEL 28
PNK/GRN 29
20 RED/WHT
21 BLU
24 GRN/YEL
25 BLK/RED (M/T)
26 GRN/BLK (OR WHT/BLK)
27 BRN/WHT
28 WHT/RED
WHT/RED
DEFOGGER SYSTEM
AIR CONDITIONING
STARTING SYSTEM
RED/WHT 30
GRN/YEL 31
BLK 32
B135
ENGINE CONTROL MODULE
M/T
A/T
A/T
M/T
WHT/BLK
WHT/RED
WHT/BLK
WHT/BLK
GRN/BLK
BLK/RED
VIO/GRN
BRAIDED
GRN
RED
BLK
WHT
BLK/RED
PNK/BLU
BRN
BLK
NCA
NCA
NCA
NCA
NCA
4 WHT/RED
1 WHT/BLK
2 WHT/BLK
3 GRN/YEL
7 BLK/WHT
12 BLK/YEL
1 GRN/BLK
2 BLK/RED
NCA
NCA
PNK/BLK
2 WHT
1 BLK
2 WHT
1 BLK
BLK
BLK/RED
4 RED
3 GRN/BLK
3 RED
1 BLK
2 NCA
2 BRAIDED
4 BRAIDED
1 BLK/ORG
STARTER INTERLOCK RELAY
INHIBITOR SWITCH
N
D
3
2
R
1
P
NEUTRAL POSITION SWITCH
POWER STEERING OIL PRESSURE SWITCH
CAMSHAFT POSITION SENSOR
CRANKSHAFT POSITION SENSOR
G115
PRESSURE SENSOR & INTAKE AIR TEMPERATURE SENSOR
KNOCK SENSOR
SHIELD JOINT CONNECTOR

142884

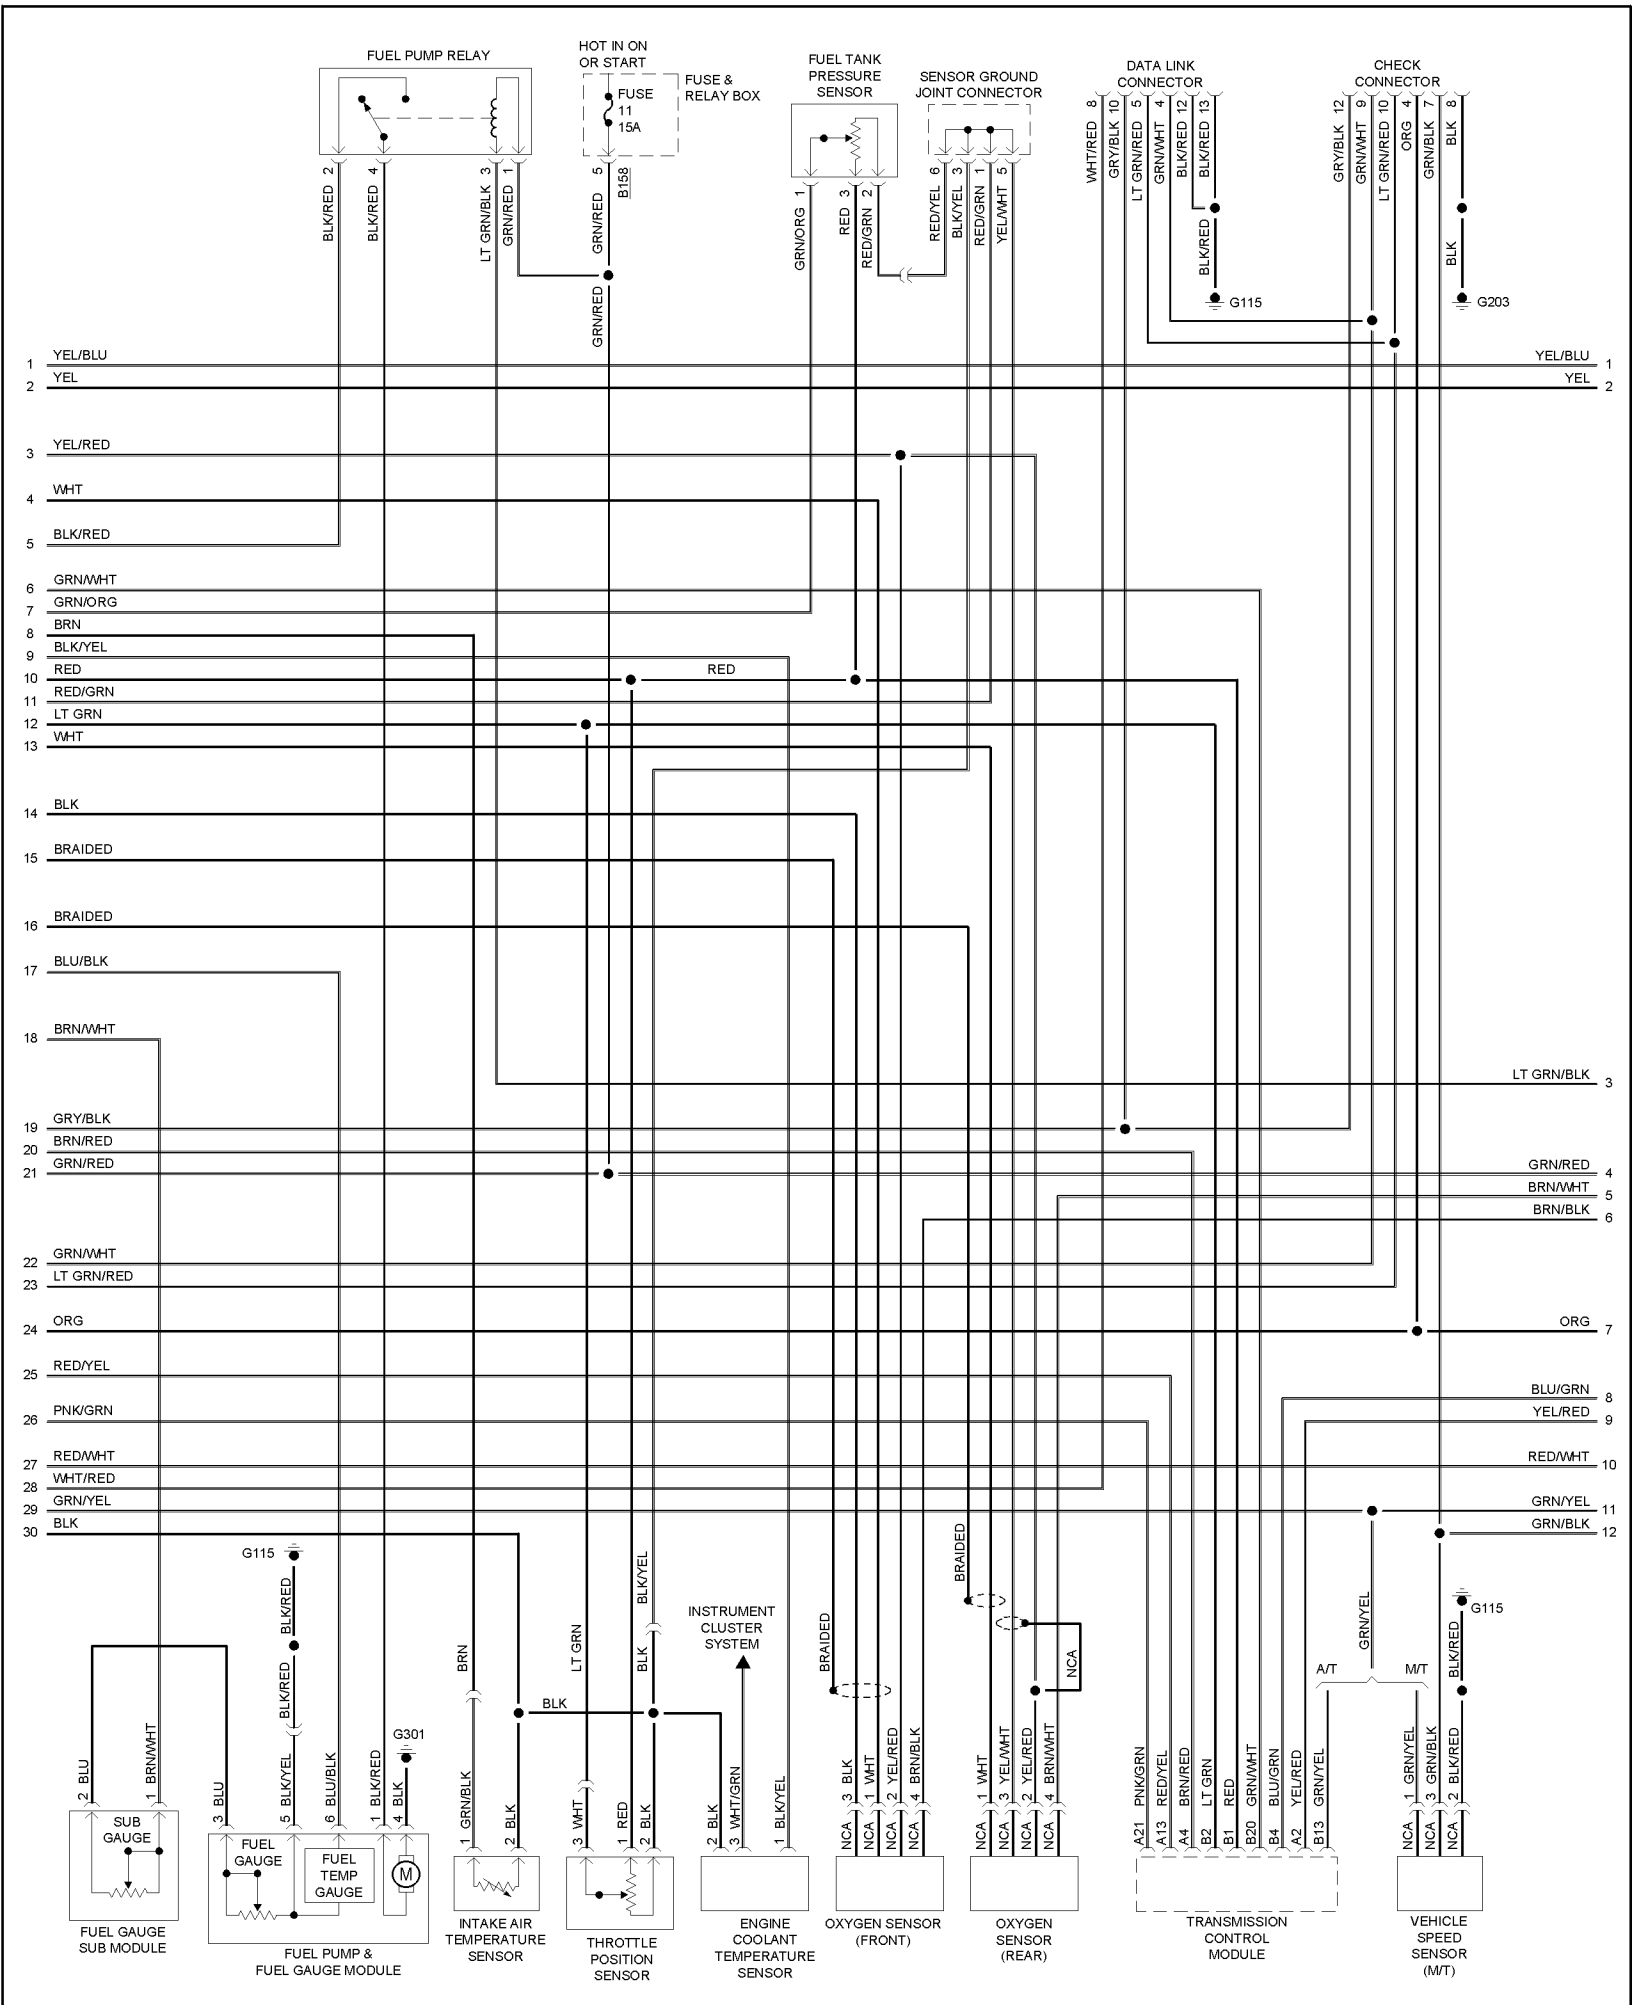

FUEL PUMP RELAY
HOT IN ON OR START
FUSE 11 15A
FUSE & RELAY BOX
FUEL TANK PRESSURE SENSOR
SENSOR GROUND JOINT CONNECTOR
DATA LINK CONNECTOR
CHECK CONNECTOR
G115
G203
YEL/BLU
YEL
YEL/RED
GRN
WHT
BLK/RED
GRN/WHT
GRN/ORG
BLK/YEL
RED
RED/GRN
LT GRN
WHT
RED
BLK
BRAIDED
BRAIDED
BLU/BLK
BRN/WHT
BRN/WHT
RED/WHT
GRY/BLK
BRN/RED
GRN/RED
GRN/WHT
LT GRN/RED
ORG
RED/YEL
PNK/GRN
RED/WHT
GRN/YEL
BLK
BLK/YEL
BLK
LT GRN/BLK
GRN/RED
BRN/WHT
BRN/BLK
ORG
BLU/GRN
YEL/RED
RED/WHT
GRN/YEL
GRN/BLK
G301
A/T
M/T
SUB GAUGE
FUEL GAUGE
FUEL TEMP GAUGE
FUEL GAUGE SUB MODULE
FUEL PUMP & FUEL GAUGE MODULE
ATMOSPHERIC PRESSURE SENSOR
THROTTLE POSITION SENSOR
INSTRUMENT CLUSTER SYSTEM
ENGINE COOLANT TEMPERATURE SENSOR
OXYGEN SENSOR (FRONT)
OXYGEN SENSOR (REAR)
TRANSMISSION CONTROL MODULE
VEHICLE SPEED SENSOR (M/T)

142889

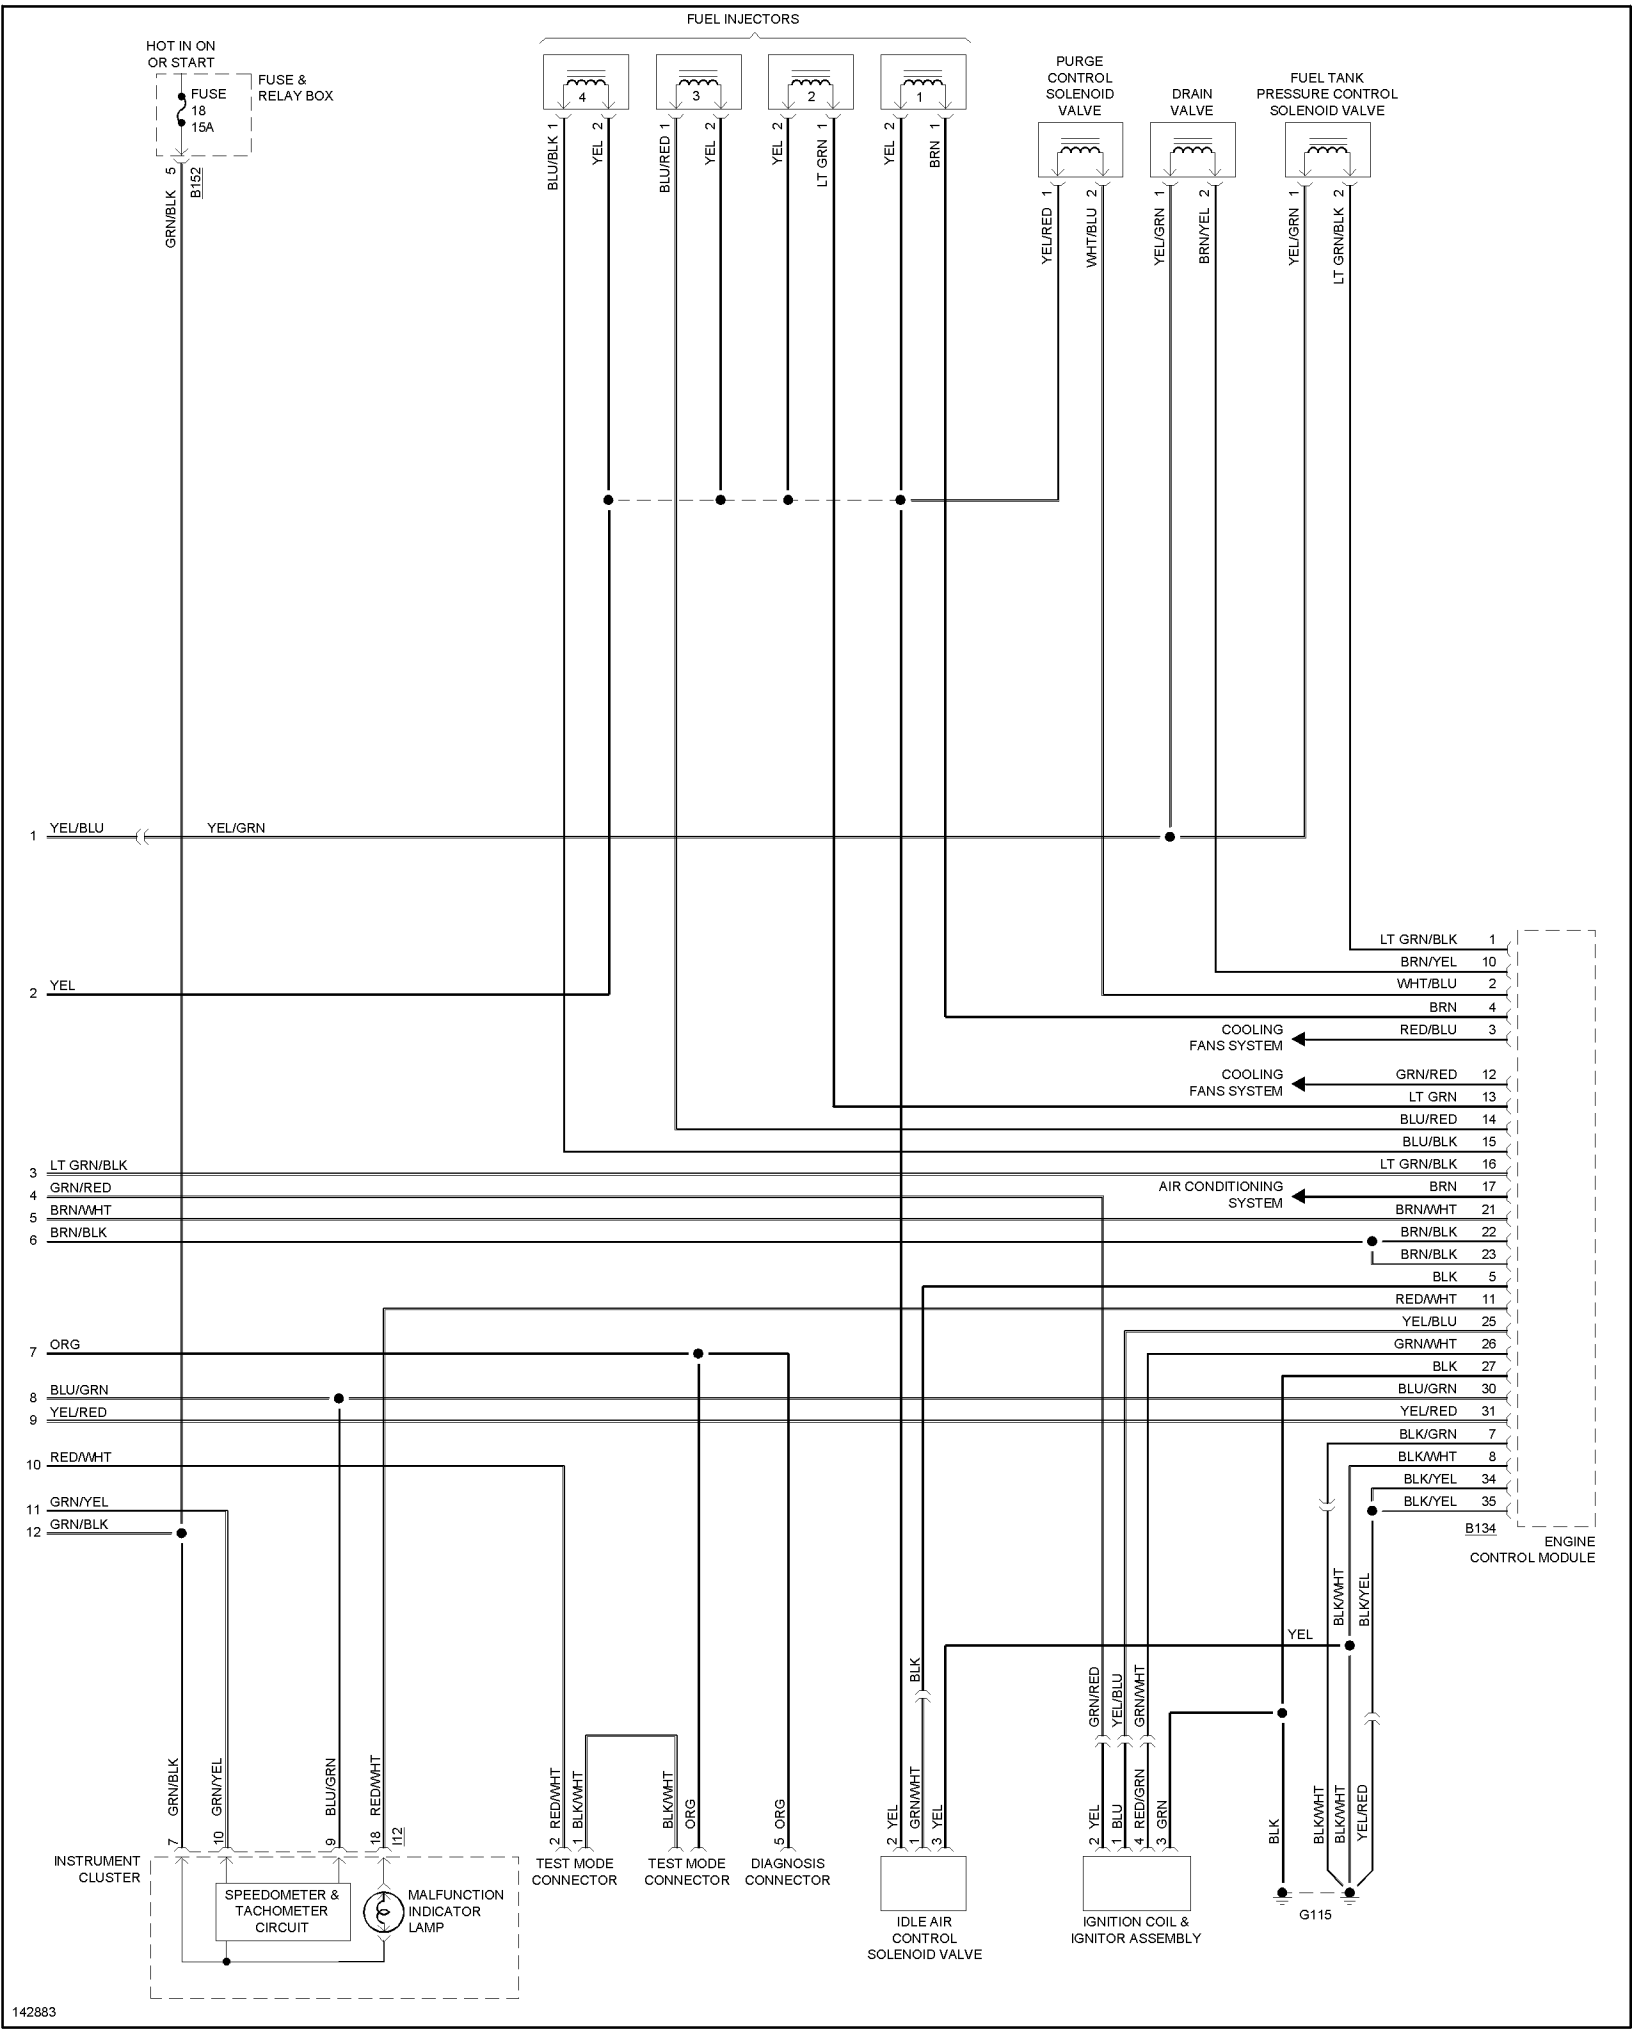

FUEL INJECTORS
HOT IN ON OR START
FUSE & RELAY BOX
FUSE 18 15A
B152
AIR ASSIST SOLENOID VALVE
PURGE CONTROL SOLENOID VALVE
DRAIN VALVE
FUEL TANK PRESSURE CONTROL SOLENOID VALVE
COOLING FANS SYSTEM
AIR CONDITIONING SYSTEM
ENGINE CONTROL MODULE
B134
INSTRUMENT CLUSTER
SPEEDOMETER & TACHOMETER CIRCUIT
FUEL GUAGE
MALFUNCTION INDICATOR LAMP
TEST MODE CONNECTOR
TEST MODE CONNECTOR
DIAGNOSIS CONNECTOR
IDLE AIR CONTROL SOLENOID VALVE
IGNITION COIL & IGNITOR ASSEMBLY
G115
142903

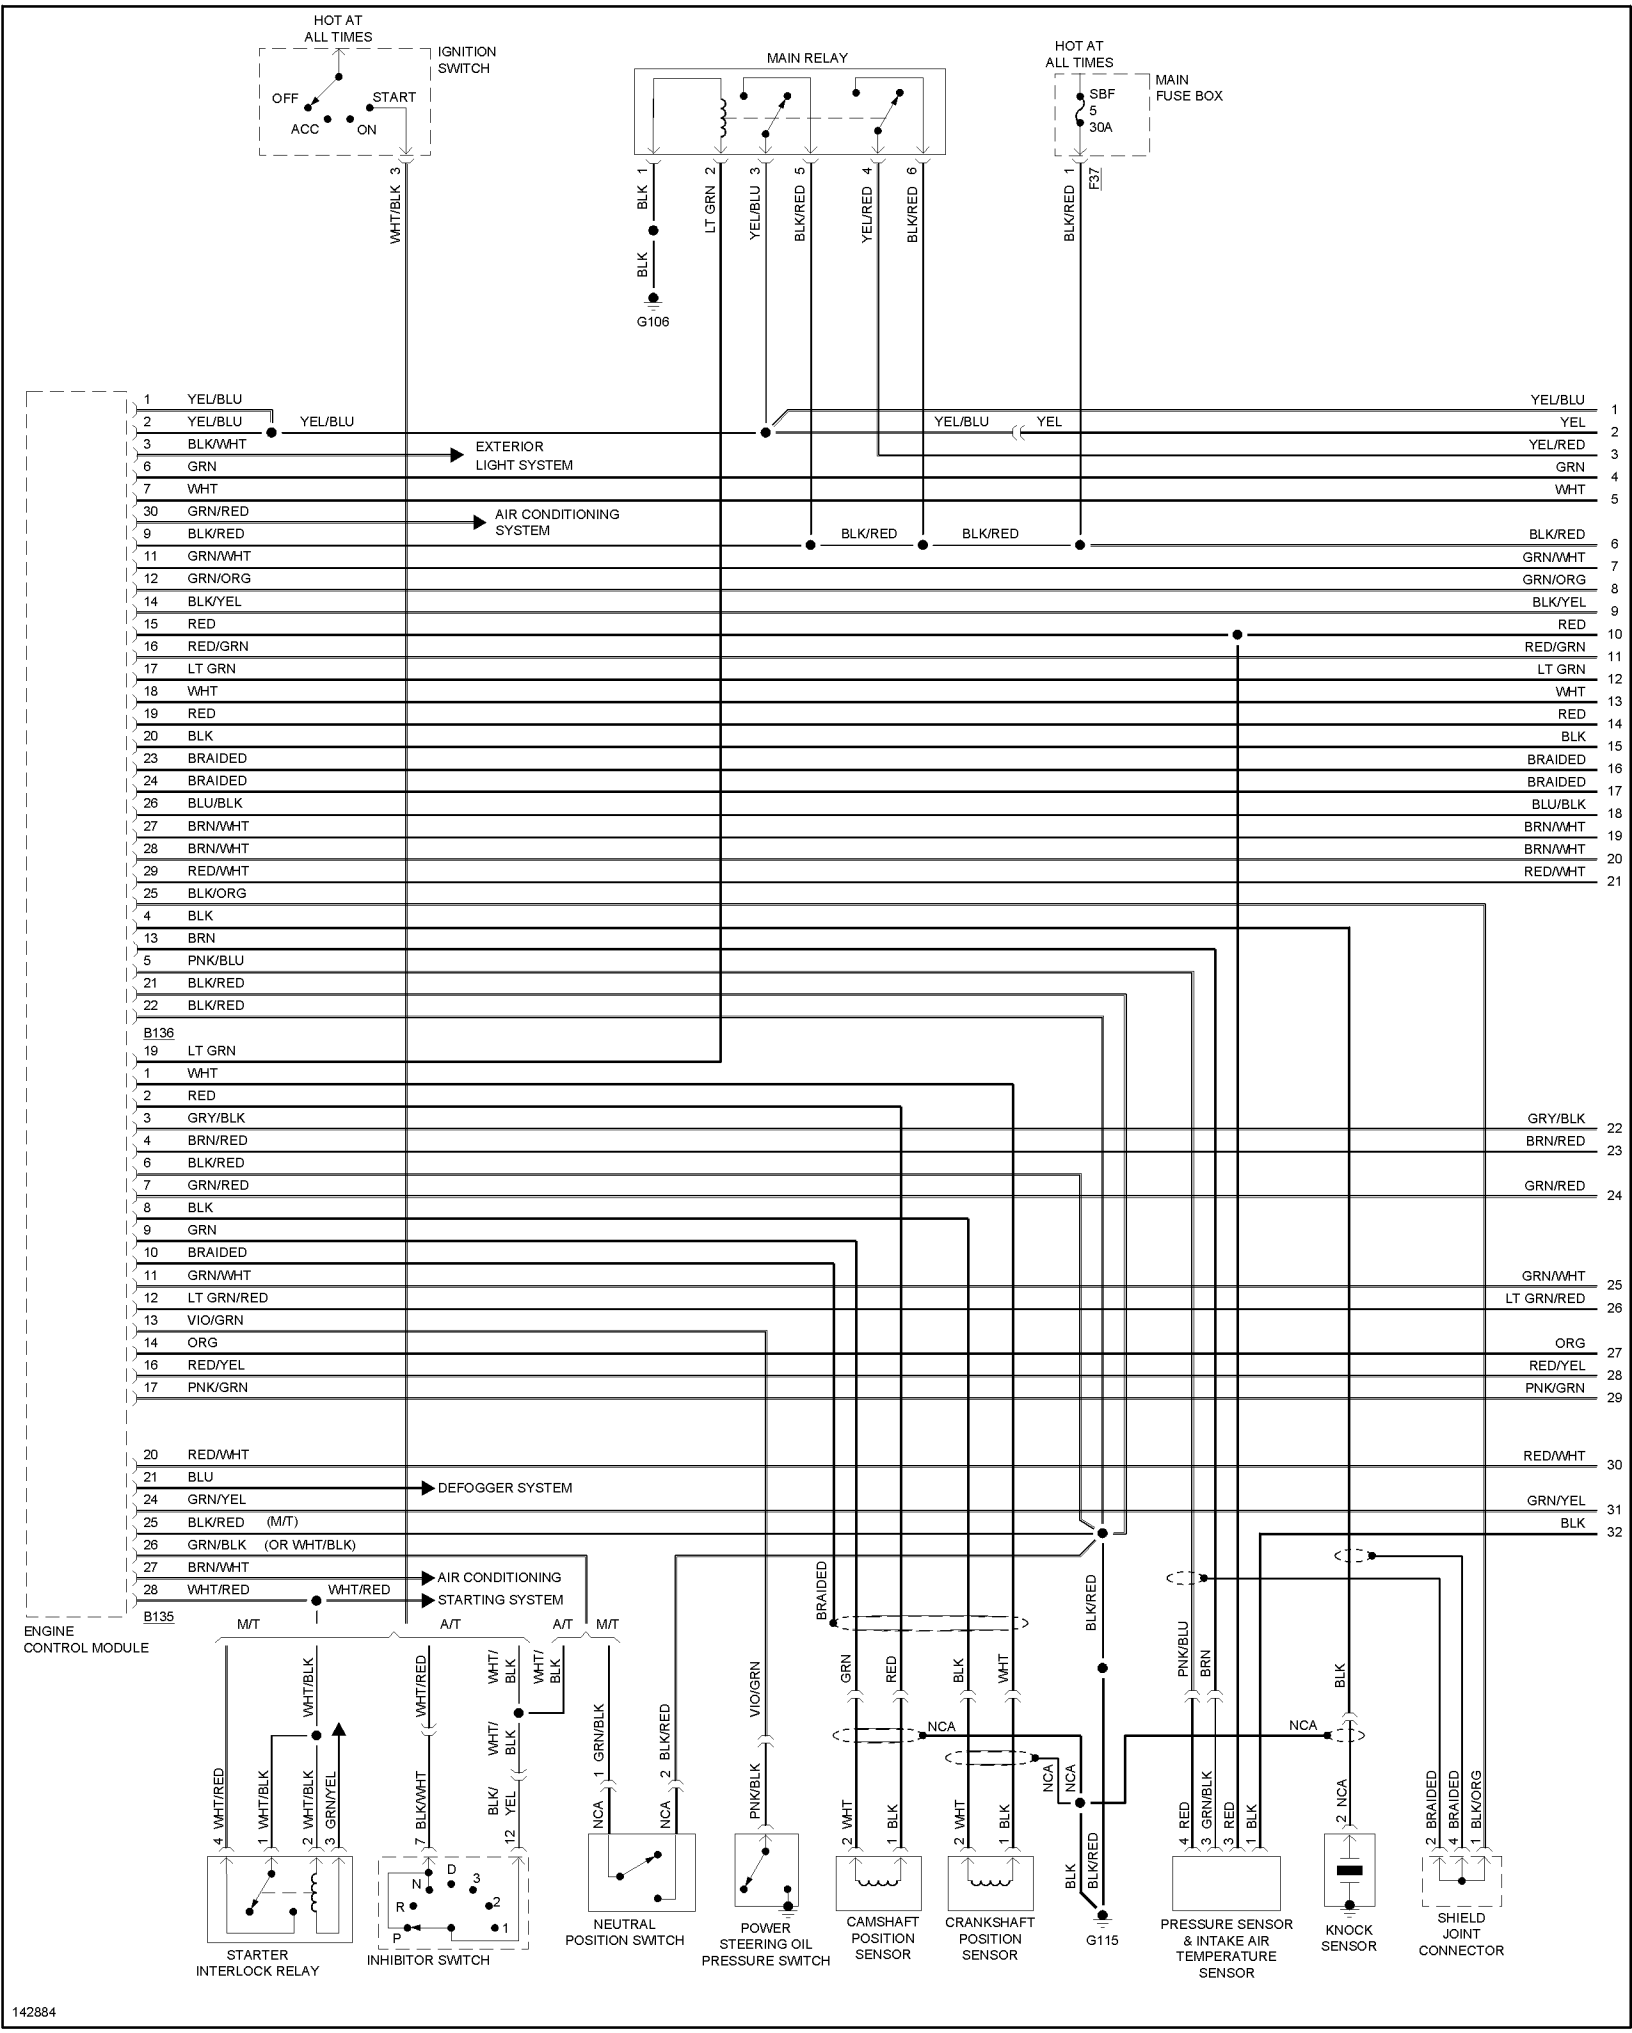

HOT AT ALL TIMES
IGNITION SWITCH
OFF
START
ACC
ON
MAIN RELAY
HOT AT ALL TIMES
SBF 5 30A
MAIN FUSE BOX
F37
G106
G115
ENGINE CONTROL MODULE
B135
B136
AIR CONDITIONING
STARTING SYSTEM
M/T
A/T
STARTER INTERLOCK RELAY
INHIBITOR SWITCH
NEUTRAL POSITION SWITCH
POWER STEERING OIL PRESSURE SWITCH
CAMSHAFT POSITION SENSOR
CRANKSHAFT POSITION SENSOR
INTAKE MANIFOLD PRESSURE SENSOR
KNOCK SENSOR
SHIELD JOINT CONNECTOR
NCA

142876

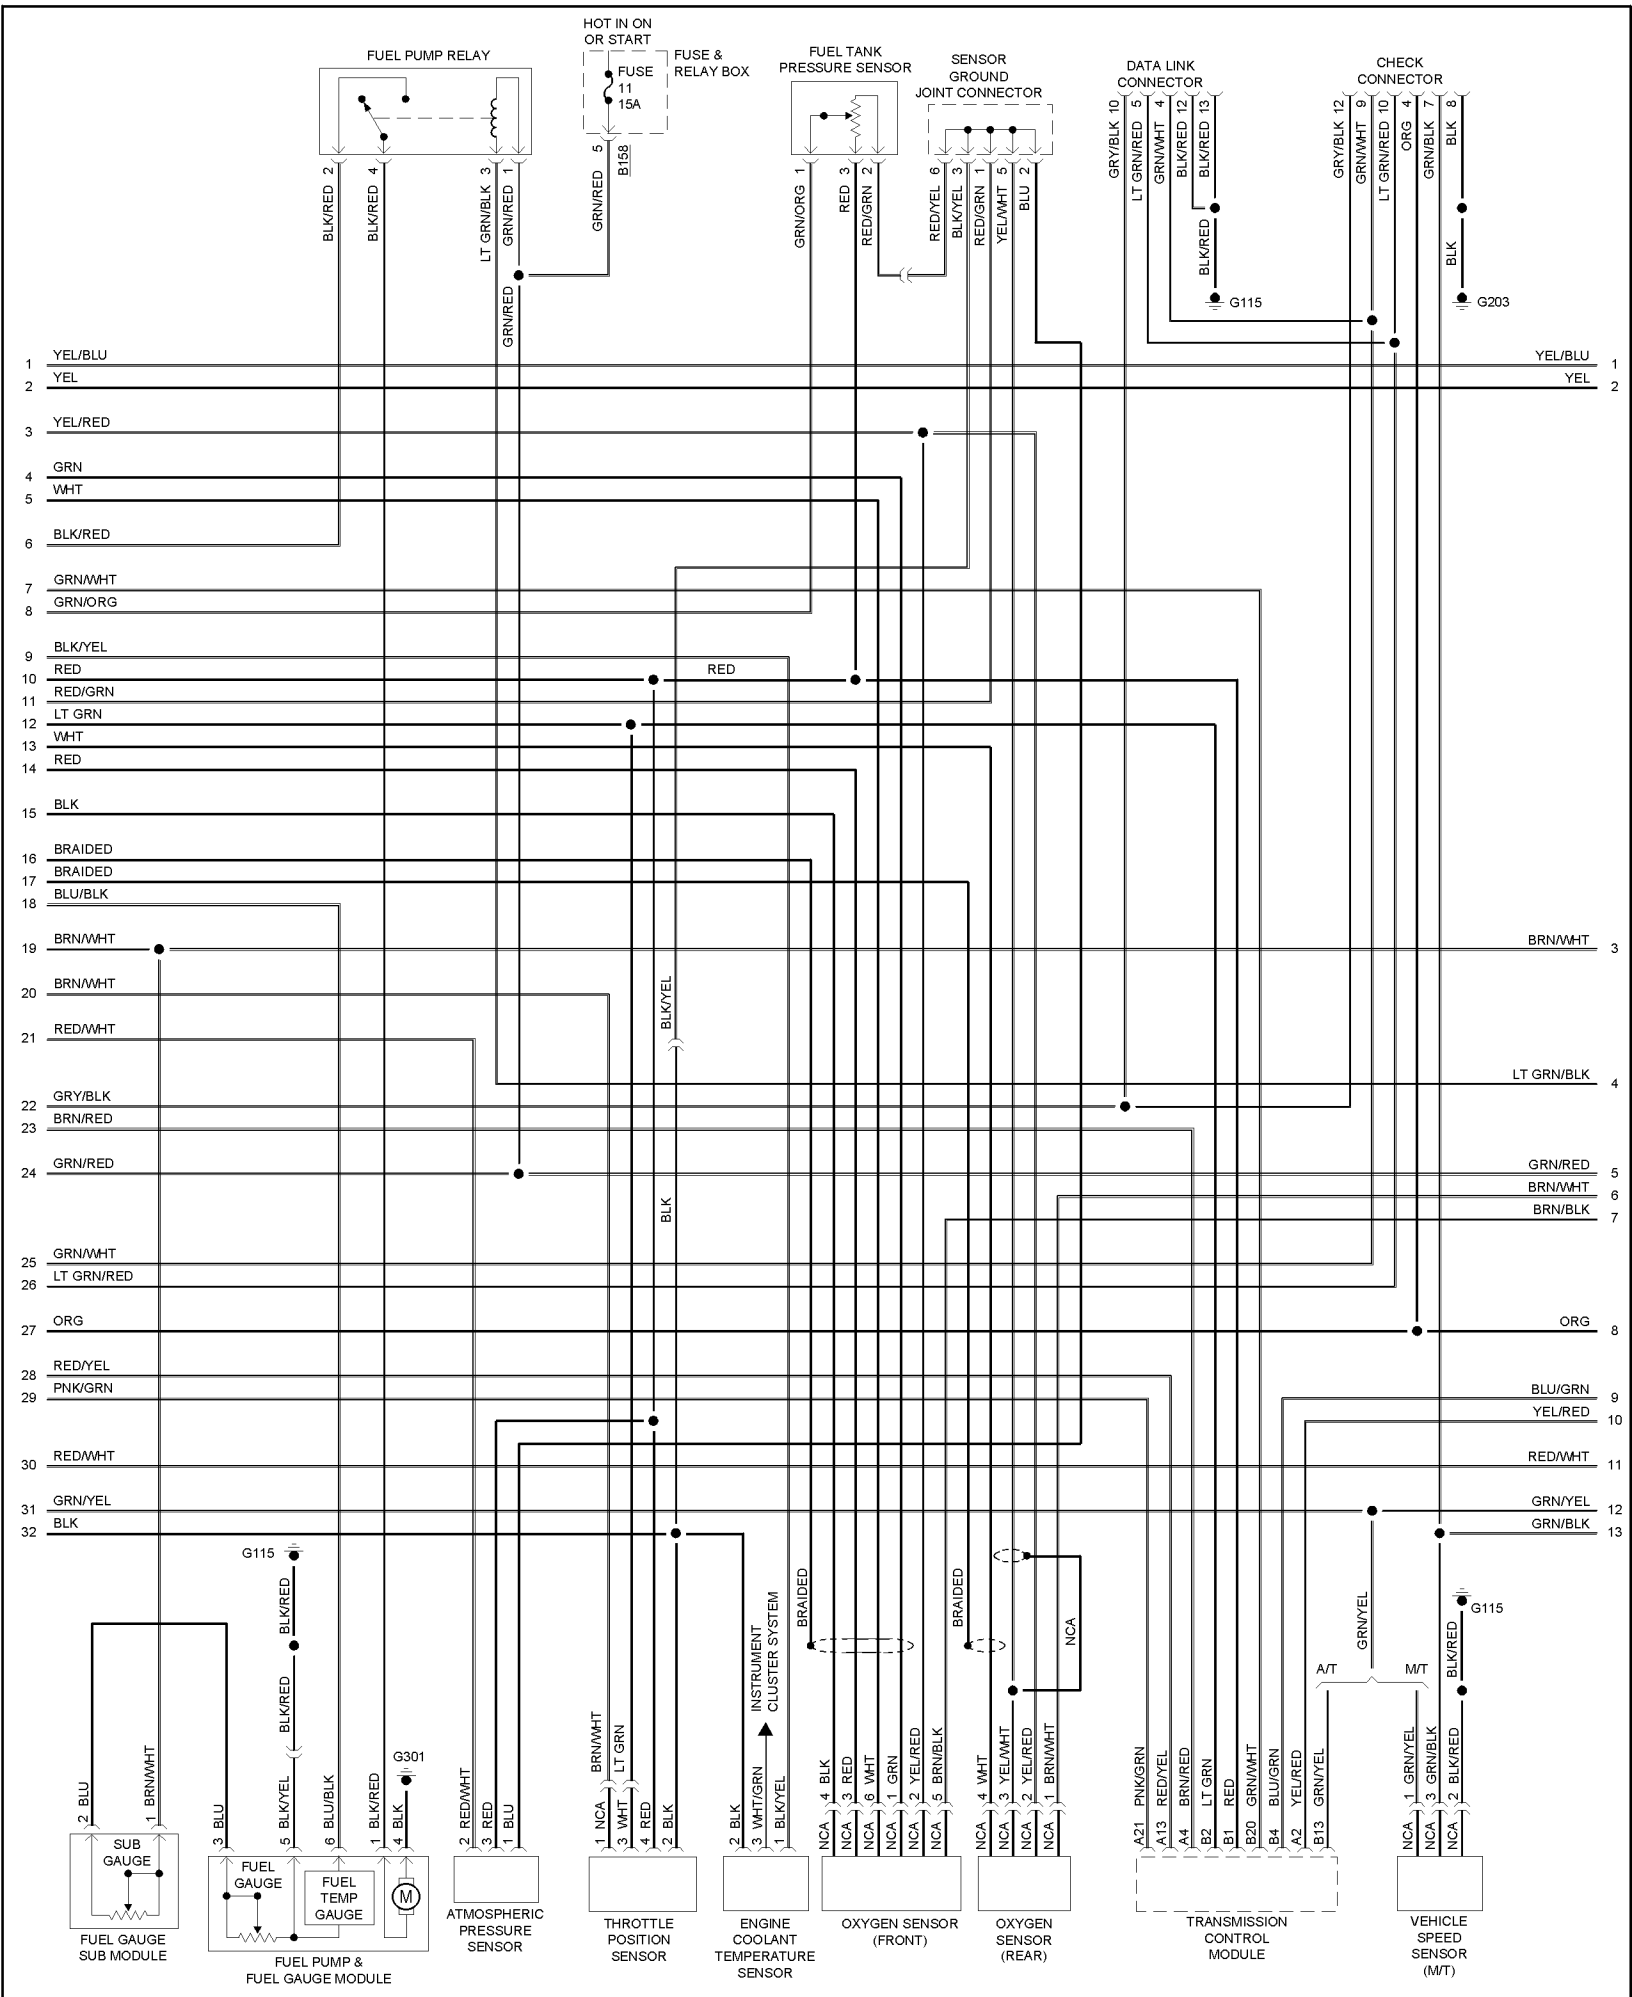

FUEL PUMP RELAY
HOT IN ON OR START
FUSE & RELAY BOX
FUSE 11 15A
B158
FUEL TANK PRESSURE SENSOR
SENSOR GROUND JOINT CONNECTOR
DATA LINK CONNECTOR
CHECK CONNECTOR
G115
G203
YEL/BLU
YEL
YEL/RED
WHT
BLK/RED
GRN/WHT
GRN/ORG
BRN
BLK/YEL
RED
RED/GRN
LT GRN
WHT
BLK
BRAIDED
BLU/BLK
BRN/WHT
GRY/BLK
BRN/RED
GRN/RED
LT GRN/BLK
BRN/BLK
LT GRN/RED
ORG
RED/YEL
PNK/GRN
BLU/GRN
YEL/RED
RED/WHT
WHT/RED
GRN/YEL
GRN/BLK
INSTRUMENT CLUSTER SYSTEM
A/T
M/T
SUB GAUGE
FUEL GAUGE
FUEL TEMP GAUGE
G301
FUEL GAUGE SUB MODULE
FUEL PUMP & FUEL GAUGE MODULE
INTAKE AIR TEMPERATURE SENSOR
THROTTLE POSITION SENSOR
ENGINE COOLANT TEMPERATURE SENSOR
OXYGEN SENSOR (FRONT)
OXYGEN SENSOR (REAR)
TRANSMISSION CONTROL MODULE
VEHICLE SPEED SENSOR (M/T)
NCA

142880

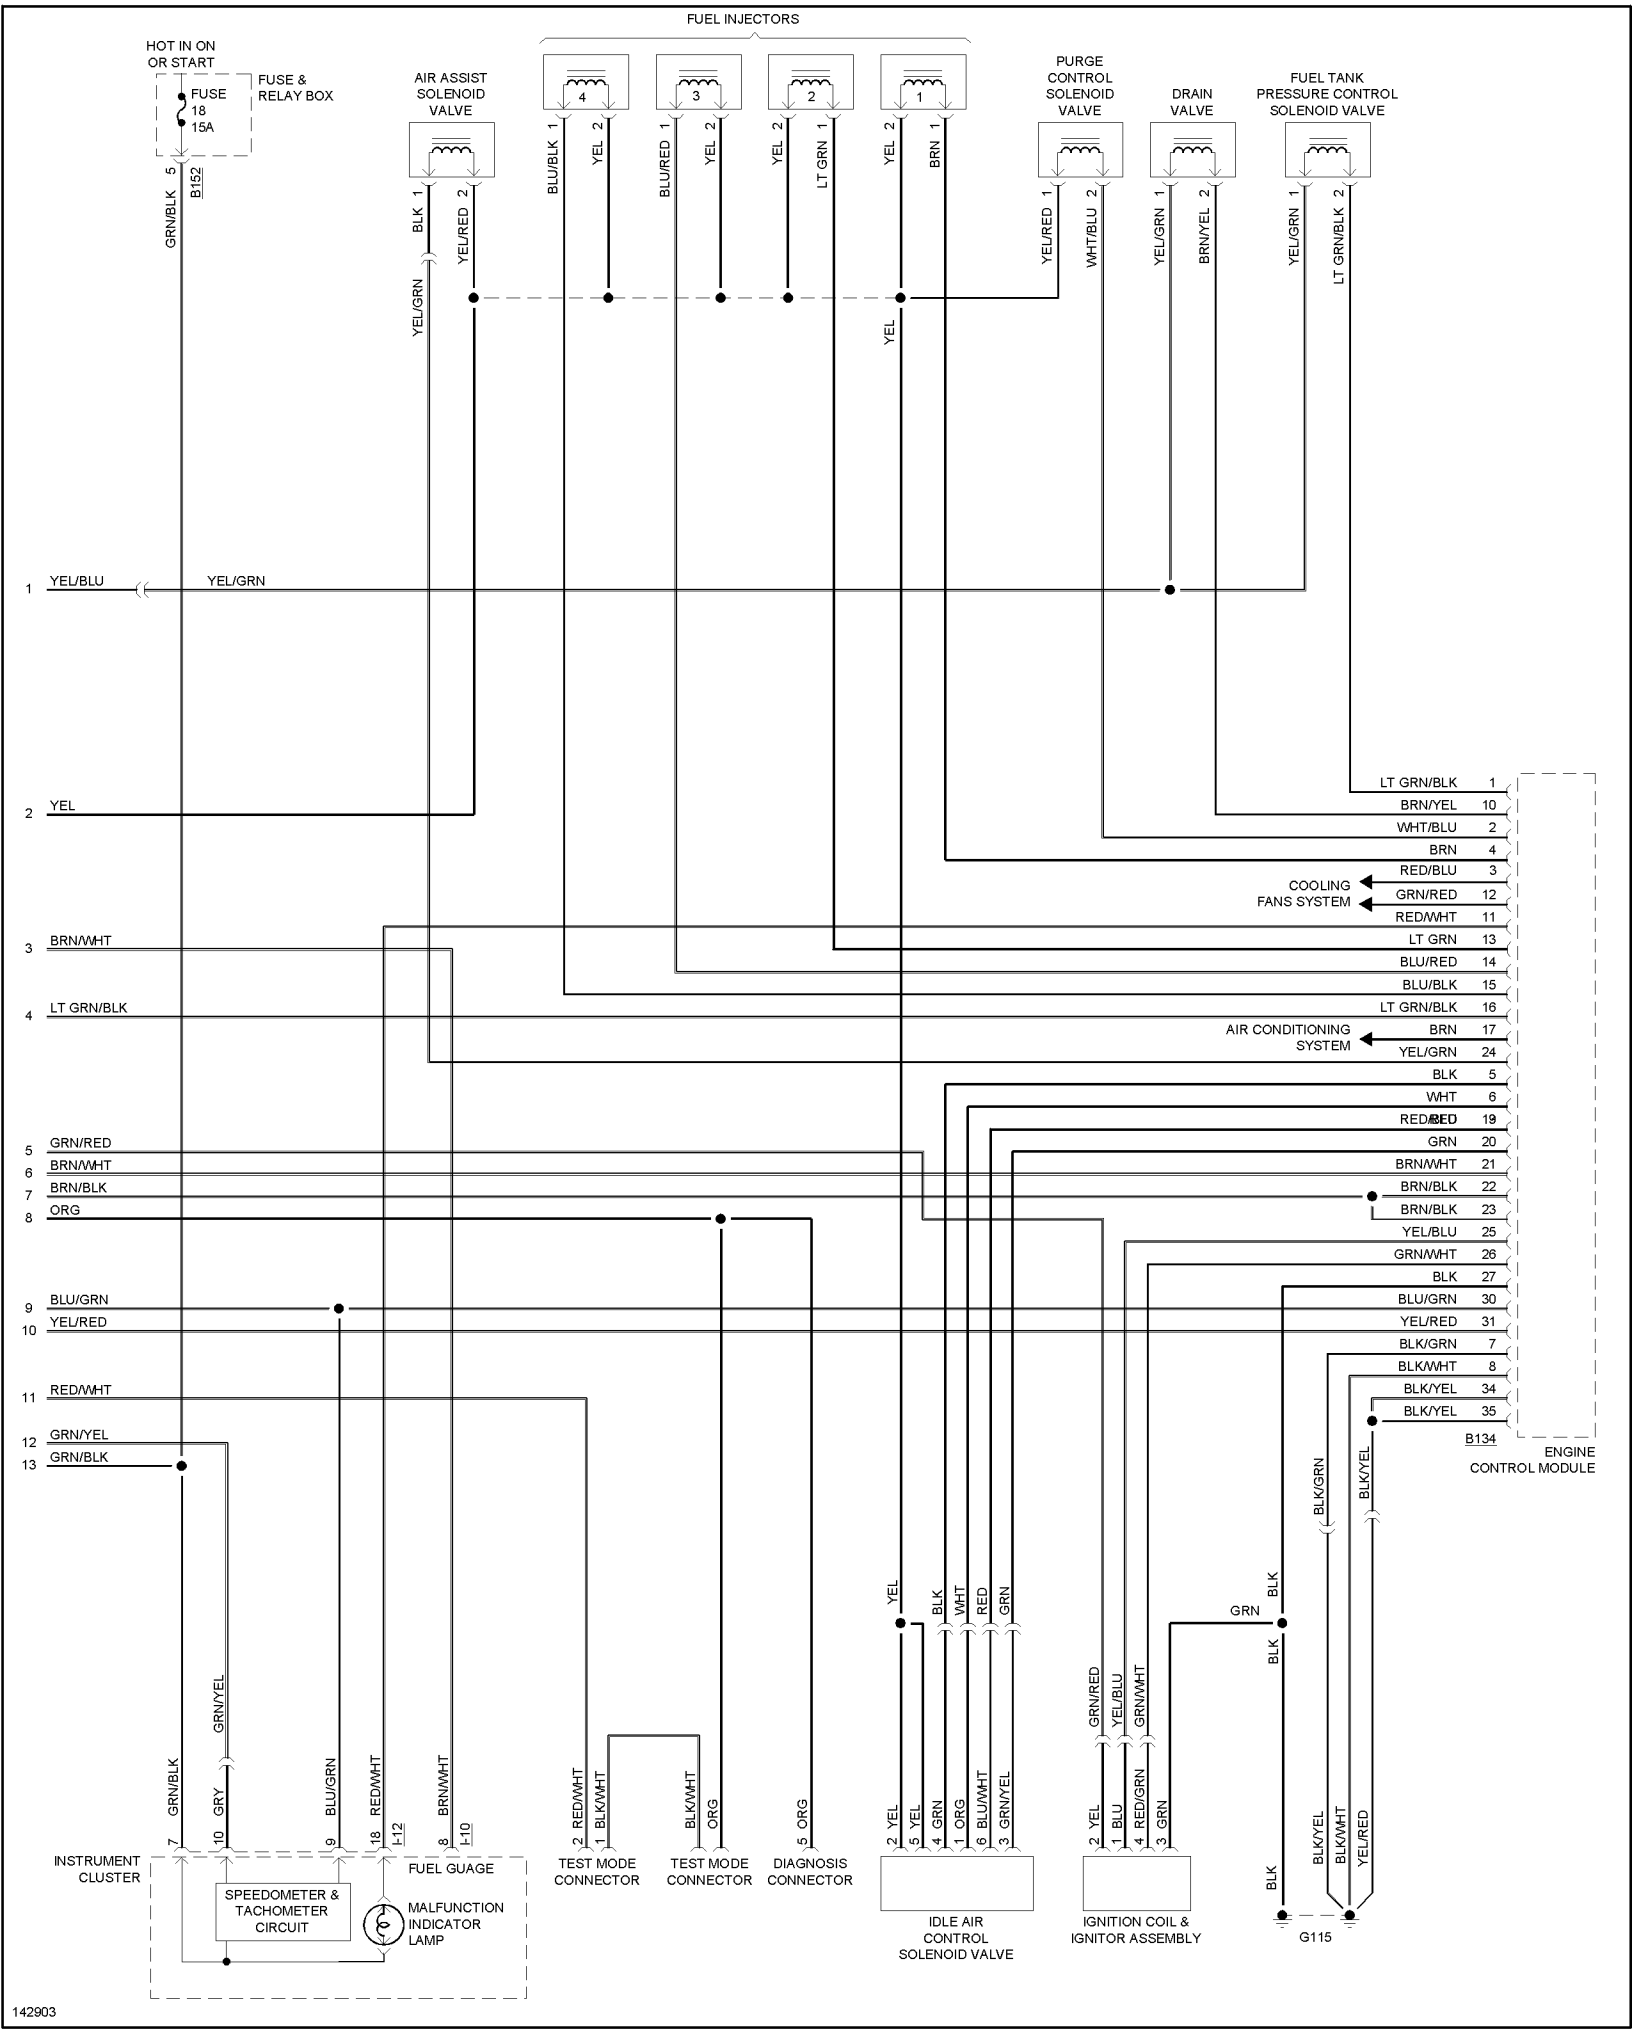

HOT IN ON OR START
FUSE & RELAY BOX
FUSE 18 15A
GRN/BLK 5 B152
FUEL INJECTORS
4
3
2
1
BLU/BLK 1
YEL 2
BLU/RED 1
YEL 2
YEL 2
LT GRN 1
YEL 2
BRN 1
PURGE CONTROL SOLENOID VALVE
YEL/RED 1
WHT/BLU 2
DRAIN VALVE
YEL/GRN 1
BRN/YEL 2
FUEL TANK PRESSURE CONTROL SOLENOID VALVE
YEL/GRN 1
LT GRN/BLK 2
1 YEL/BLU
YEL/GRN
2 YEL
3 LT GRN/BLK
4 GRN/RED
5 BRN/WHT
6 BRN/BLK
7 ORG
8 BLU/GRN
9 YEL/RED
10 RED/WHT
11 GRN/YEL
12 GRN/BLK
LT GRN/BLK 1
BRN/YEL 10
WHT/BLU 2
BRN 4
COOLING FANS SYSTEM
RED/BLU 3
COOLING FANS SYSTEM
GRN/RED 12
LT GRN 13
BLU/RED 14
BLU/BLK 15
LT GRN/BLK 16
AIR CONDITIONING SYSTEM
BRN 17
BRN/WHT 21
BRN/BLK 22
BRN/BLK 23
BLK 5
RED/WHT 11
YEL/BLU 25
GRN/WHT 26
BLK 27
BLU/GRN 30
YEL/RED 31
BLK/GRN 7
BLK/WHT 8
BLK/YEL 34
BLK/YEL 35
B134
ENGINE CONTROL MODULE
GRN/BLK 7
GRN/YEL 10
BLU/GRN 9
RED/WHT 18
I12
INSTRUMENT CLUSTER
SPEEDOMETER & TACHOMETER CIRCUIT
MALFUNCTION INDICATOR LAMP
RED/WHT 2
BLK/WHT 1
TEST MODE CONNECTOR
BLK/WHT
ORG
TEST MODE CONNECTOR
ORG 5
DIAGNOSIS CONNECTOR
BLK
YEL 2
GRN/WHT 1
YEL 3
IDLE AIR CONTROL SOLENOID VALVE
GRN/RED
YEL/BLU
GRN/WHT
YEL 2
BLU 1
RED/GRN 4
GRN 3
IGNITION COIL & IGNITOR ASSEMBLY
YEL
BLK
G115
BLK/WHT
BLK/YEL
BLK/WHT
BLK/WHT
YEL/RED
142883

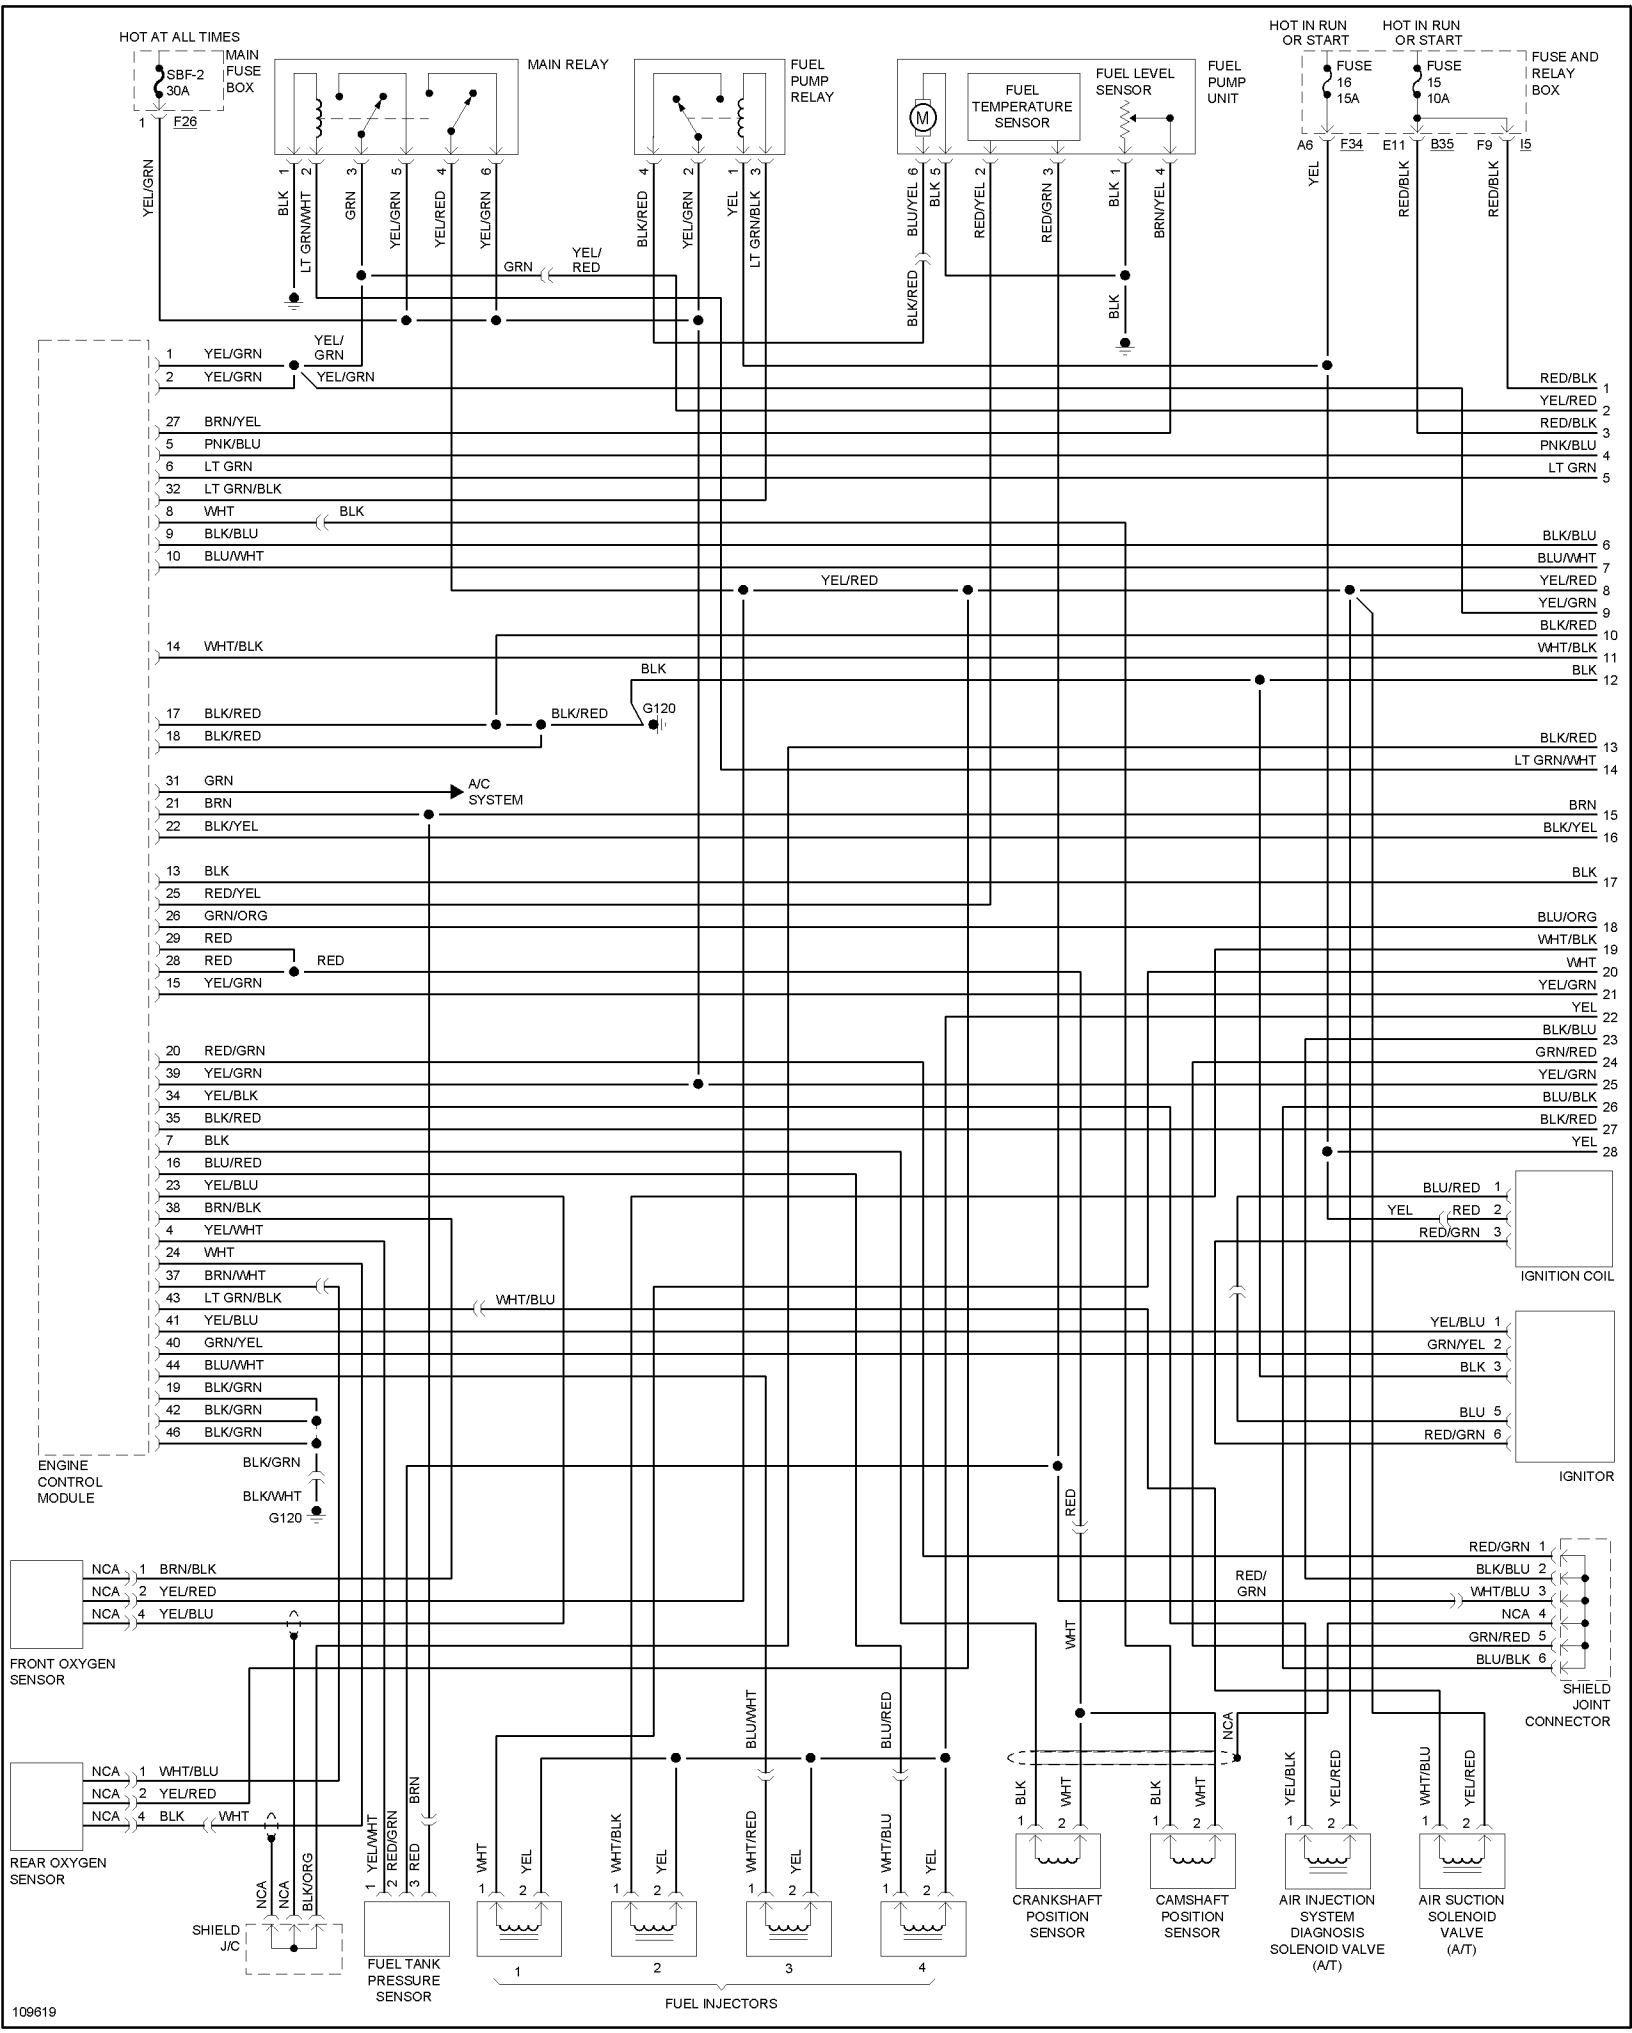

HOT AT ALL TIMES
IGNITION SWITCH
OFF
START
ACC
ON
MAIN RELAY
HOT AT ALL TIMES
SBF 5 30A
MAIN FUSE BOX
F37
G106
WHT/BLK 3
BLK 1
BLK
LT GRN 2
YEL/BLU 3
BLK/RED 5
YEL/RED 4
BLK/RED 6
BLK/RED 1
1 YEL/BLU
2 YEL/BLU
3 BLK/WHT
6 GRN
7 WHT
30 GRN/RED
9 BLK/RED
11 GRN/WHT
12 GRN/ORG
14 BLK/YEL
15 RED
16 RED/GRN
17 LT GRN
18 WHT
19 RED
20 BLK
23 BRAIDED
24 BRAIDED
26 BLU/BLK
27 BRN/WHT
28 BRN/WHT
29 RED/WHT
25 BLK/ORG
4 BLK
13 BRN
5 PNK/BLU
21 BLK/RED
22 BLK/RED
EXTERIOR LIGHT SYSTEM
AIR CONDITIONING SYSTEM
YEL/BLU
YEL/BLU
YEL
BLK/RED
BLK/RED
YEL/BLU 1
YEL 2
YEL/RED 3
GRN 4
WHT 5
BLK/RED 6
GRN/WHT 7
GRN/ORG 8
BLK/YEL 9
RED 10
RED/GRN 11
LT GRN 12
WHT 13
RED 14
BLK 15
BRAIDED 16
BRAIDED 17
BLU/BLK 18
BRN/WHT 19
BRN/WHT 20
RED/WHT 21
B136
19 LT GRN
1 WHT
2 RED
3 GRY/BLK
4 BRN/RED
6 BLK/RED
7 GRN/RED
8 BLK
9 GRN
10 BRAIDED
11 GRN/WHT
12 LT GRN/RED
13 VIO/GRN
14 ORG
16 RED/YEL
17 PNK/GRN
GRY/BLK 22
BRN/RED 23
GRN/RED 24
GRN/WHT 25
LT GRN/RED 26
ORG 27
RED/YEL 28
PNK/GRN 29
20 RED/WHT
21 BLU
24 GRN/YEL
25 BLK/RED (M/T)
26 GRN/BLK (OR WHT/BLK)
27 BRN/WHT
28 WHT/RED
WHT/RED
DEFOGGER SYSTEM
AIR CONDITIONING
STARTING SYSTEM
RED/WHT 30
GRN/YEL 31
BLK 32
B135
ENGINE CONTROL MODULE
M/T
A/T
A/T
M/T
WHT/BLK
WHT/RED
WHT/BLK
WHT/BLK
GRN/BLK
BLK/RED
VIO/GRN
BRAIDED
GRN
RED
BLK
WHT
BLK/RED
PNK/BLU
BRN
BLK
NCA
NCA
NCA
NCA
NCA
4 WHT/RED
1 WHT/BLK
2 WHT/BLK
3 GRN/YEL
7 BLK/WHT
12 BLK/YEL
1 GRN/BLK
2 BLK/RED
NCA
NCA
PNK/BLK
2 WHT
1 BLK
2 WHT
1 BLK
BLK
BLK/RED
4 RED
3 GRN/BLK
3 RED
1 BLK
2 NCA
2 BRAIDED
4 BRAIDED
1 BLK/ORG
STARTER INTERLOCK RELAY
INHIBITOR SWITCH
N
D
3
2
R
1
P
NEUTRAL POSITION SWITCH
POWER STEERING OIL PRESSURE SWITCH
CAMSHAFT POSITION SENSOR
CRANKSHAFT POSITION SENSOR
G115
PRESSURE SENSOR & INTAKE AIR TEMPERATURE SENSOR
KNOCK SENSOR
SHIELD JOINT CONNECTOR

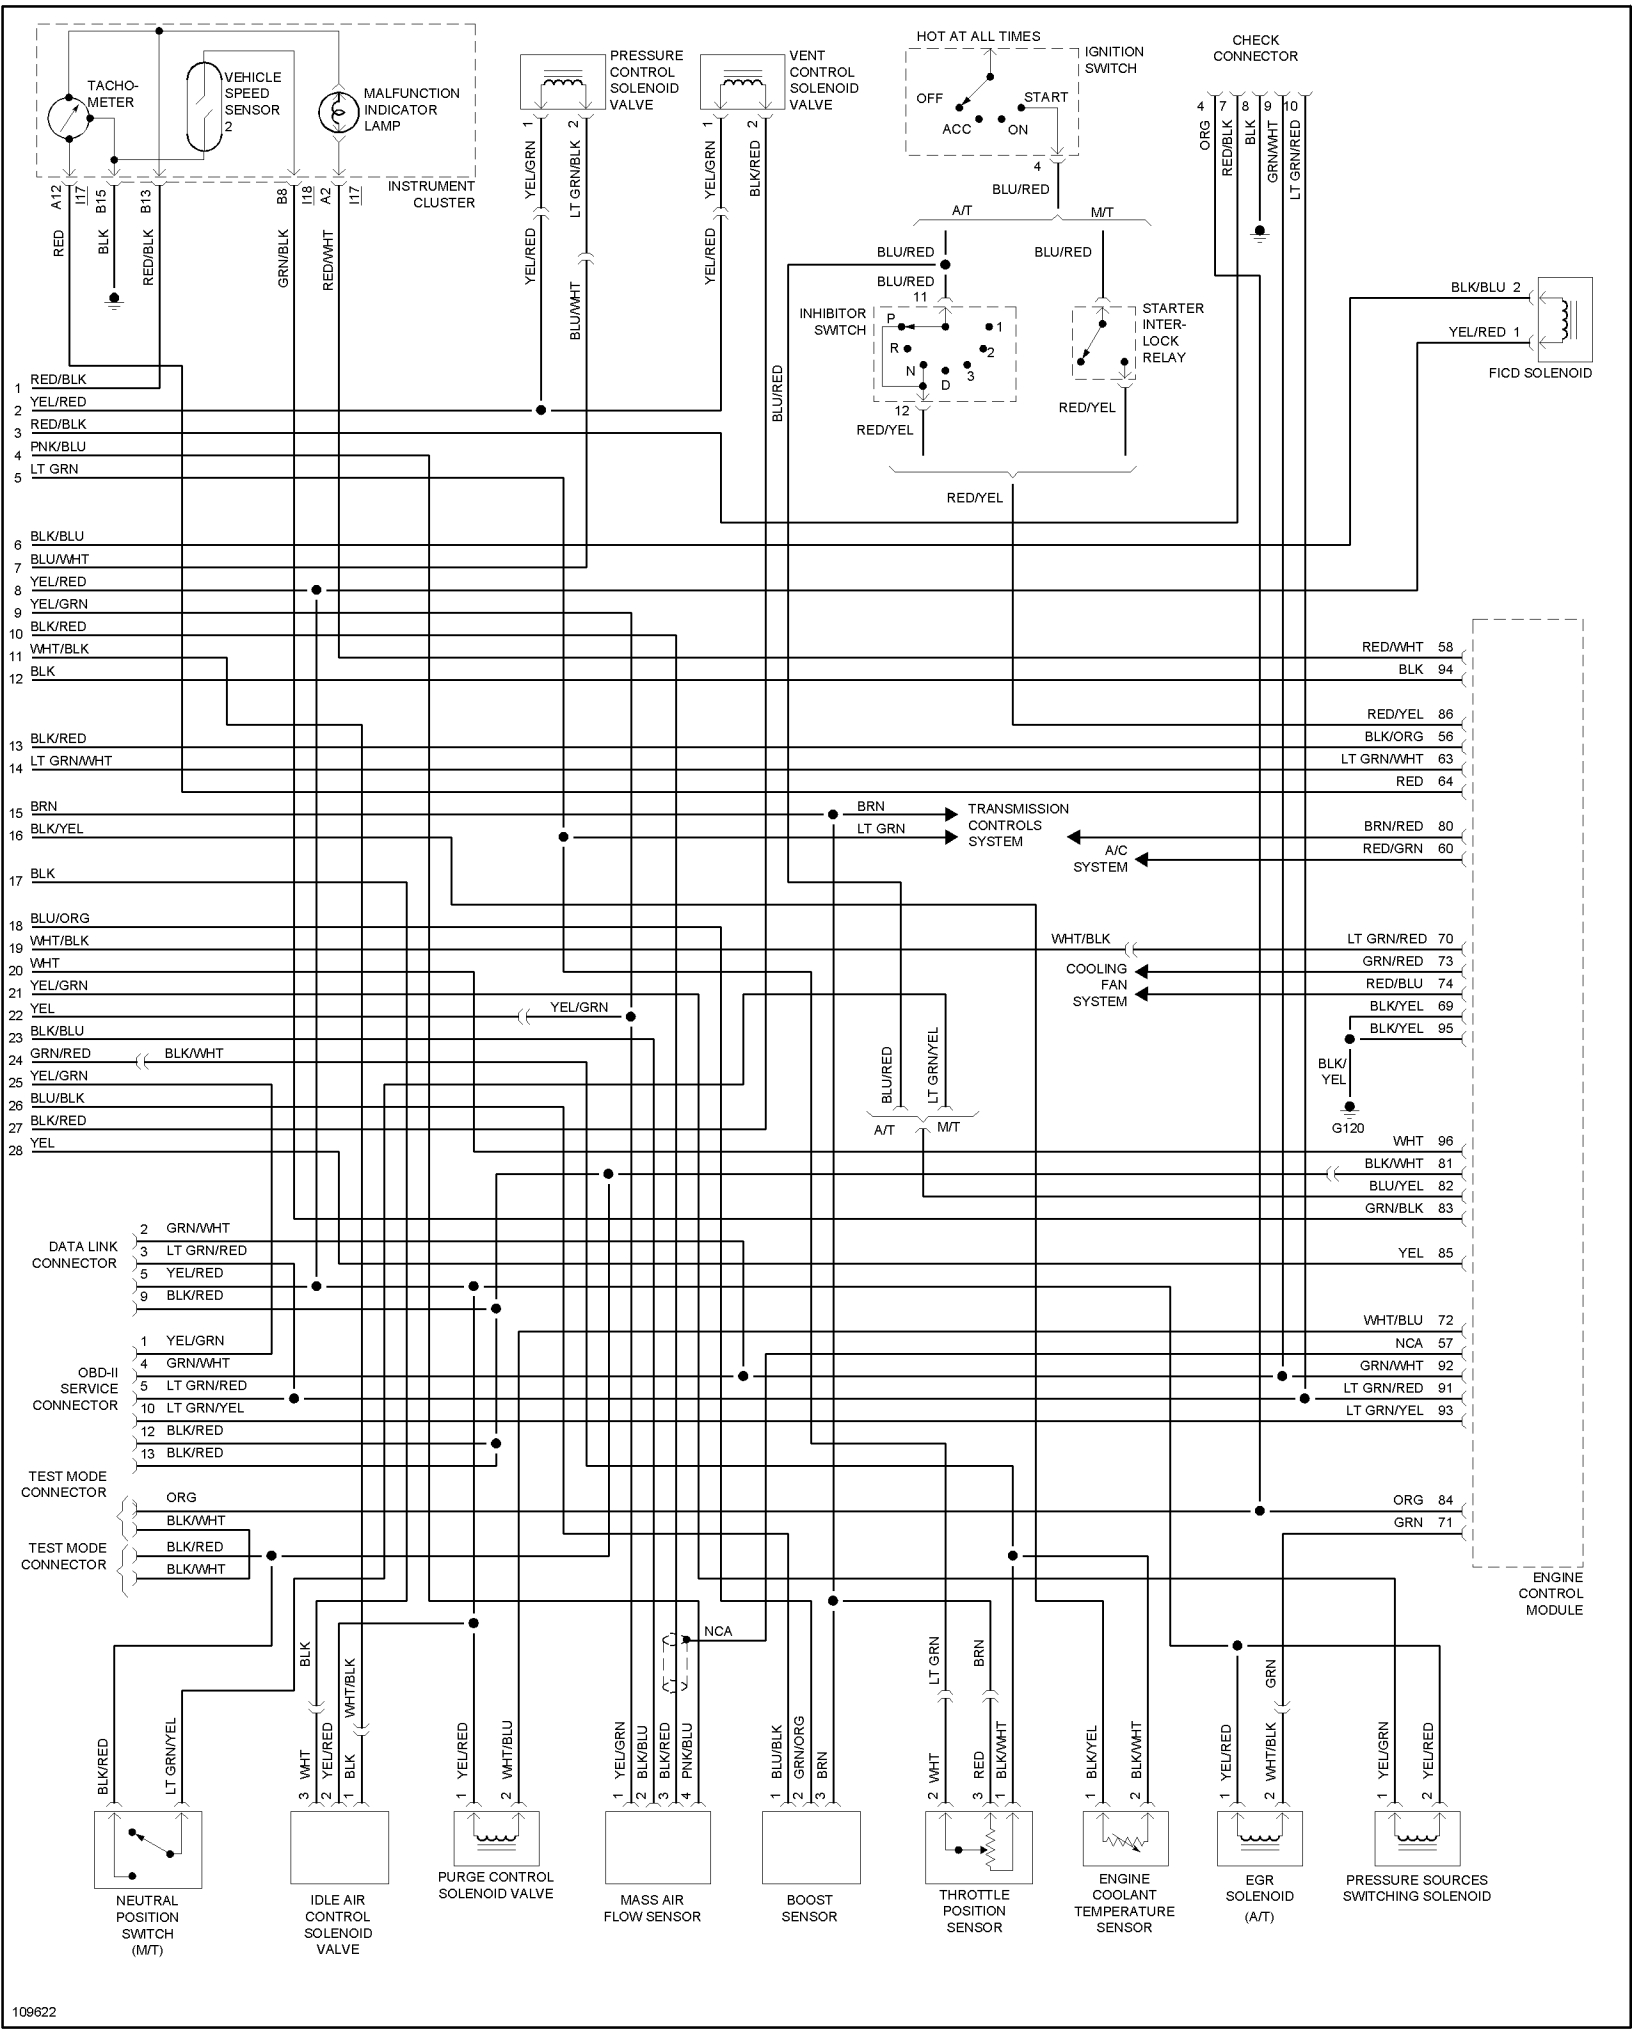
142884

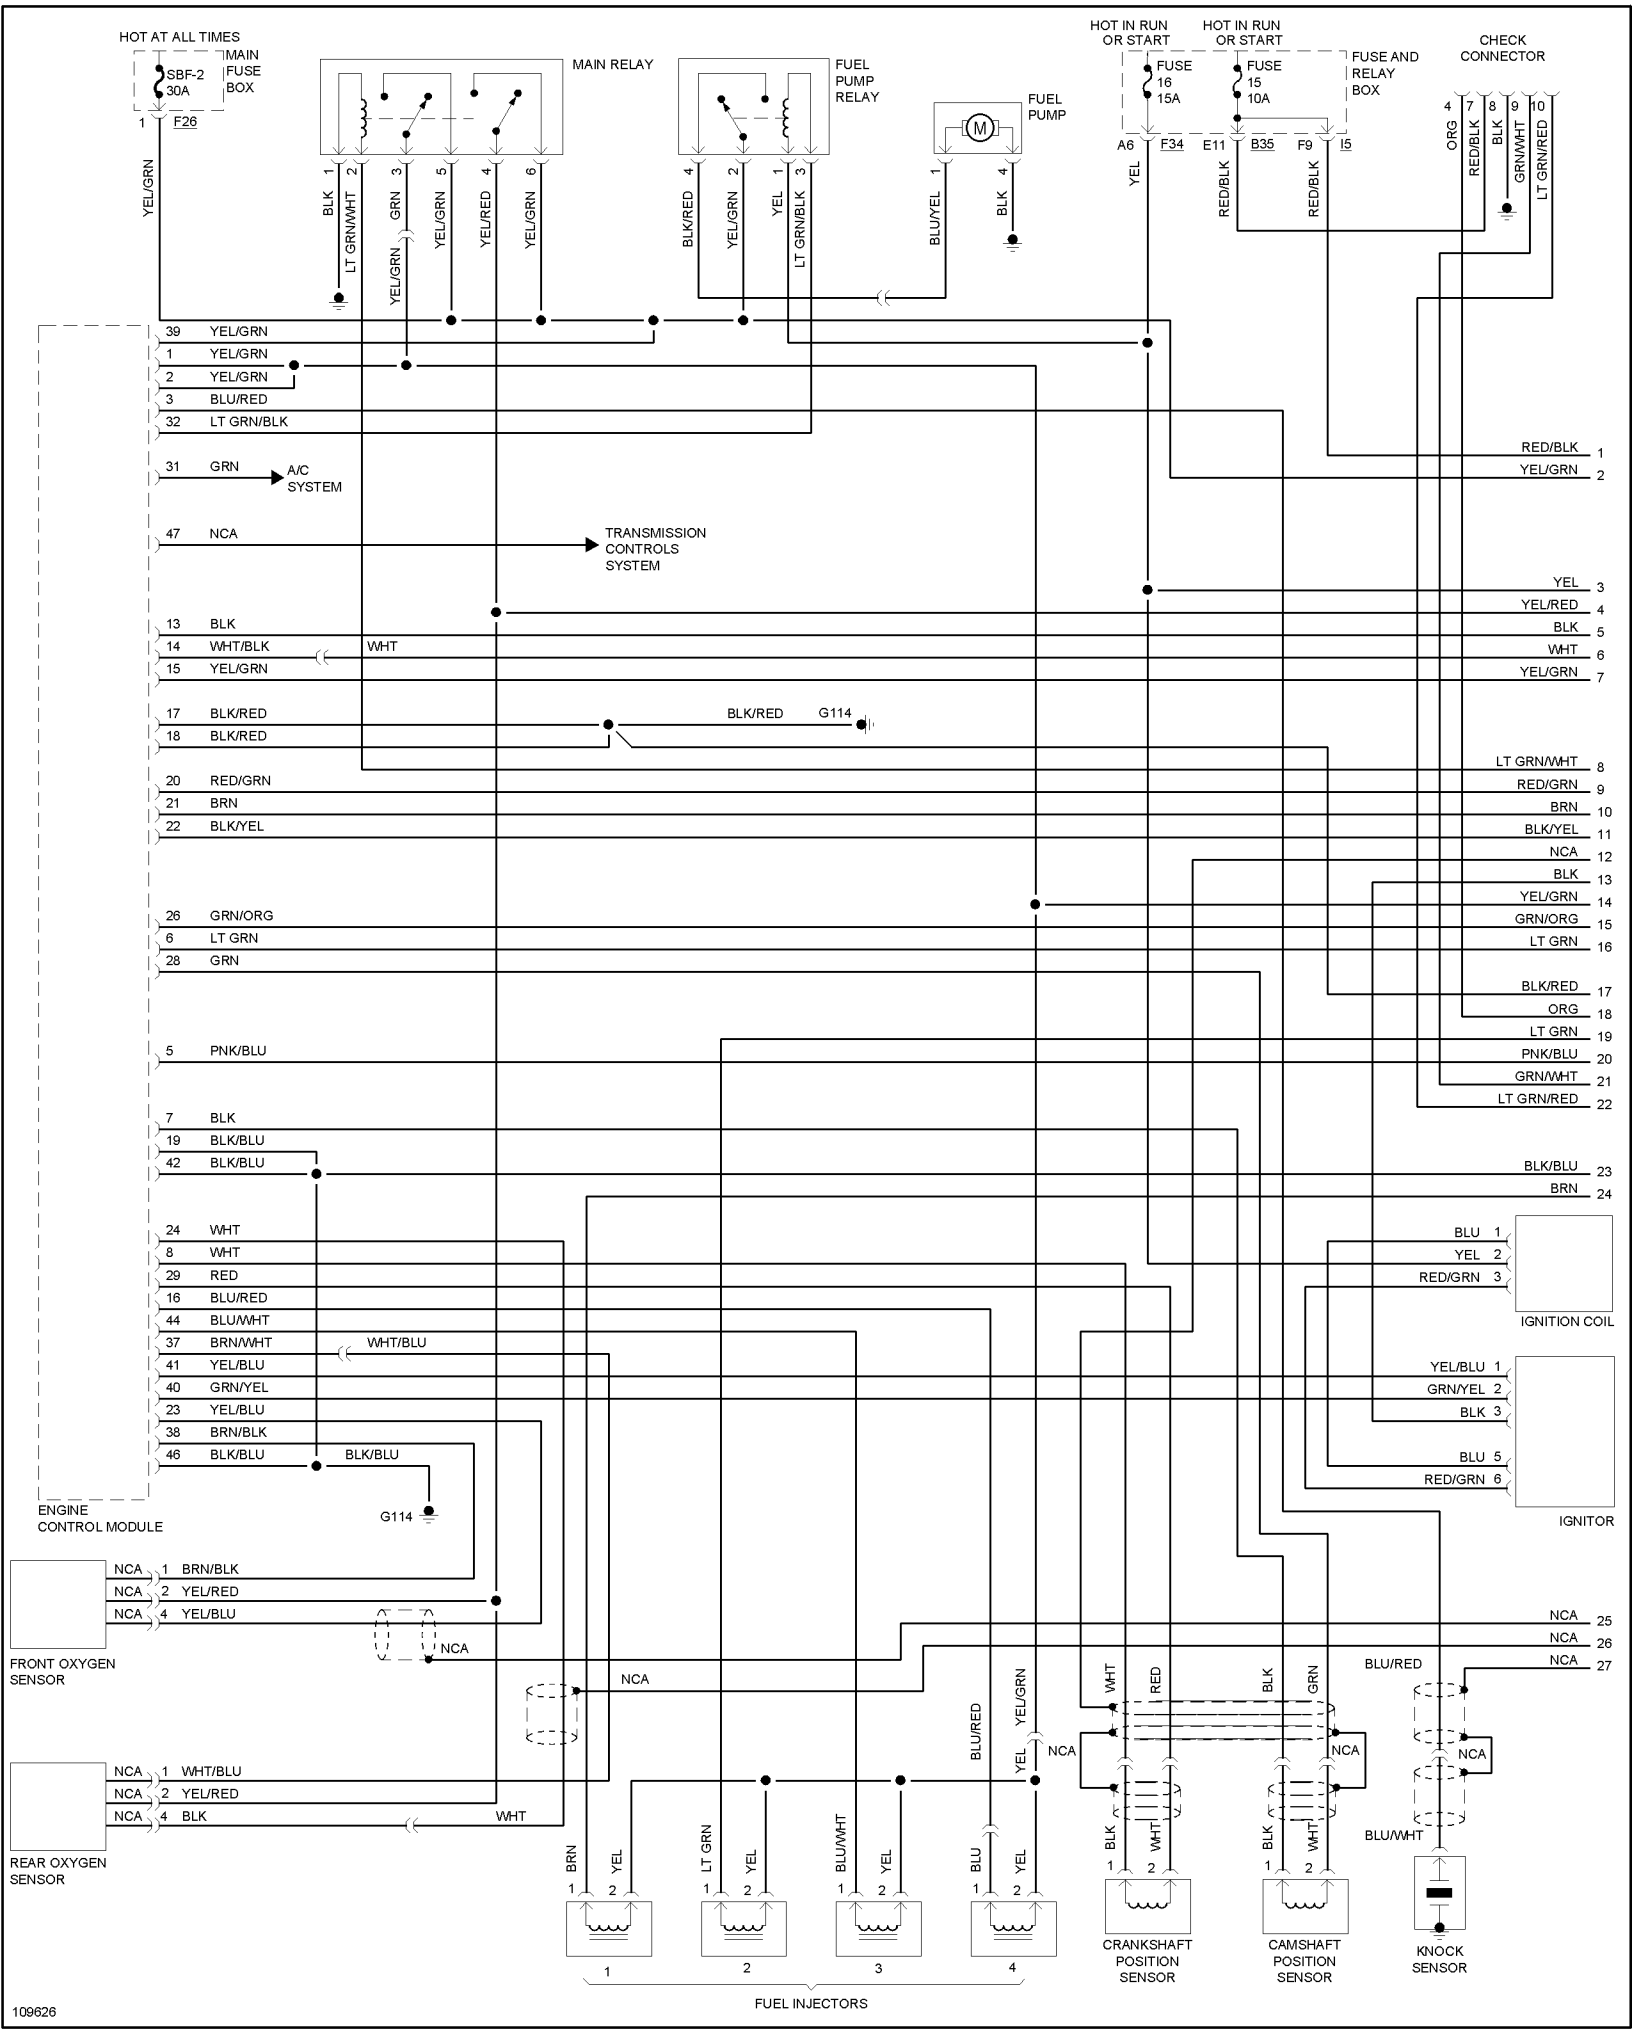

FUEL PUMP RELAY
HOT IN ON OR START
FUSE 11 15A
FUSE & RELAY BOX
FUEL TANK PRESSURE SENSOR
SENSOR GROUND JOINT CONNECTOR
DATA LINK CONNECTOR
CHECK CONNECTOR
G115
G203
YEL/BLU
YEL
YEL/RED
GRN
WHT
BLK/RED
GRN/WHT
GRN/ORG
BLK/YEL
RED
RED/GRN
LT GRN
WHT
RED
BLK
BRAIDED
BRAIDED
BLU/BLK
BRN/WHT
BRN/WHT
RED/WHT
GRY/BLK
BRN/RED
GRN/RED
GRN/WHT
LT GRN/RED
ORG
RED/YEL
PNK/GRN
RED/WHT
GRN/YEL
BLK
BLK/YEL
BLK
LT GRN/BLK
GRN/RED
BRN/WHT
BRN/BLK
ORG
BLU/GRN
YEL/RED
RED/WHT
GRN/YEL
GRN/BLK
G301
A/T
M/T
SUB GAUGE
FUEL GAUGE
FUEL TEMP GAUGE
FUEL GAUGE SUB MODULE
FUEL PUMP & FUEL GAUGE MODULE
ATMOSPHERIC PRESSURE SENSOR
THROTTLE POSITION SENSOR
INSTRUMENT CLUSTER SYSTEM
ENGINE COOLANT TEMPERATURE SENSOR
OXYGEN SENSOR (FRONT)
OXYGEN SENSOR (REAR)
TRANSMISSION CONTROL MODULE
VEHICLE SPEED SENSOR (M/T)

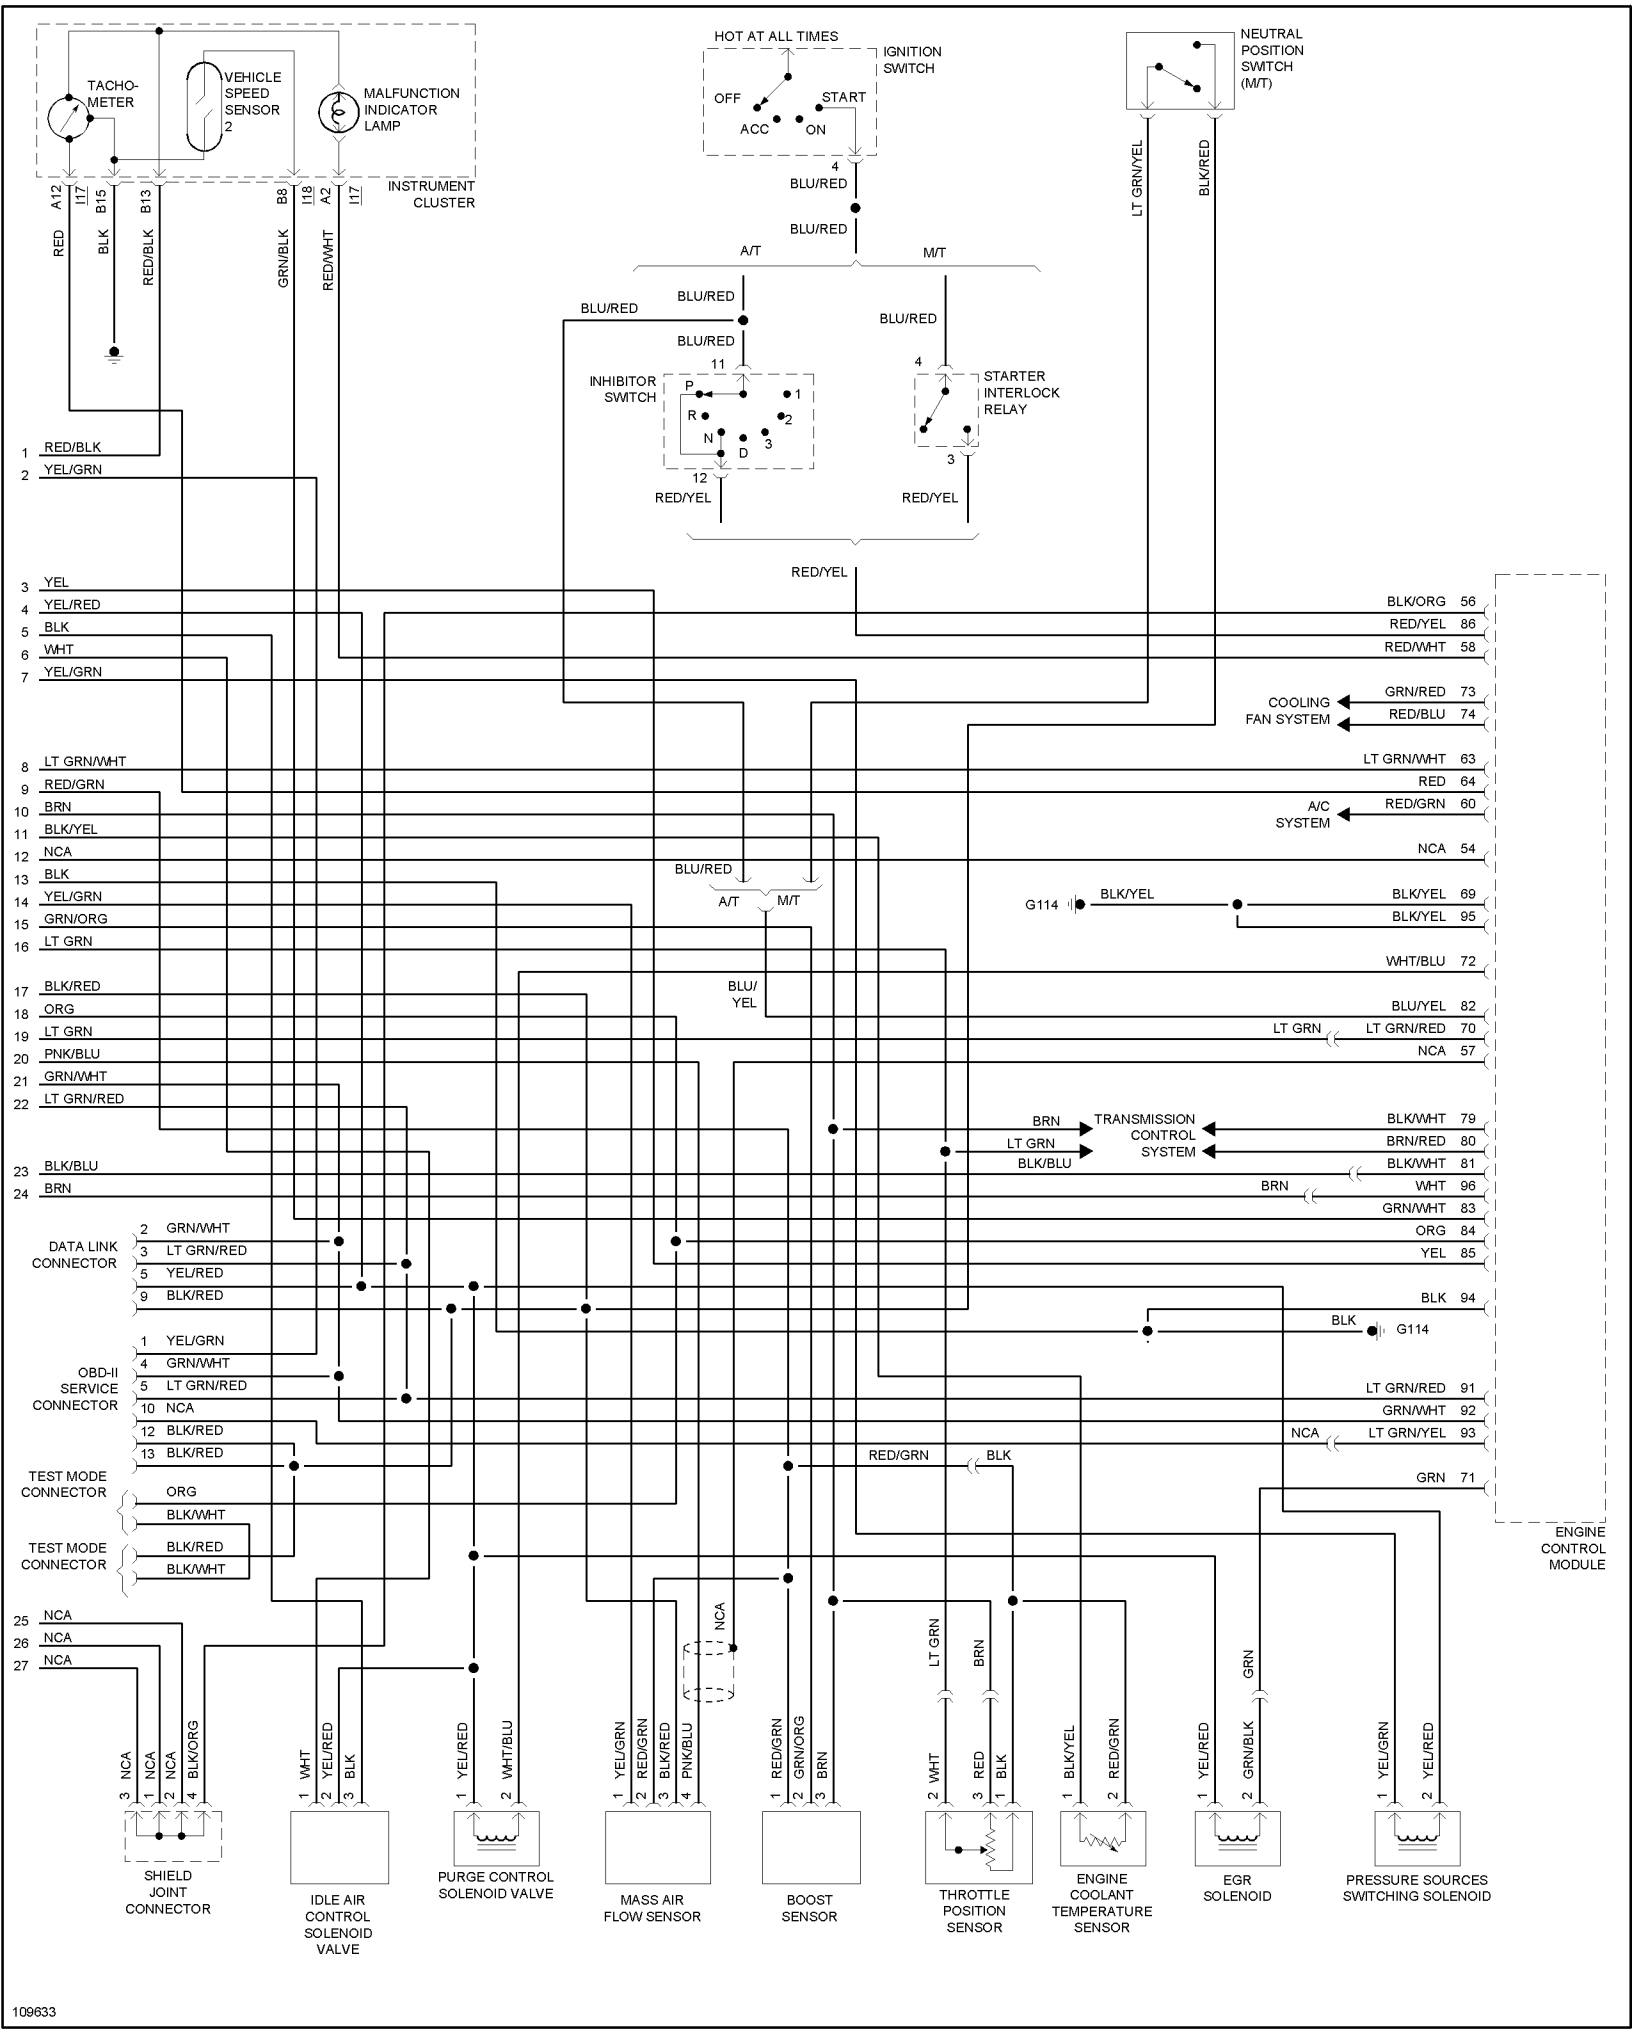
142889

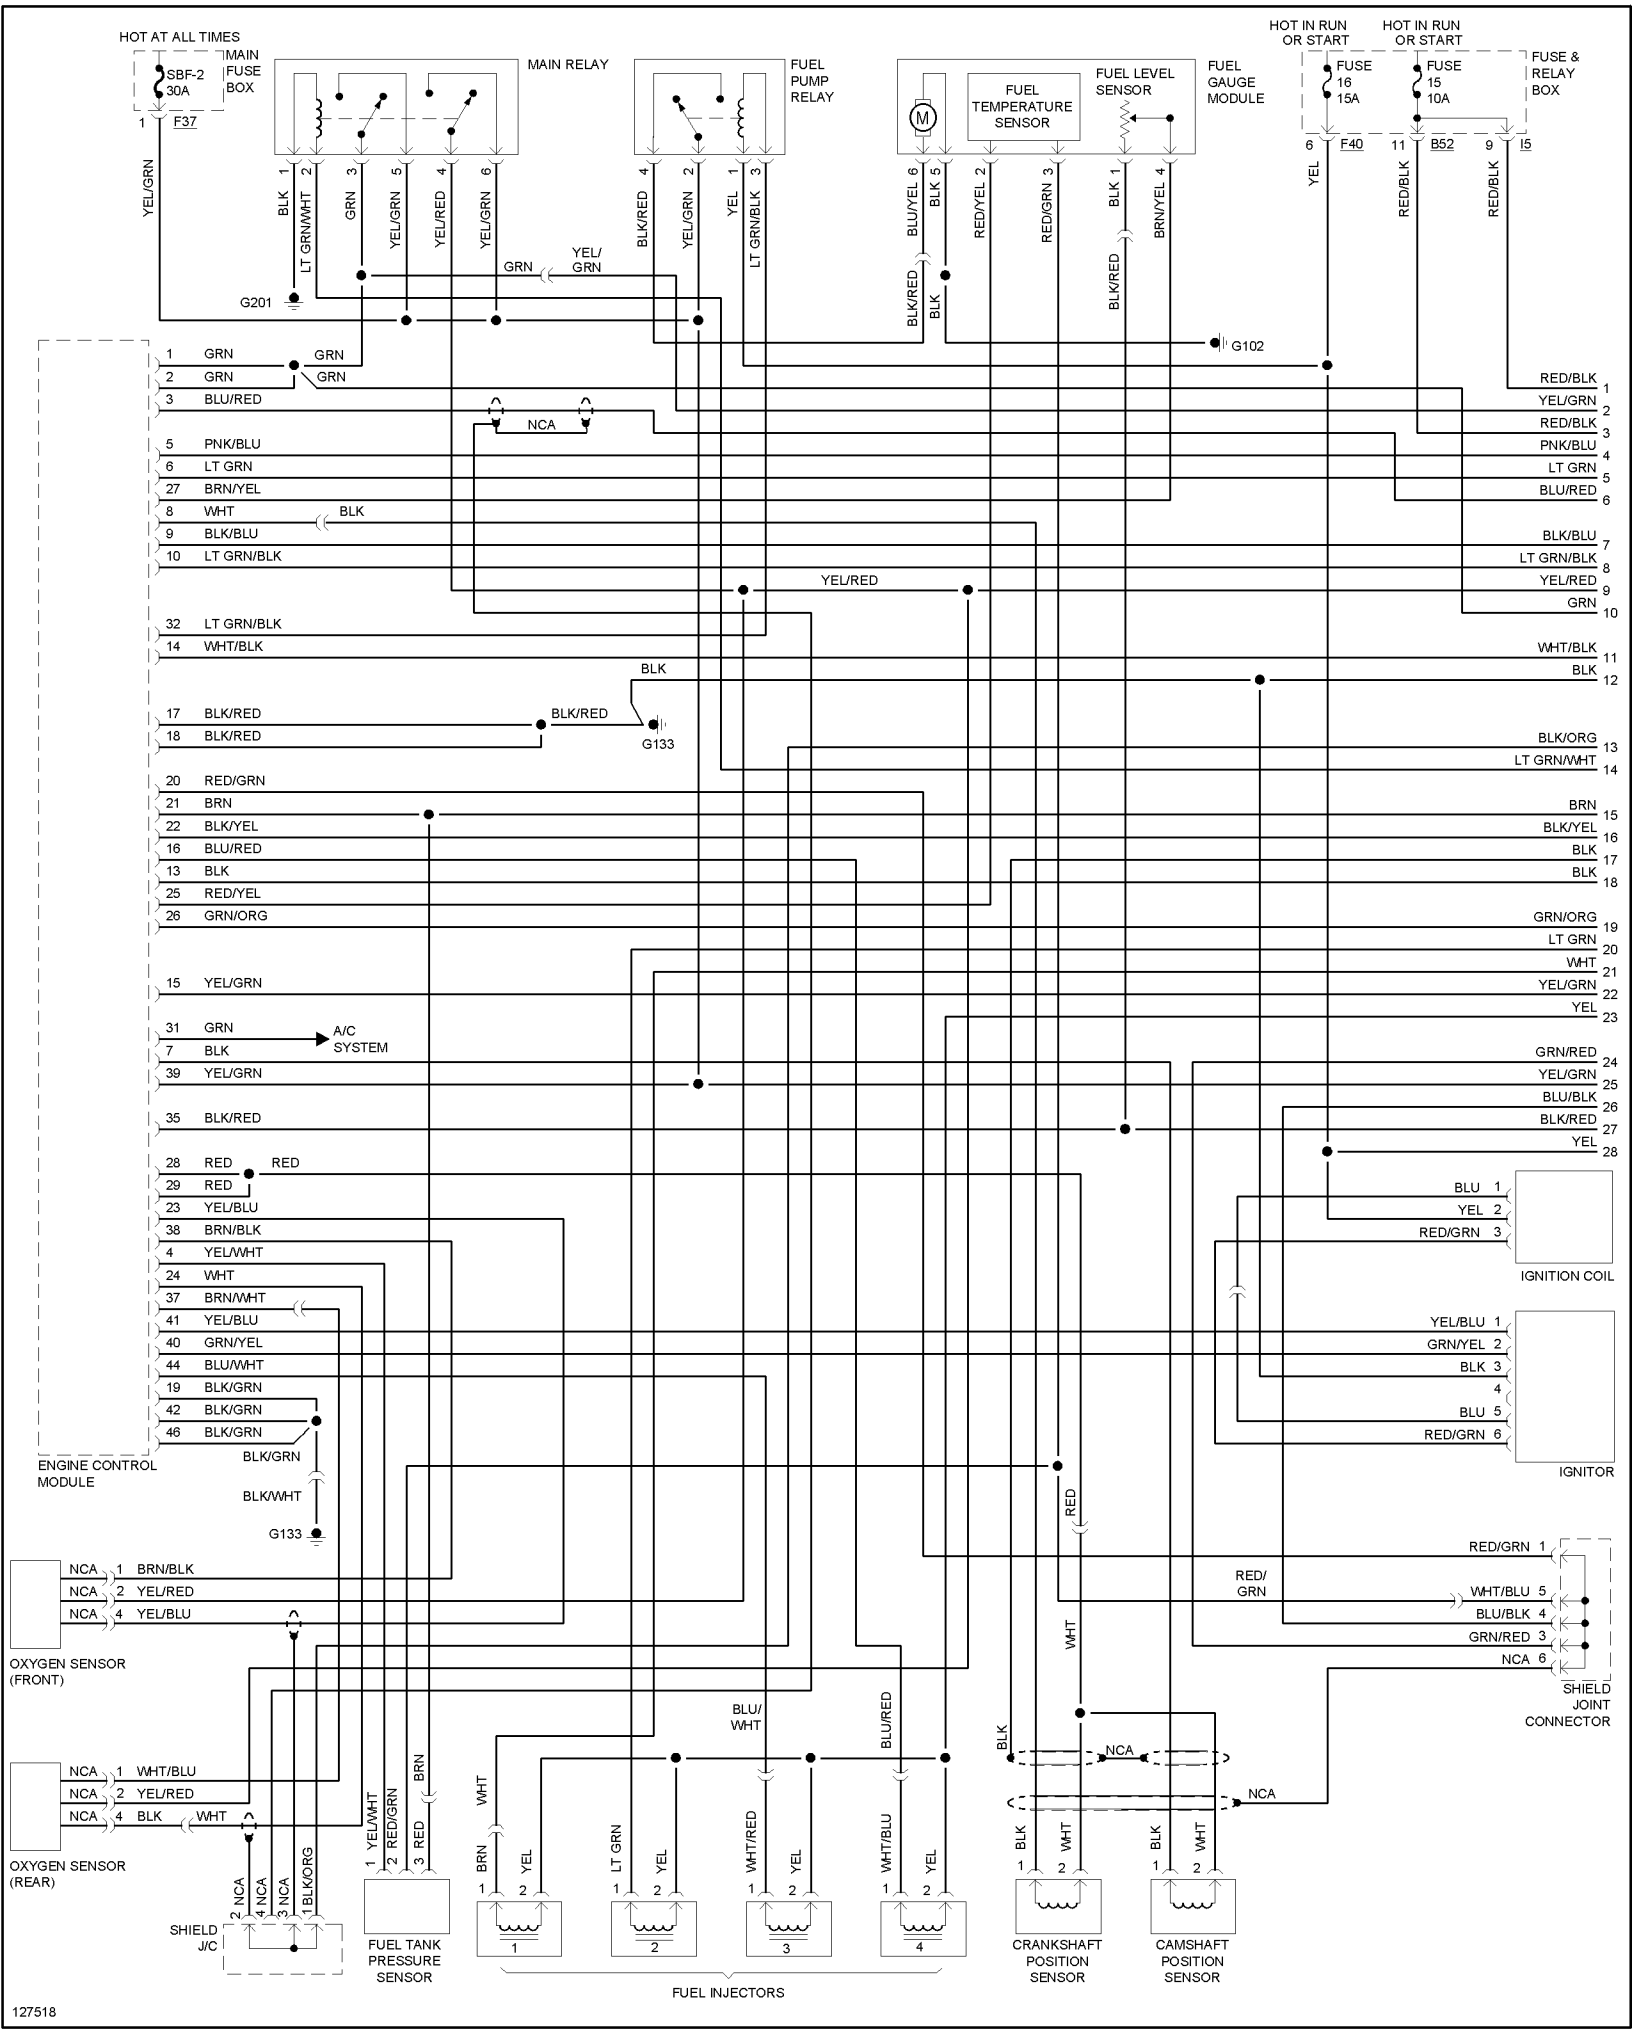

FUEL INJECTORS
HOT IN ON OR START
FUSE & RELAY BOX
FUSE 18 15A
B152
AIR ASSIST SOLENOID VALVE
PURGE CONTROL SOLENOID VALVE
DRAIN VALVE
FUEL TANK PRESSURE CONTROL SOLENOID VALVE
COOLING FANS SYSTEM
AIR CONDITIONING SYSTEM
ENGINE CONTROL MODULE
B134
INSTRUMENT CLUSTER
SPEEDOMETER & TACHOMETER CIRCUIT
FUEL GUAGE
MALFUNCTION INDICATOR LAMP
TEST MODE CONNECTOR
TEST MODE CONNECTOR
DIAGNOSIS CONNECTOR
IDLE AIR CONTROL SOLENOID VALVE
IGNITION COIL & IGNITOR ASSEMBLY
G115
142903

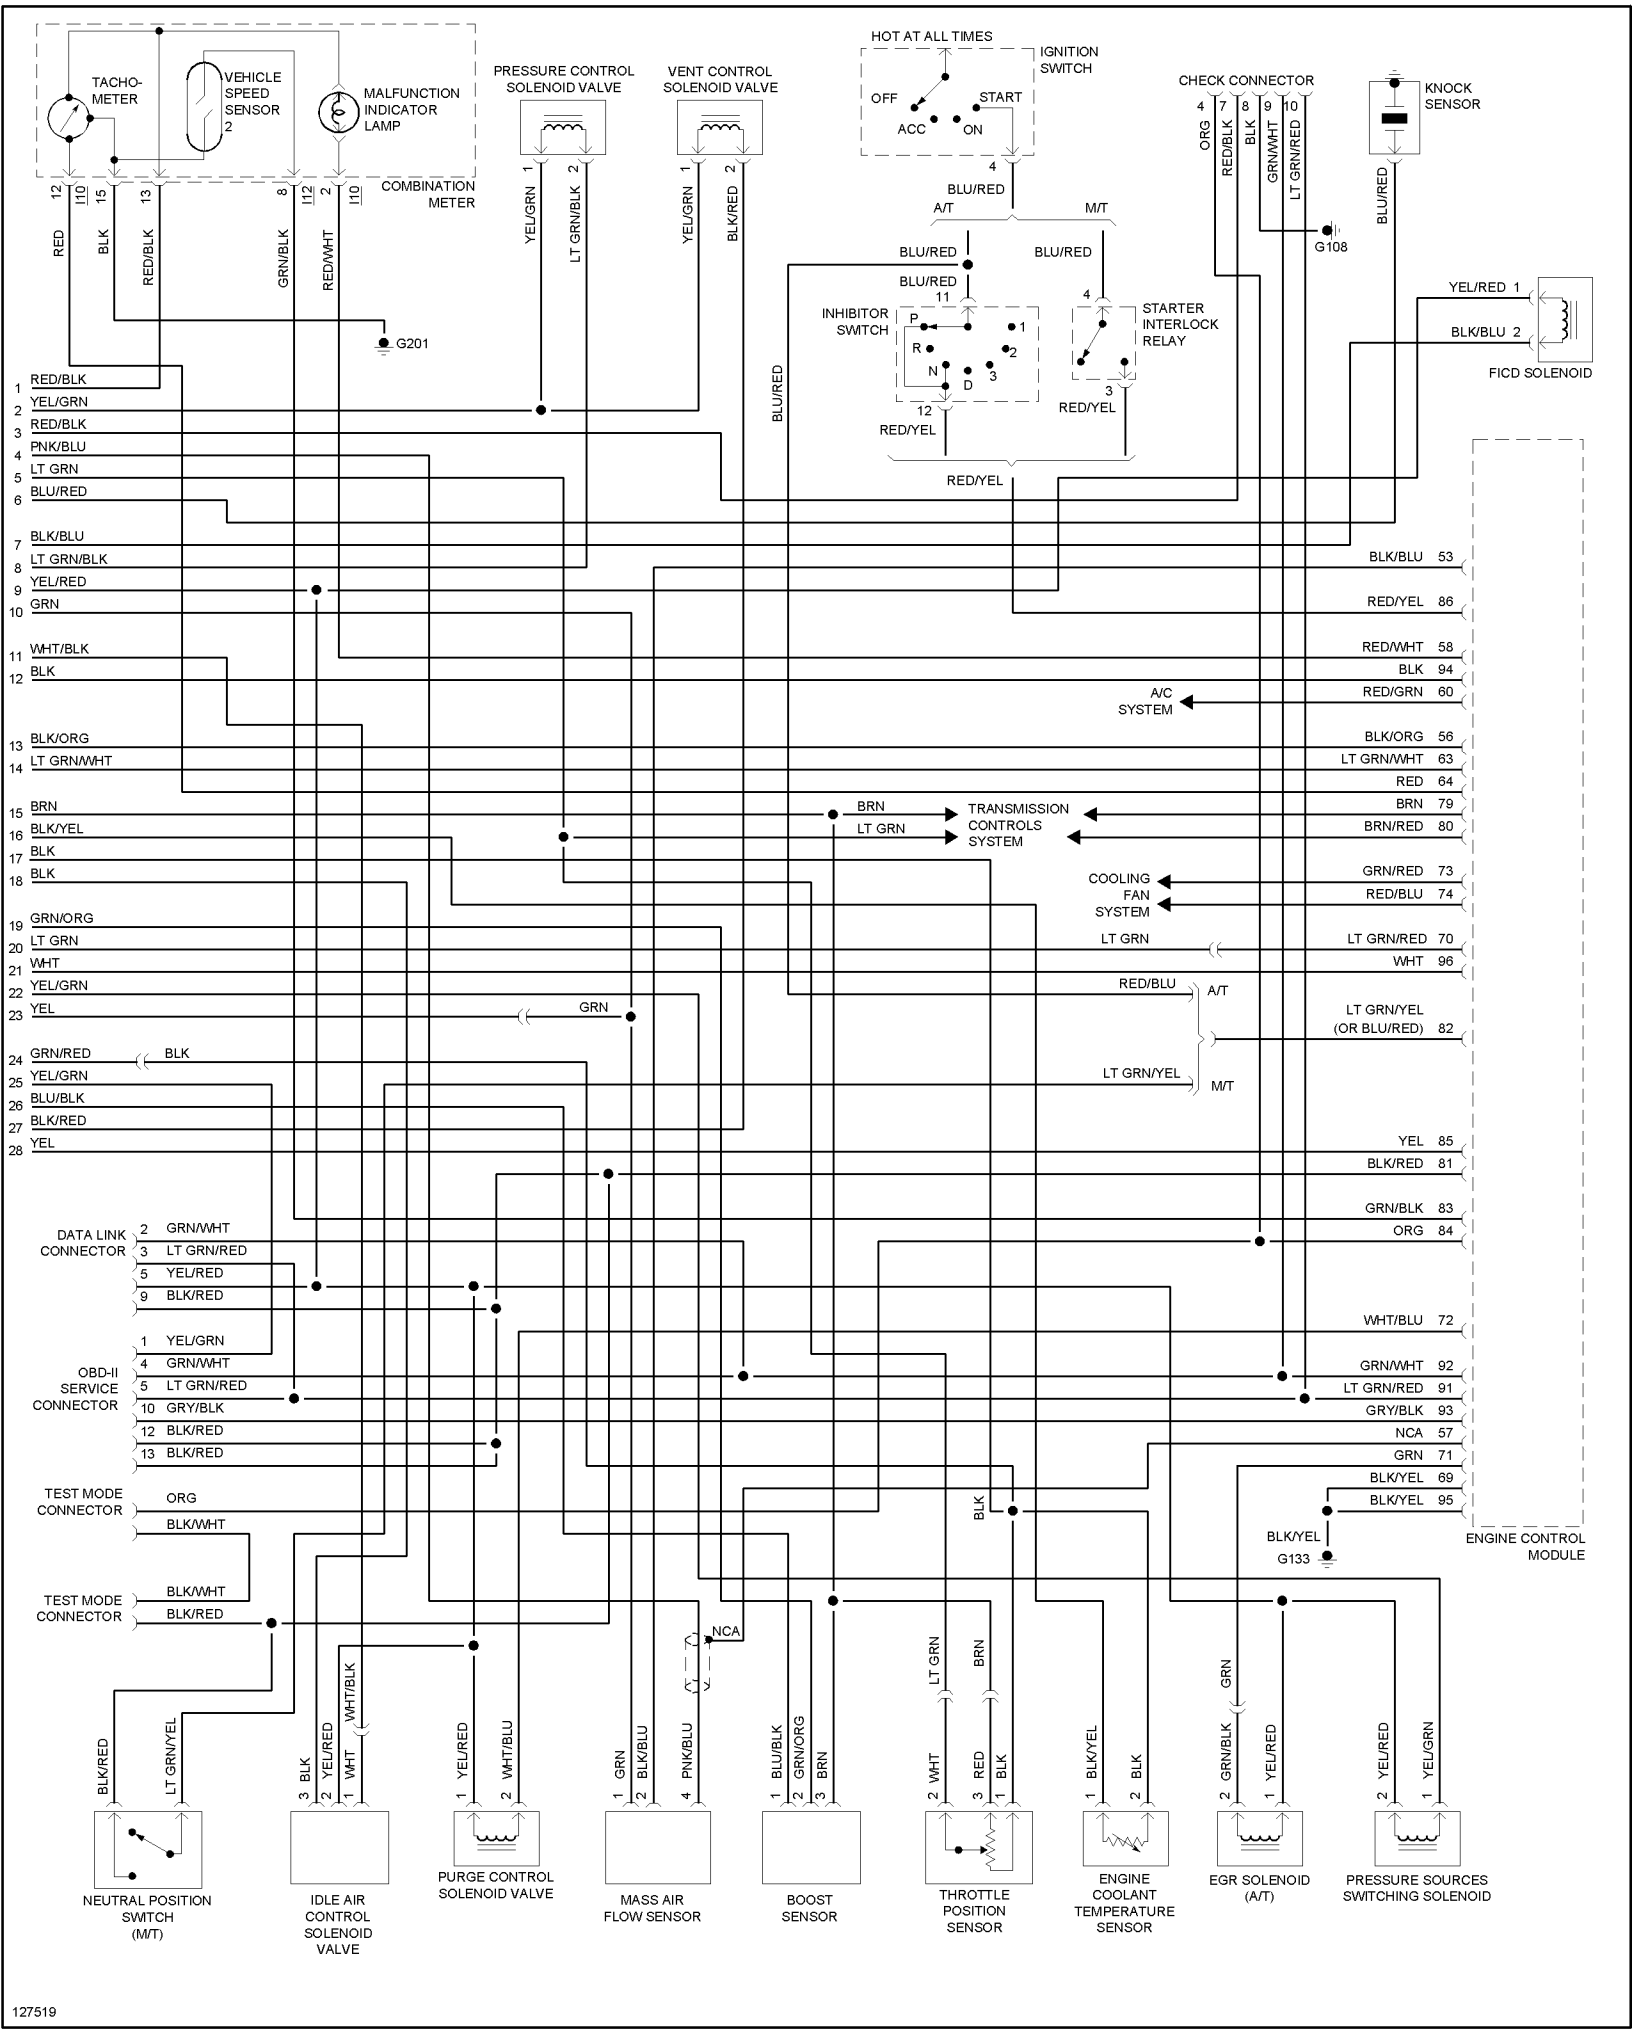

HOT AT ALL TIMES
MAIN FUSE BOX
SBF-2 30A
F26
MAIN RELAY
FUEL PUMP RELAY
FUEL TEMPERATURE SENSOR
FUEL LEVEL SENSOR
FUEL PUMP UNIT
HOT IN RUN OR START
HOT IN RUN OR START
FUSE 16 15A
FUSE 15 10A
FUSE AND RELAY BOX
A6 F34 E11 B35 F9 I5
ENGINE CONTROL MODULE
A/C SYSTEM
IGNITION COIL
IGNITOR
FRONT OXYGEN SENSOR
REAR OXYGEN SENSOR
SHIELD J/C
FUEL TANK PRESSURE SENSOR
FUEL INJECTORS
CRANKSHAFT POSITION SENSOR
CAMSHAFT POSITION SENSOR
AIR INJECTION SYSTEM DIAGNOSIS SOLENOID VALVE (A/T)
AIR SUCTION SOLENOID VALVE (A/T)
SHIELD JOINT CONNECTOR
G120
109619

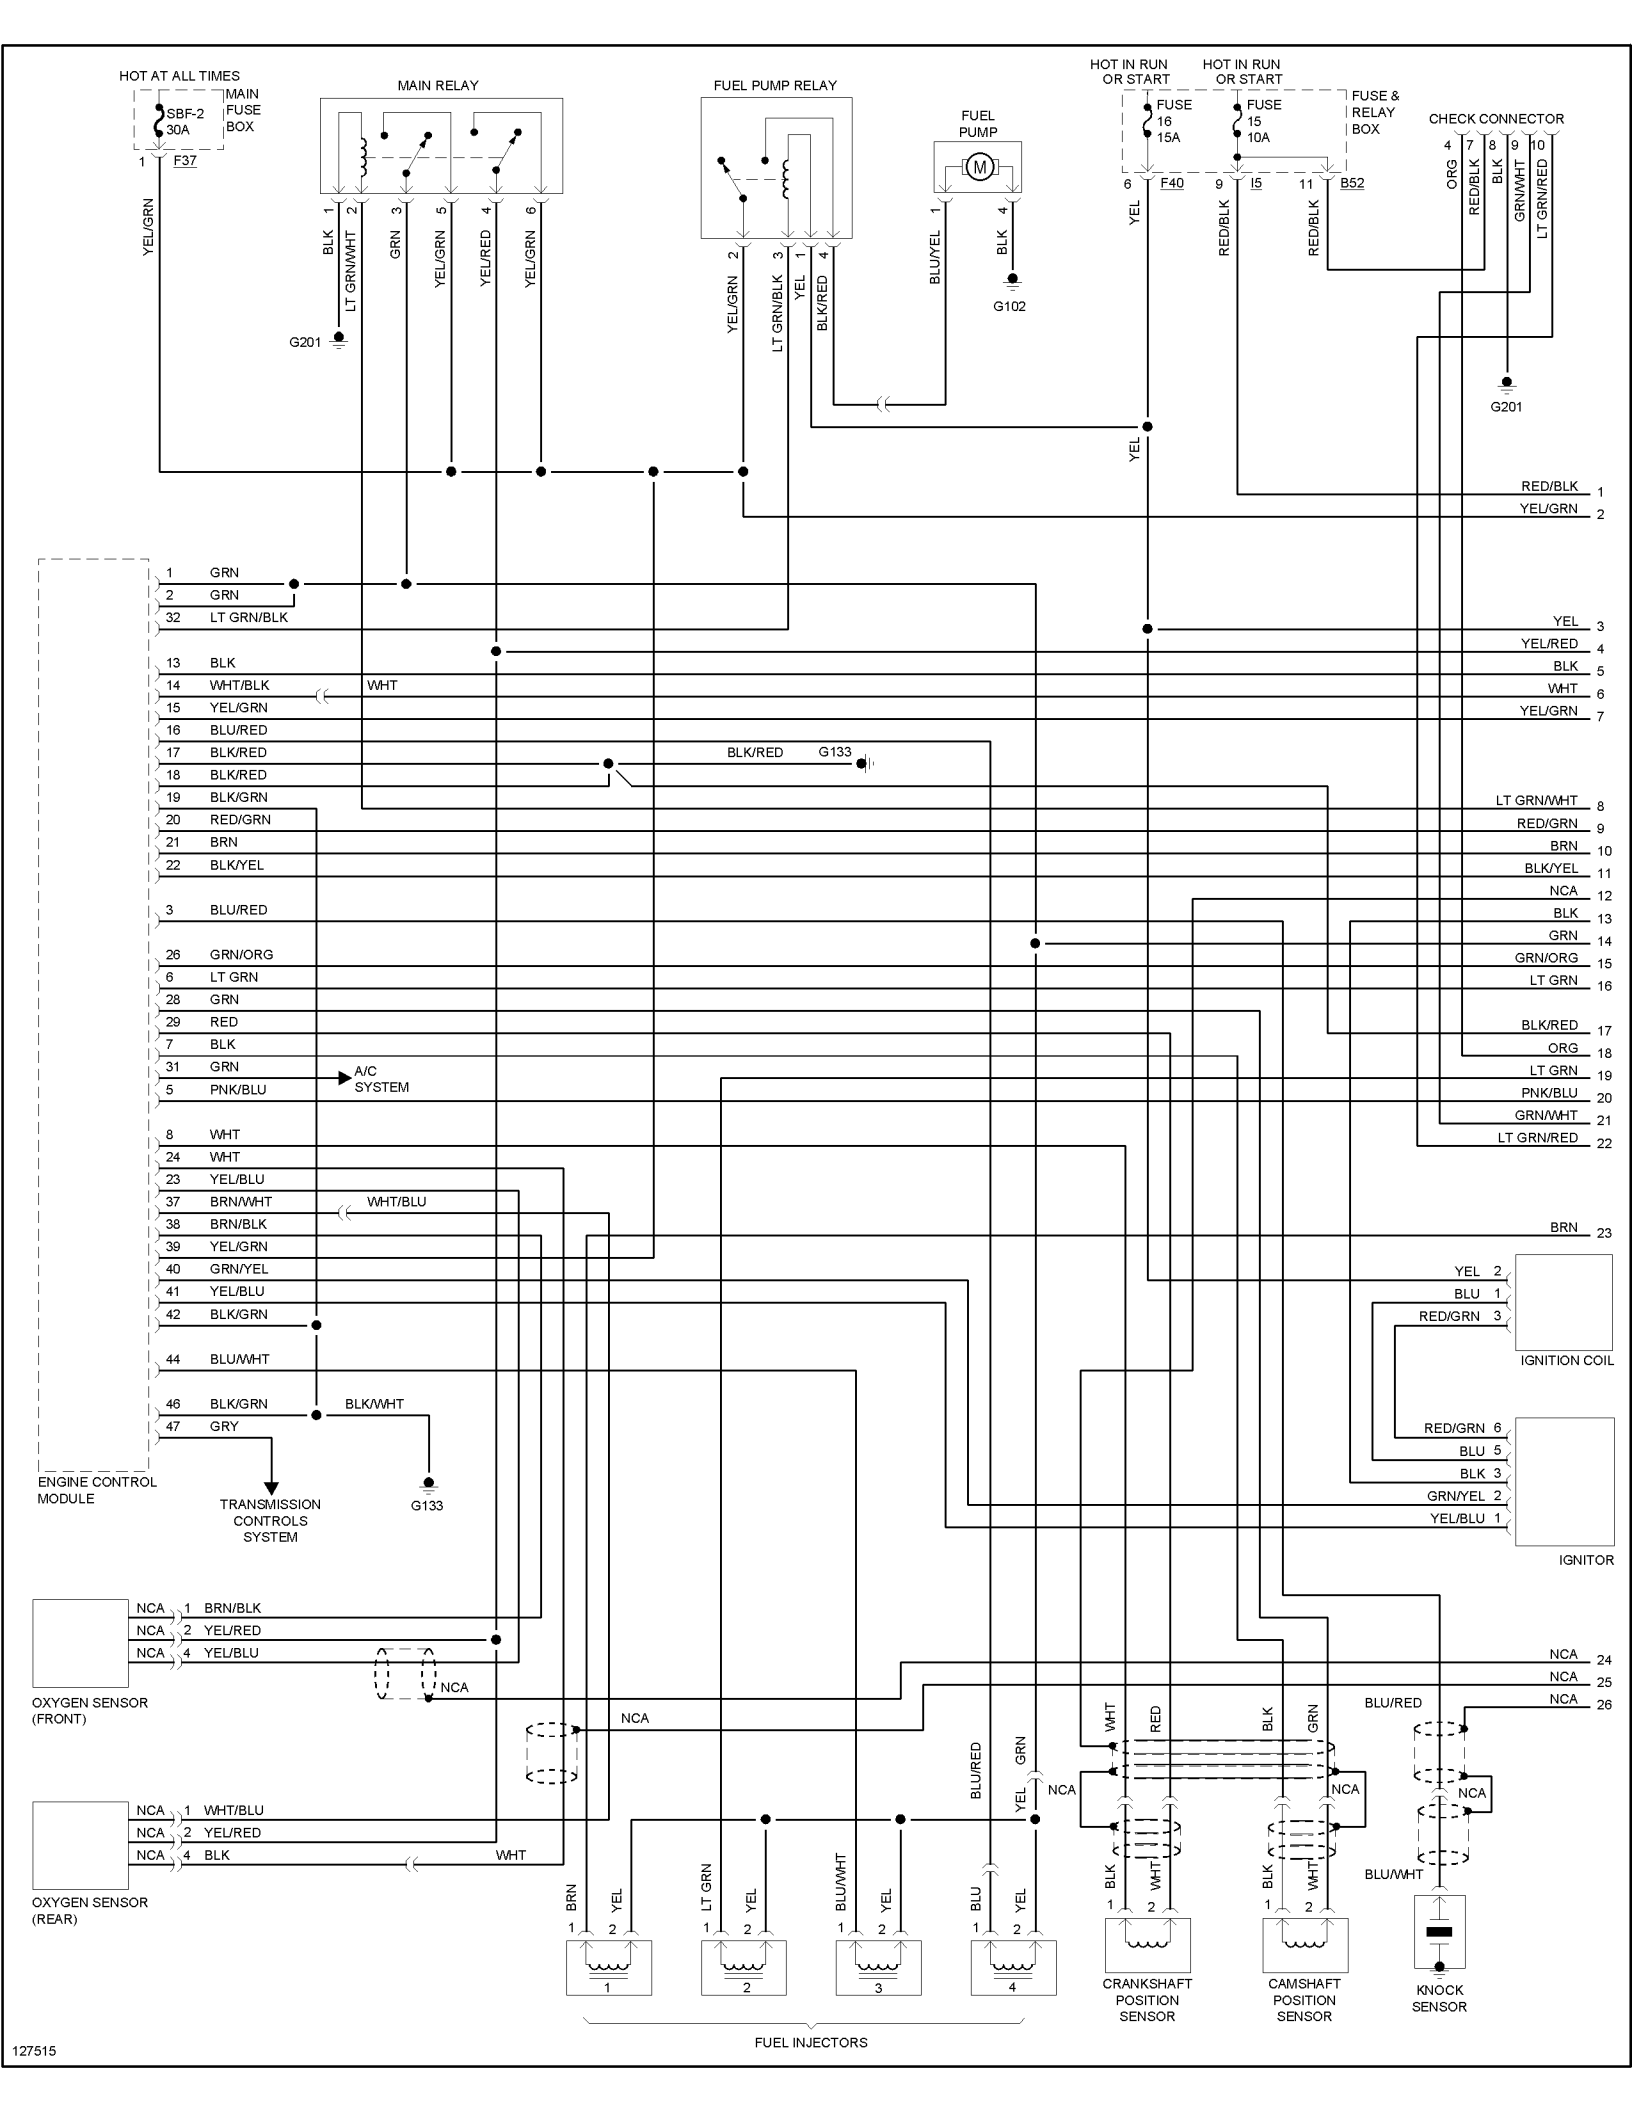

TACHO-METER
VEHICLE SPEED SENSOR 2
MALFUNCTION INDICATOR LAMP
INSTRUMENT CLUSTER
A12 I17 B15 B13 B8 I18 A2 I17
RED BLK RED/BLK GRN/BLK RED/WHT
PRESSURE CONTROL SOLENOID VALVE
VENT CONTROL SOLENOID VALVE
YEL/GRN YEL/RED LT GRN/BLK BLU/WHT BLK/RED
HOT AT ALL TIMES
IGNITION SWITCH
OFF ACC ON START
BLU/RED
A/T M/T
INHIBITOR SWITCH
P R N D 1 2 3
STARTER INTER-LOCK RELAY
RED/YEL
CHECK CONNECTOR
ORG RED/BLK BLK GRN/WHT LT GRN/RED
BLK/BLU 2
YEL/RED 1
FICD SOLENOID
1 RED/BLK
2 YEL/RED
3 RED/BLK
4 PNK/BLU
5 LT GRN
6 BLK/BLU
7 BLU/WHT
8 YEL/RED
9 YEL/GRN
10 BLK/RED
11 WHT/BLK
12 BLK
13 BLK/RED
14 LT GRN/WHT
15 BRN
16 BLK/YEL
17 BLK
18 BLU/ORG
19 WHT/BLK
20 WHT
21 YEL/GRN
22 YEL
23 BLK/BLU
24 GRN/RED BLK/WHT
25 YEL/GRN
26 BLU/BLK
27 BLK/RED
28 YEL
BRN LT GRN
TRANSMISSION CONTROLS SYSTEM
A/C SYSTEM
COOLING FAN SYSTEM
BLU/RED LT GRN/YEL A/T M/T
G120
RED/WHT 58
BLK 94
RED/YEL 86
BLK/ORG 56
LT GRN/WHT 63
RED 64
BRN/RED 80
RED/GRN 60
WHT/BLK LT GRN/RED 70
GRN/RED 73
RED/BLU 74
BLK/YEL 69
BLK/YEL 95
WHT 96
BLK/WHT 81
BLU/YEL 82
GRN/BLK 83
YEL 85
WHT/BLU 72
NCA 57
GRN/WHT 92
LT GRN/RED 91
LT GRN/YEL 93
ORG 84
GRN 71
ENGINE CONTROL MODULE
DATA LINK CONNECTOR
2 GRN/WHT
3 LT GRN/RED
5 YEL/RED
9 BLK/RED
OBD-II SERVICE CONNECTOR
1 YEL/GRN
4 GRN/WHT
5 LT GRN/RED
10 LT GRN/YEL
12 BLK/RED
13 BLK/RED
TEST MODE CONNECTOR
ORG
BLK/WHT
TEST MODE CONNECTOR
BLK/RED
BLK/WHT
NCA
BLK/RED LT GRN/YEL
3 WHT 2 YEL/RED 1 BLK BLK WHT/BLK
1 YEL/RED 2 WHT/BLU
1 YEL/GRN 2 BLK/BLU 3 BLK/RED 4 PNK/BLU
1 BLU/BLK 2 GRN/ORG 3 BRN
2 WHT 3 RED 1 BLK/WHT LT GRN BRN
1 BLK/YEL 2 BLK/WHT
1 YEL/RED 2 WHT/BLK GRN
1 YEL/GRN 2 YEL/RED
NEUTRAL POSITION SWITCH (M/T)
IDLE AIR CONTROL SOLENOID VALVE
PURGE CONTROL SOLENOID VALVE
MASS AIR FLOW SENSOR
BOOST SENSOR
THROTTLE POSITION SENSOR
ENGINE COOLANT TEMPERATURE SENSOR
EGR SOLENOID (A/T)
PRESSURE SOURCES SWITCHING SOLENOID
109622

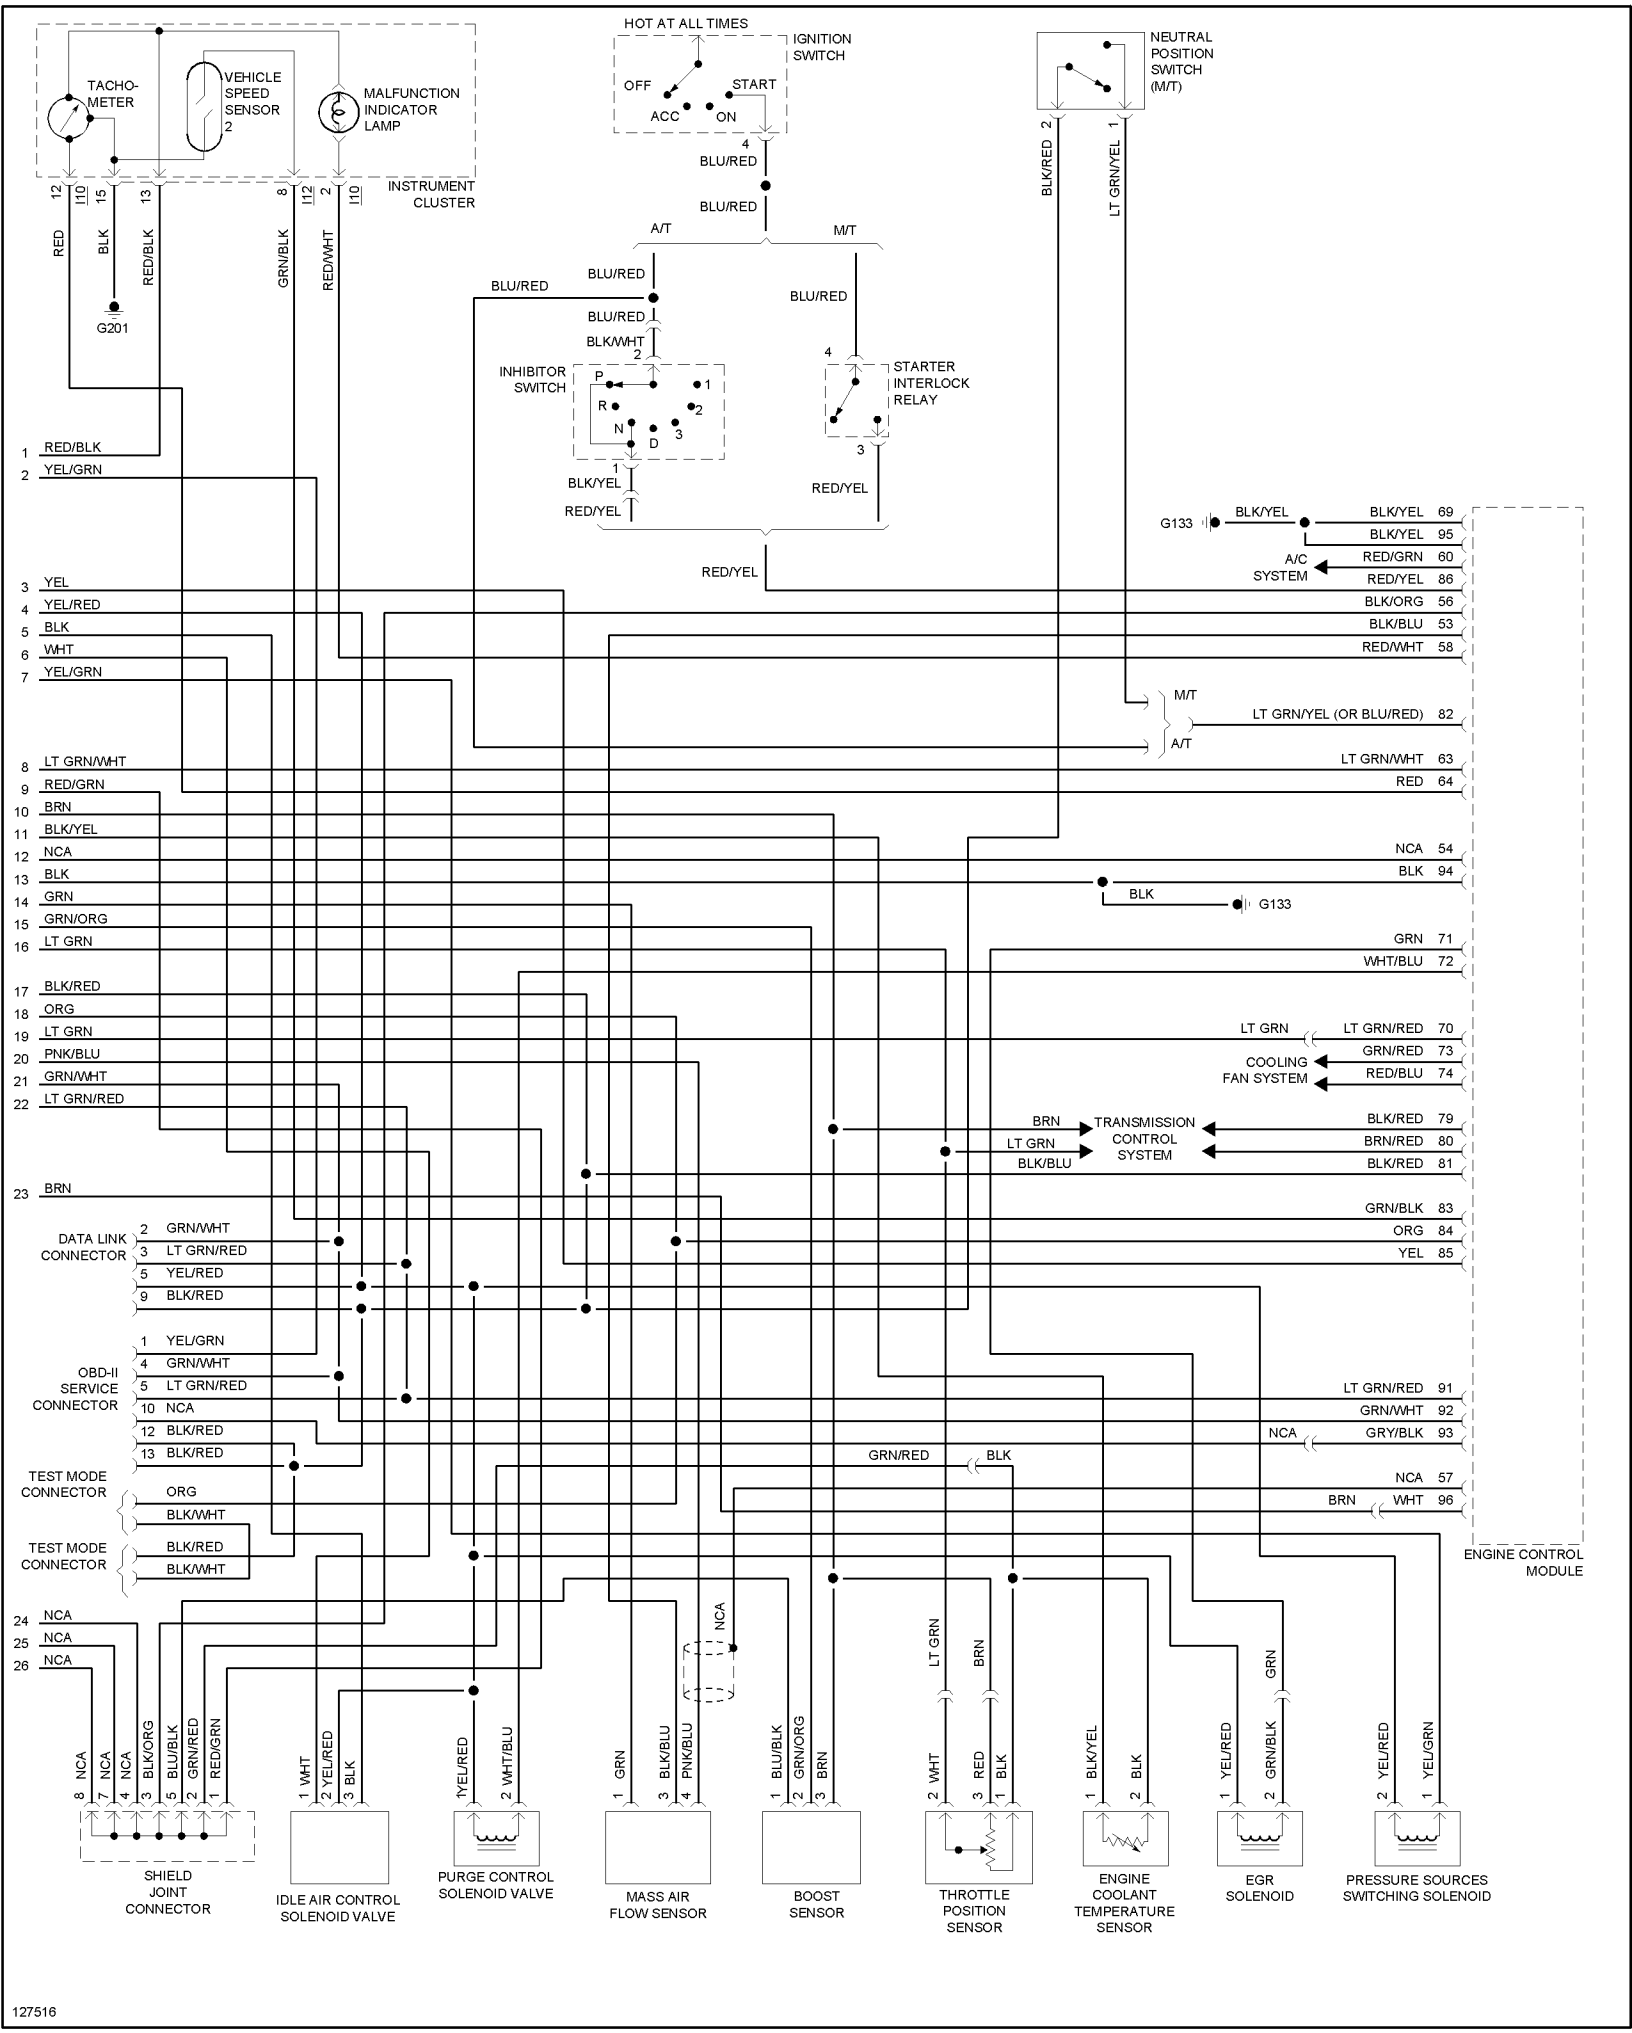

HOT AT ALL TIMES
SBF-2 30A
MAIN FUSE BOX
F26
MAIN RELAY
FUEL PUMP RELAY
FUEL PUMP
HOT IN RUN OR START
FUSE 16 15A
FUSE 15 10A
FUSE AND RELAY BOX
CHECK CONNECTOR
ENGINE CONTROL MODULE
A/C SYSTEM
TRANSMISSION CONTROLS SYSTEM
IGNITION COIL
IGNITOR
FRONT OXYGEN SENSOR
REAR OXYGEN SENSOR
CRANKSHAFT POSITION SENSOR
CAMSHAFT POSITION SENSOR
KNOCK SENSOR
FUEL INJECTORS
109626

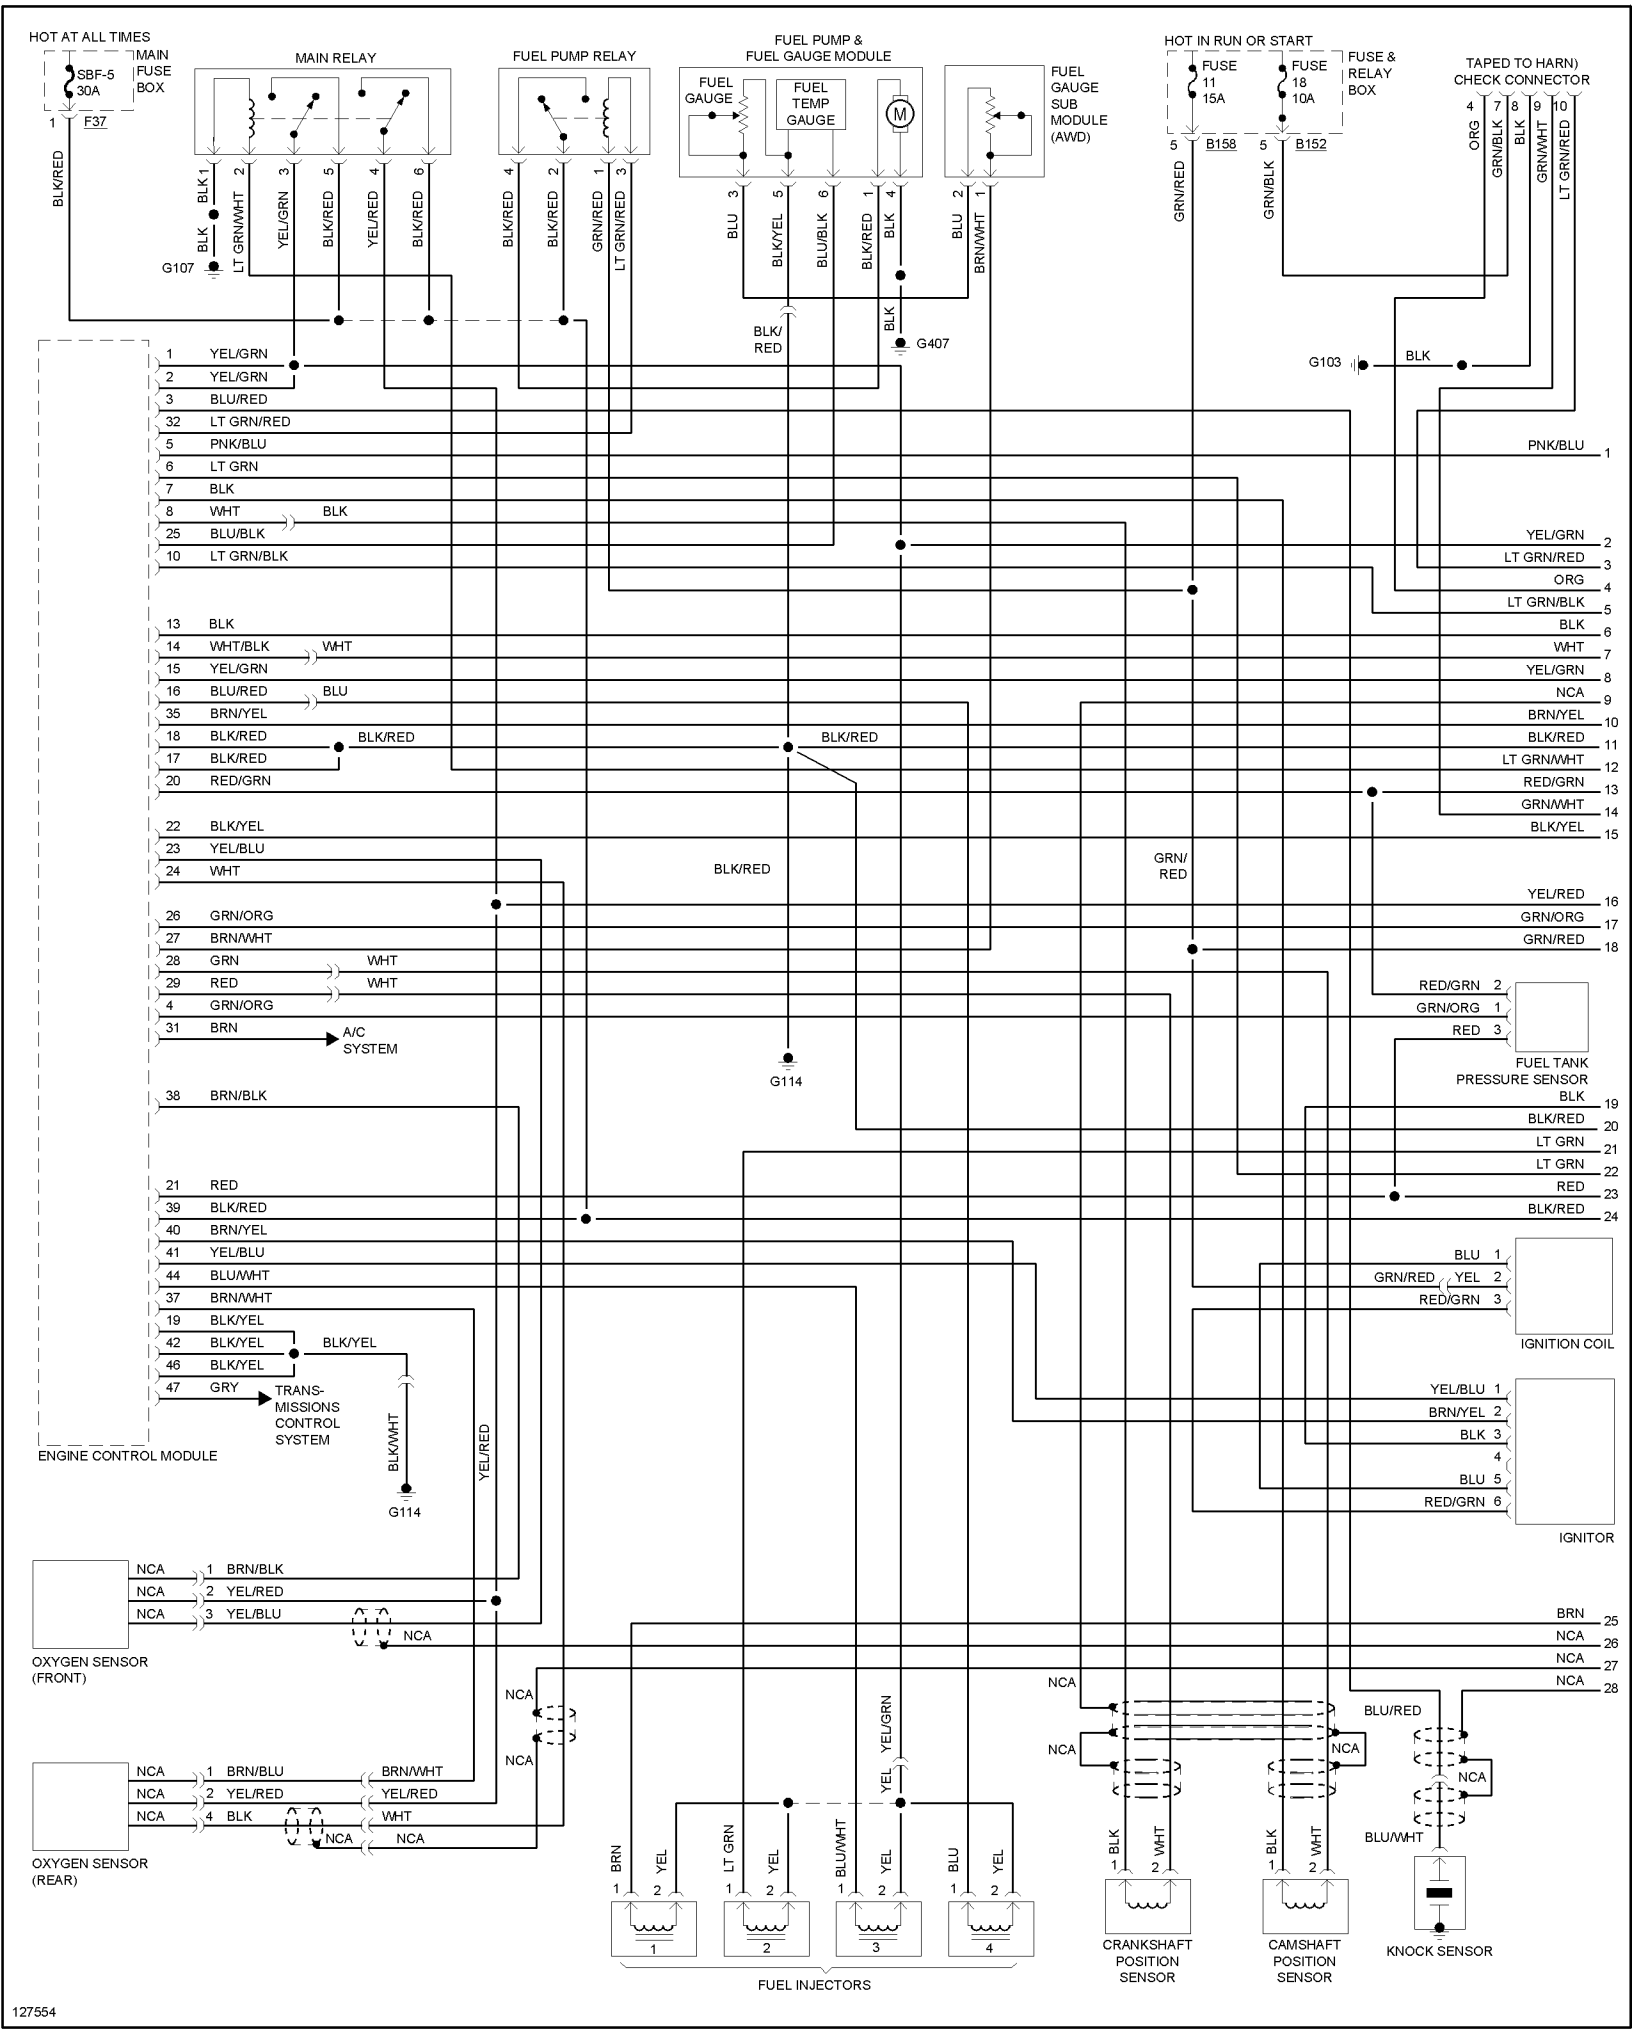

TACHO-METER
VEHICLE SPEED SENSOR 2
MALFUNCTION INDICATOR LAMP
INSTRUMENT CLUSTER
A12 I17 B15 B13 B8 I18 A2 I17
RED BLK RED/BLK GRN/BLK RED/WHT
HOT AT ALL TIMES
IGNITION SWITCH
OFF START ACC ON
4
BLU/RED
BLU/RED
A/T M/T
BLU/RED BLU/RED
BLU/RED BLU/RED
11 4
INHIBITOR SWITCH
P R N D 1 2 3
STARTER INTERLOCK RELAY
12 3
RED/YEL RED/YEL
RED/YEL
NEUTRAL POSITION SWITCH (M/T)
LT GRN/YEL BLK/RED
1 RED/BLK
2 YEL/GRN
3 YEL
4 YEL/RED
5 BLK
6 WHT
7 YEL/GRN
8 LT GRN/WHT
9 RED/GRN
10 BRN
11 BLK/YEL
12 NCA
13 BLK
14 YEL/GRN
15 GRN/ORG
16 LT GRN
17 BLK/RED
18 ORG
19 LT GRN
20 PNK/BLU
21 GRN/WHT
22 LT GRN/RED
23 BLK/BLU
24 BRN
BLU/RED
A/T M/T
BLU/ YEL
BLK/ORG 56
RED/YEL 86
RED/WHT 58
COOLING FAN SYSTEM
GRN/RED 73
RED/BLU 74
LT GRN/WHT 63
RED 64
A/C SYSTEM
RED/GRN 60
NCA 54
G114 BLK/YEL
BLK/YEL 69
BLK/YEL 95
WHT/BLU 72
BLU/YEL 82
LT GRN LT GRN/RED 70
NCA 57
BRN
LT GRN
BLK/BLU
TRANSMISSION CONTROL SYSTEM
BLK/WHT 79
BRN/RED 80
BLK/WHT 81
BRN WHT 96
GRN/WHT 83
ORG 84
YEL 85
BLK 94
BLK G114
NCA LT GRN/YEL 93
LT GRN/RED 91
GRN/WHT 92
GRN 71
ENGINE CONTROL MODULE
DATA LINK CONNECTOR
2 GRN/WHT
3 LT GRN/RED
5 YEL/RED
9 BLK/RED
OBD-II SERVICE CONNECTOR
1 YEL/GRN
4 GRN/WHT
5 LT GRN/RED
10 NCA
12 BLK/RED
13 BLK/RED
TEST MODE CONNECTOR
ORG
BLK/WHT
TEST MODE CONNECTOR
BLK/RED
BLK/WHT
RED/GRN BLK
25 NCA
26 NCA
27 NCA
3 NCA 1 NCA 2 NCA 4 BLK/ORG
SHIELD JOINT CONNECTOR
1 WHT 2 YEL/RED 3 BLK
IDLE AIR CONTROL SOLENOID VALVE
1 YEL/RED 2 WHT/BLU
PURGE CONTROL SOLENOID VALVE
1 YEL/GRN 2 RED/GRN 3 BLK/RED 4 PNK/BLU
NCA
MASS AIR FLOW SENSOR
1 RED/GRN 2 GRN/ORG 3 BRN
BOOST SENSOR
LT GRN BRN
2 WHT 3 RED 1 BLK
THROTTLE POSITION SENSOR
1 BLK/YEL 2 RED/GRN
ENGINE COOLANT TEMPERATURE SENSOR
1 YEL/RED 2 GRN/BLK
GRN
EGR SOLENOID
1 YEL/GRN 2 YEL/RED
PRESSURE SOURCES SWITCHING SOLENOID
109633

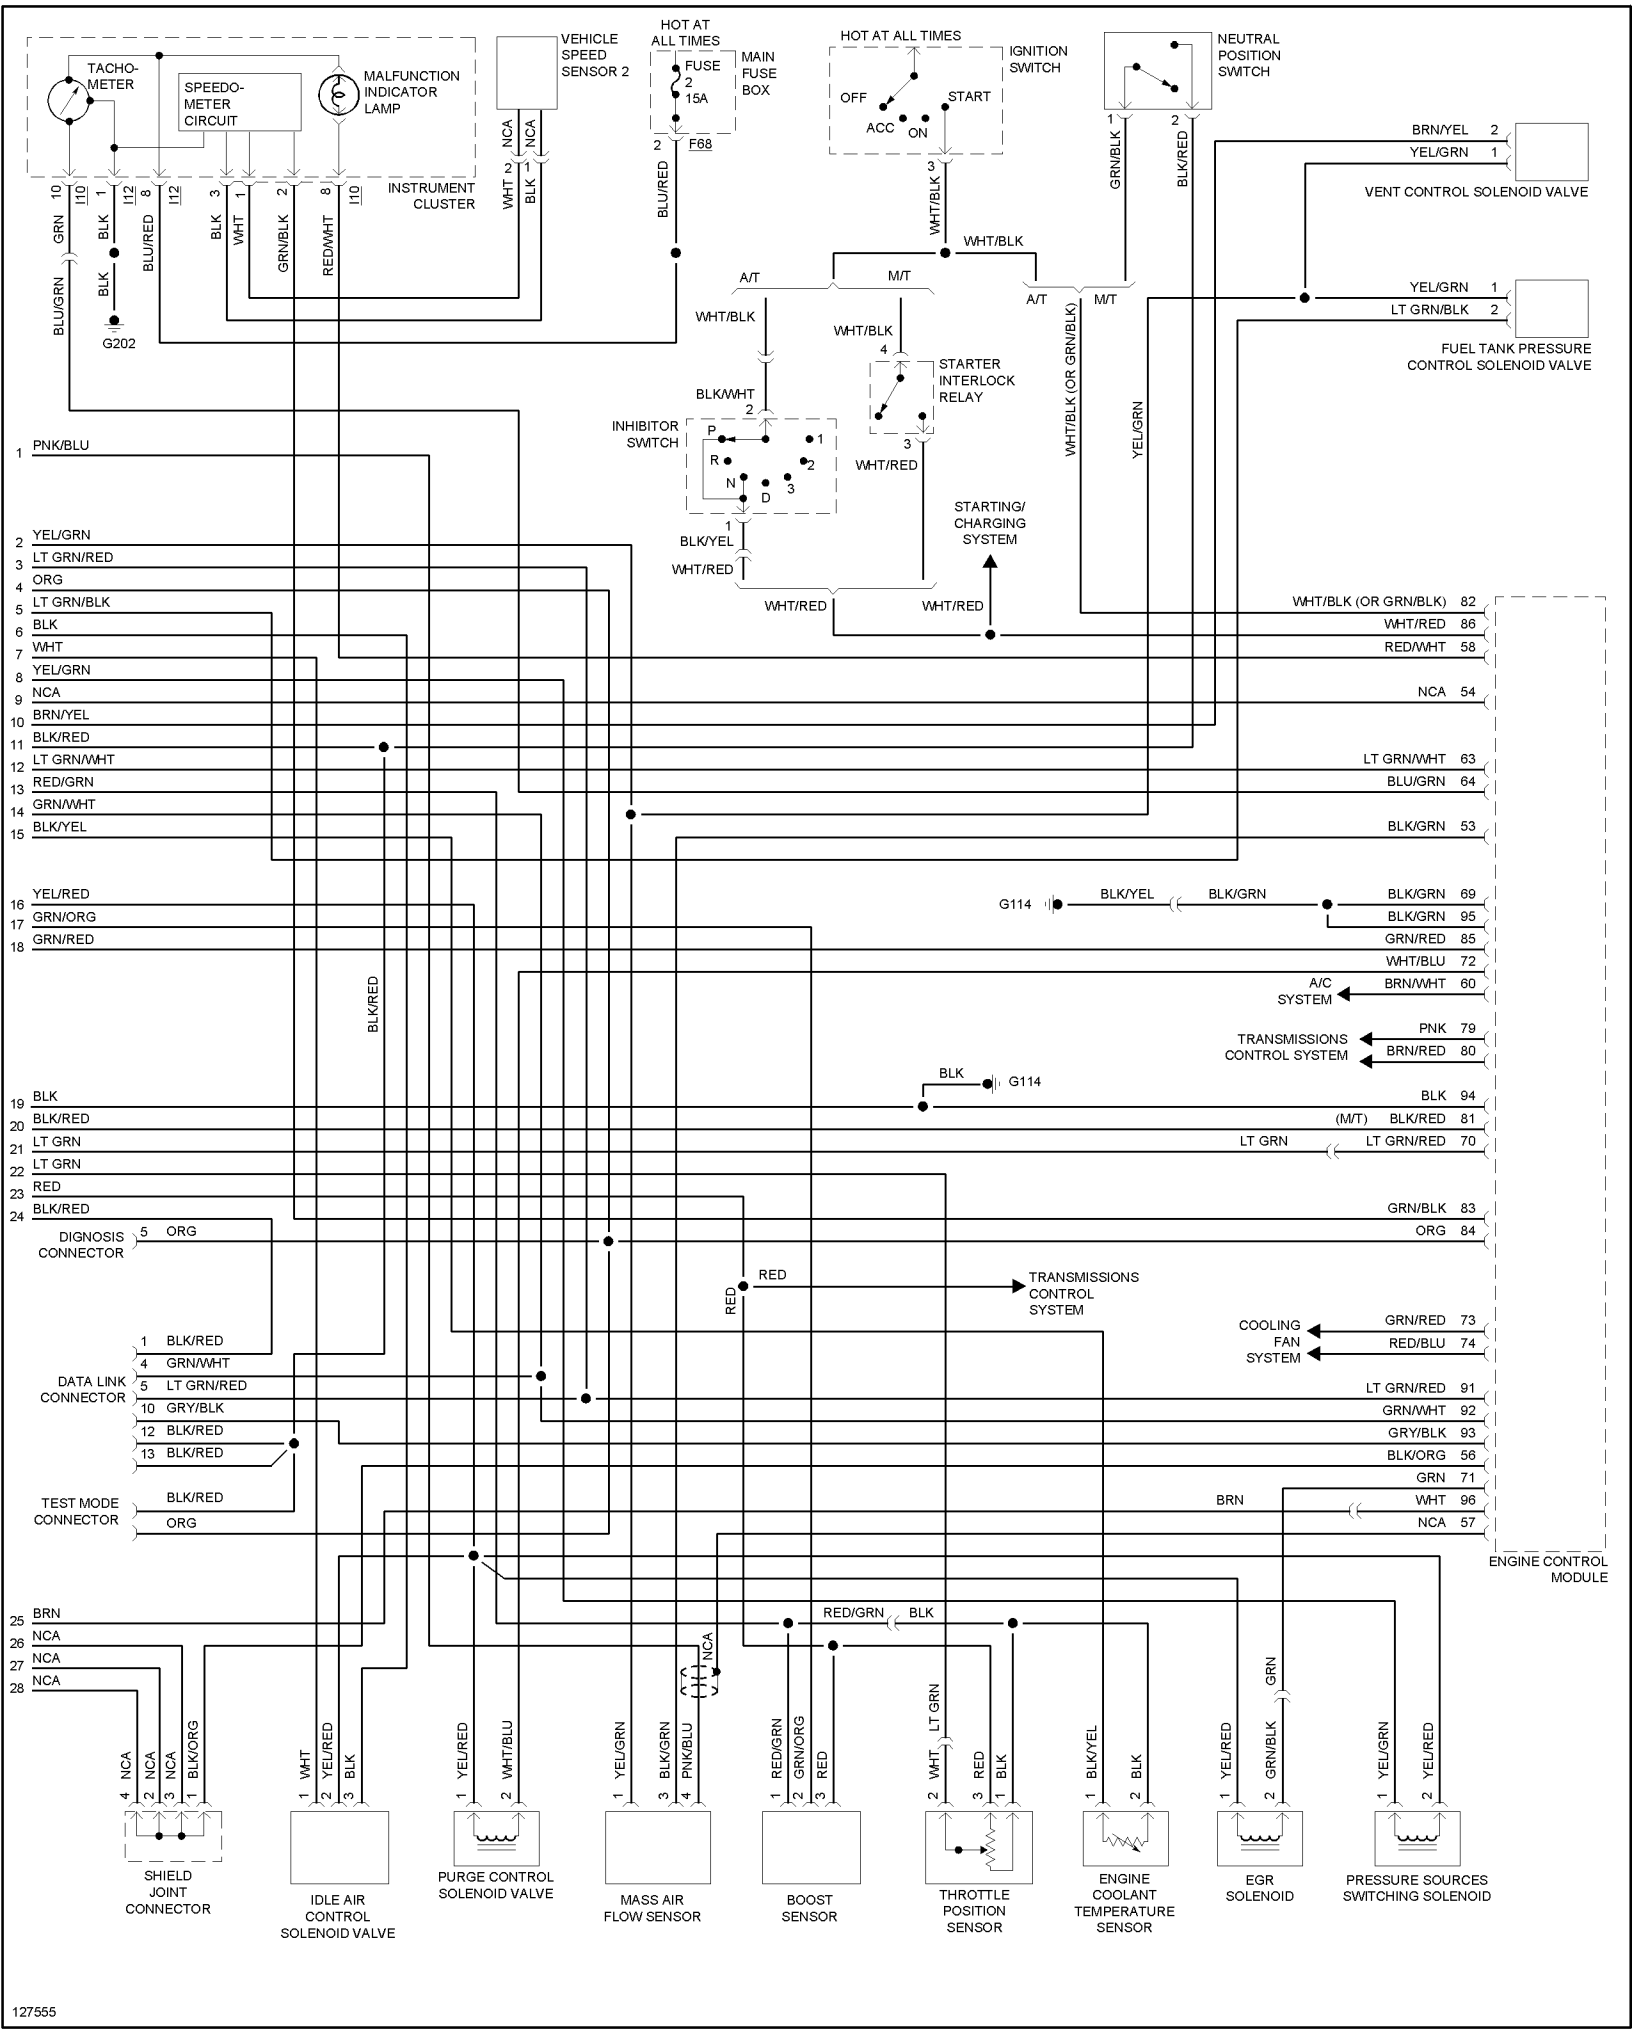

HOT AT ALL TIMES
MAIN FUSE BOX
SBF-2 30A
F37
MAIN RELAY
FUEL PUMP RELAY
FUEL TEMPERATURE SENSOR
FUEL LEVEL SENSOR
FUEL GAUGE MODULE
HOT IN RUN OR START
FUSE 16 15A
FUSE 15 10A
FUSE & RELAY BOX
F40
B52
I5
G201
G102
G133
NCA
ENGINE CONTROL MODULE
A/C SYSTEM
IGNITION COIL
IGNITOR
OXYGEN SENSOR (FRONT)
OXYGEN SENSOR (REAR)
SHIELD J/C
SHIELD JOINT CONNECTOR
FUEL TANK PRESSURE SENSOR
FUEL INJECTORS
CRANKSHAFT POSITION SENSOR
CAMSHAFT POSITION SENSOR
127518


TACHO-METER
VEHICLE SPEED SENSOR 2
MALFUNCTION INDICATOR LAMP
COMBINATION METER
PRESSURE CONTROL SOLENOID VALVE
VENT CONTROL SOLENOID VALVE
HOT AT ALL TIMES
IGNITION SWITCH
OFF
START
ACC
ON
CHECK CONNECTOR
KNOCK SENSOR
G108
G201
INHIBITOR SWITCH
STARTER INTERLOCK RELAY
FICD SOLENOID
A/C SYSTEM
TRANSMISSION CONTROLS SYSTEM
COOLING FAN SYSTEM
DATA LINK CONNECTOR
OBD-II SERVICE CONNECTOR
TEST MODE CONNECTOR
TEST MODE CONNECTOR
G133
ENGINE CONTROL MODULE
NEUTRAL POSITION SWITCH (M/T)
IDLE AIR CONTROL SOLENOID VALVE
PURGE CONTROL SOLENOID VALVE
MASS AIR FLOW SENSOR
BOOST SENSOR
THROTTLE POSITION SENSOR
ENGINE COOLANT TEMPERATURE SENSOR
EGR SOLENOID (A/T)
PRESSURE SOURCES SWITCHING SOLENOID
127519

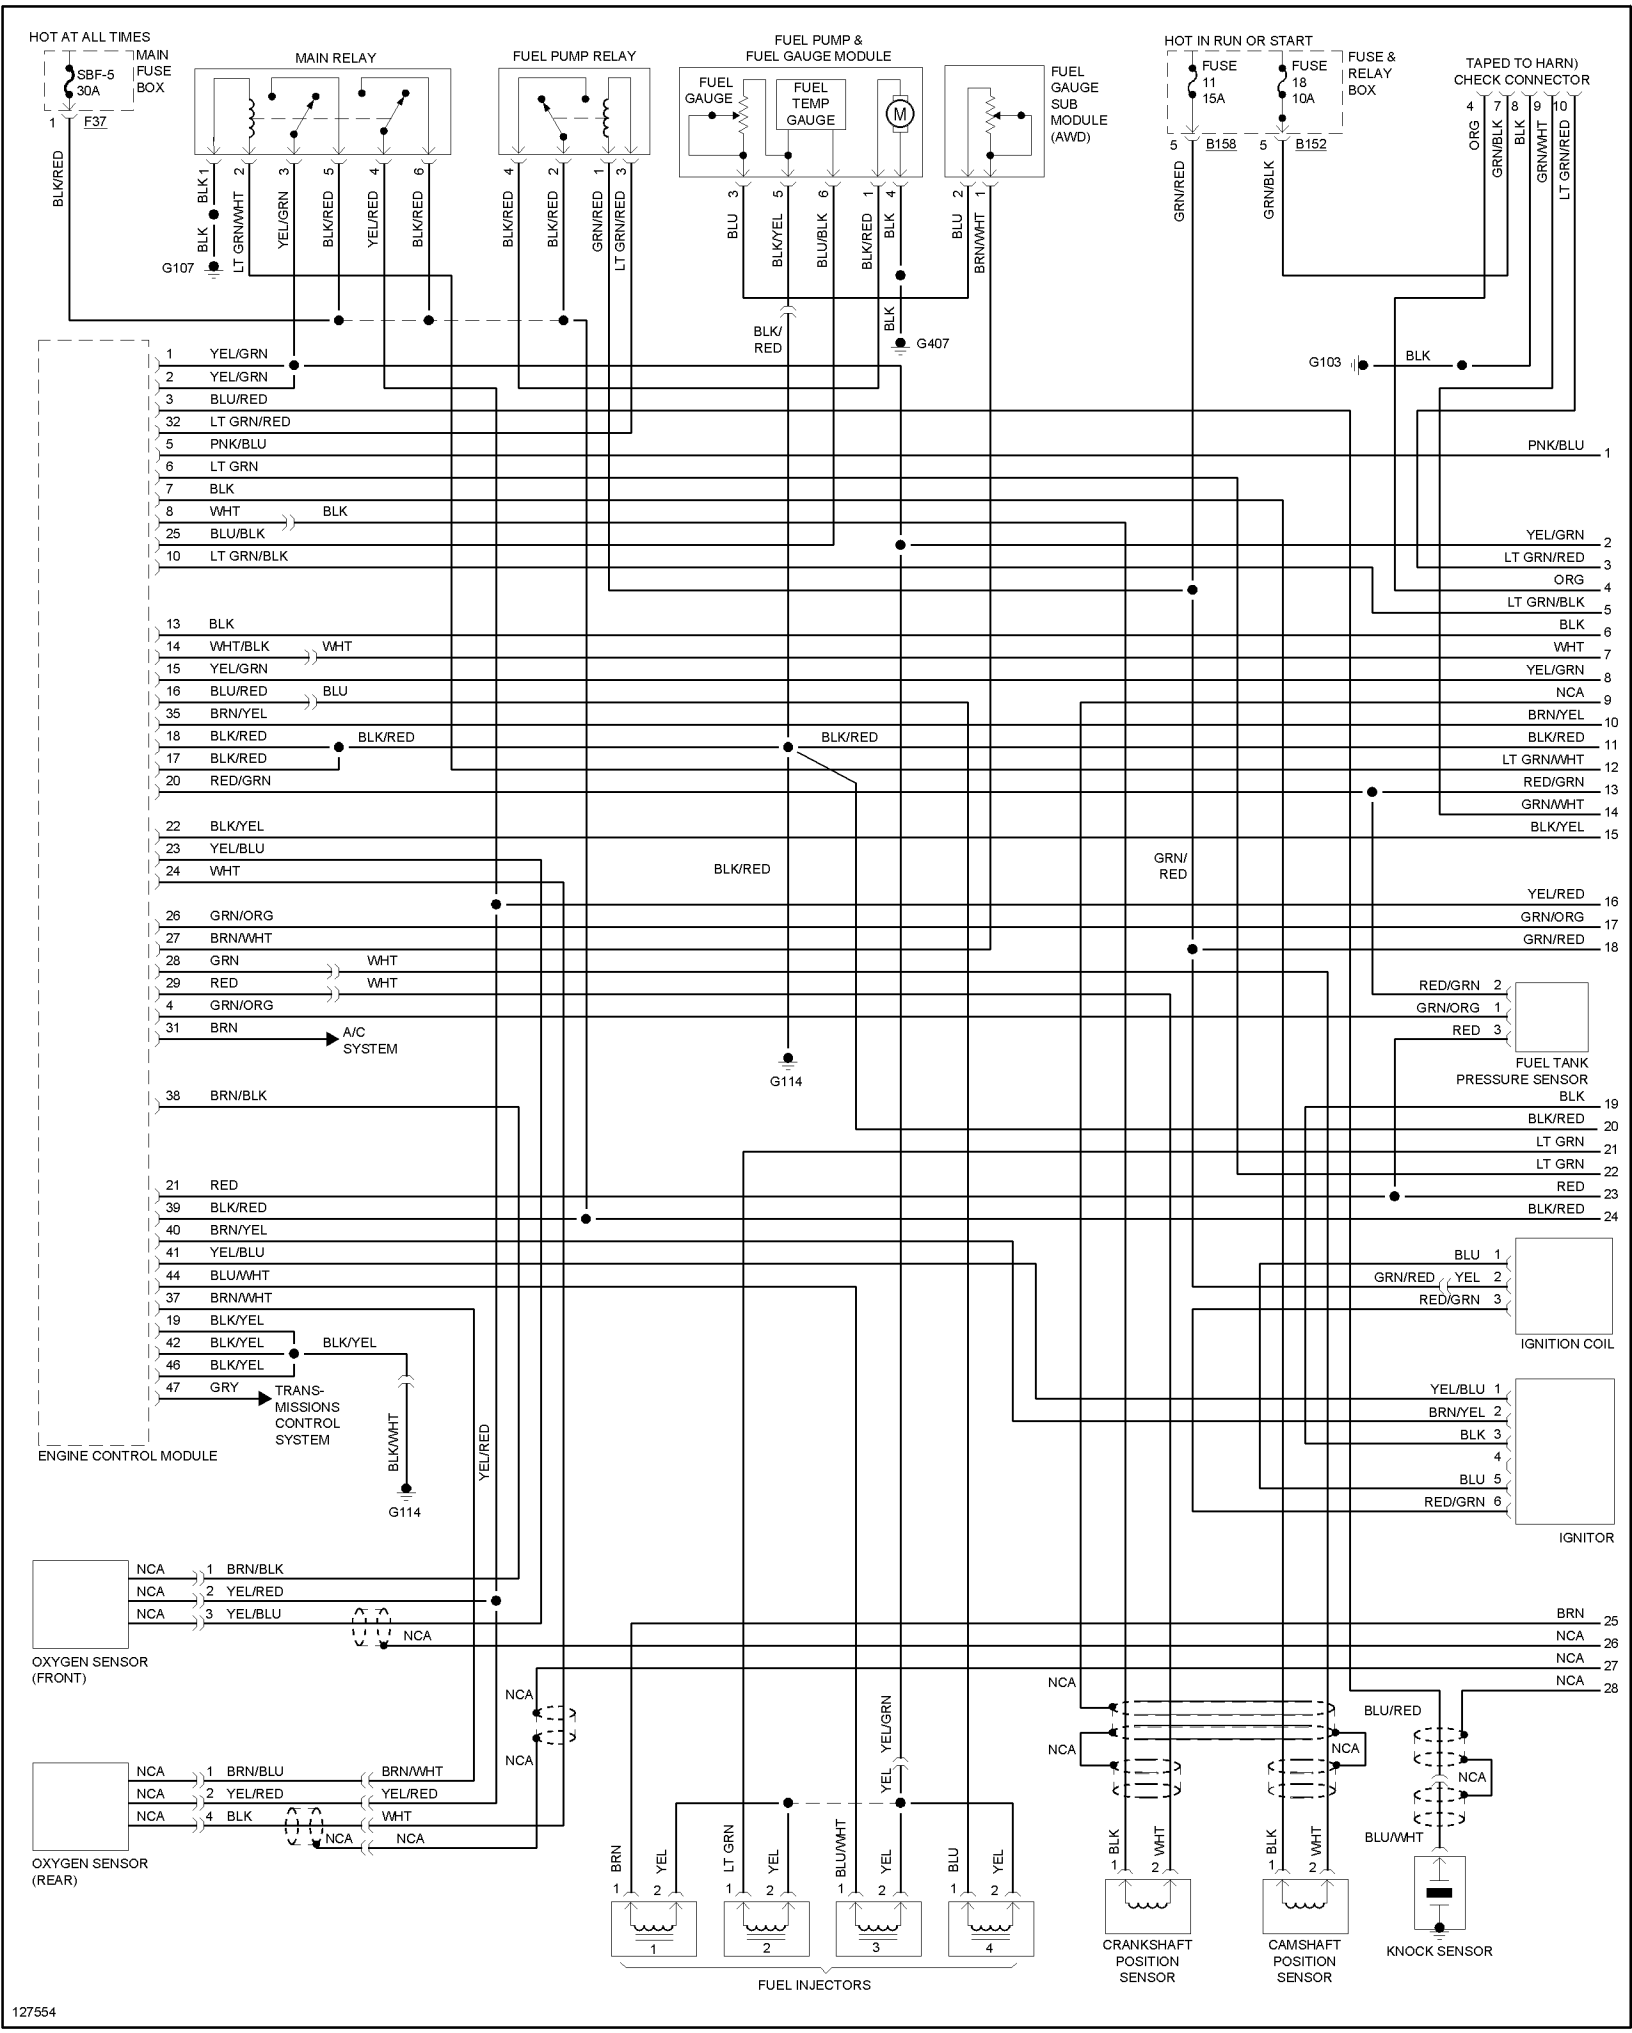

HOT AT ALL TIMES
SBF-2
30A
MAIN FUSE BOX
F37
MAIN RELAY
FUEL PUMP RELAY
FUEL PUMP
HOT IN RUN OR START
FUSE 16 15A
HOT IN RUN OR START
FUSE 15 10A
FUSE & RELAY BOX
F40
I5
B52
CHECK CONNECTOR
G201
G102
G133
ENGINE CONTROL MODULE
TRANSMISSION CONTROLS SYSTEM
A/C SYSTEM
IGNITION COIL
IGNITOR
OXYGEN SENSOR (FRONT)
OXYGEN SENSOR (REAR)
CRANKSHAFT POSITION SENSOR
CAMSHAFT POSITION SENSOR
KNOCK SENSOR
FUEL INJECTORS
NCA
127515

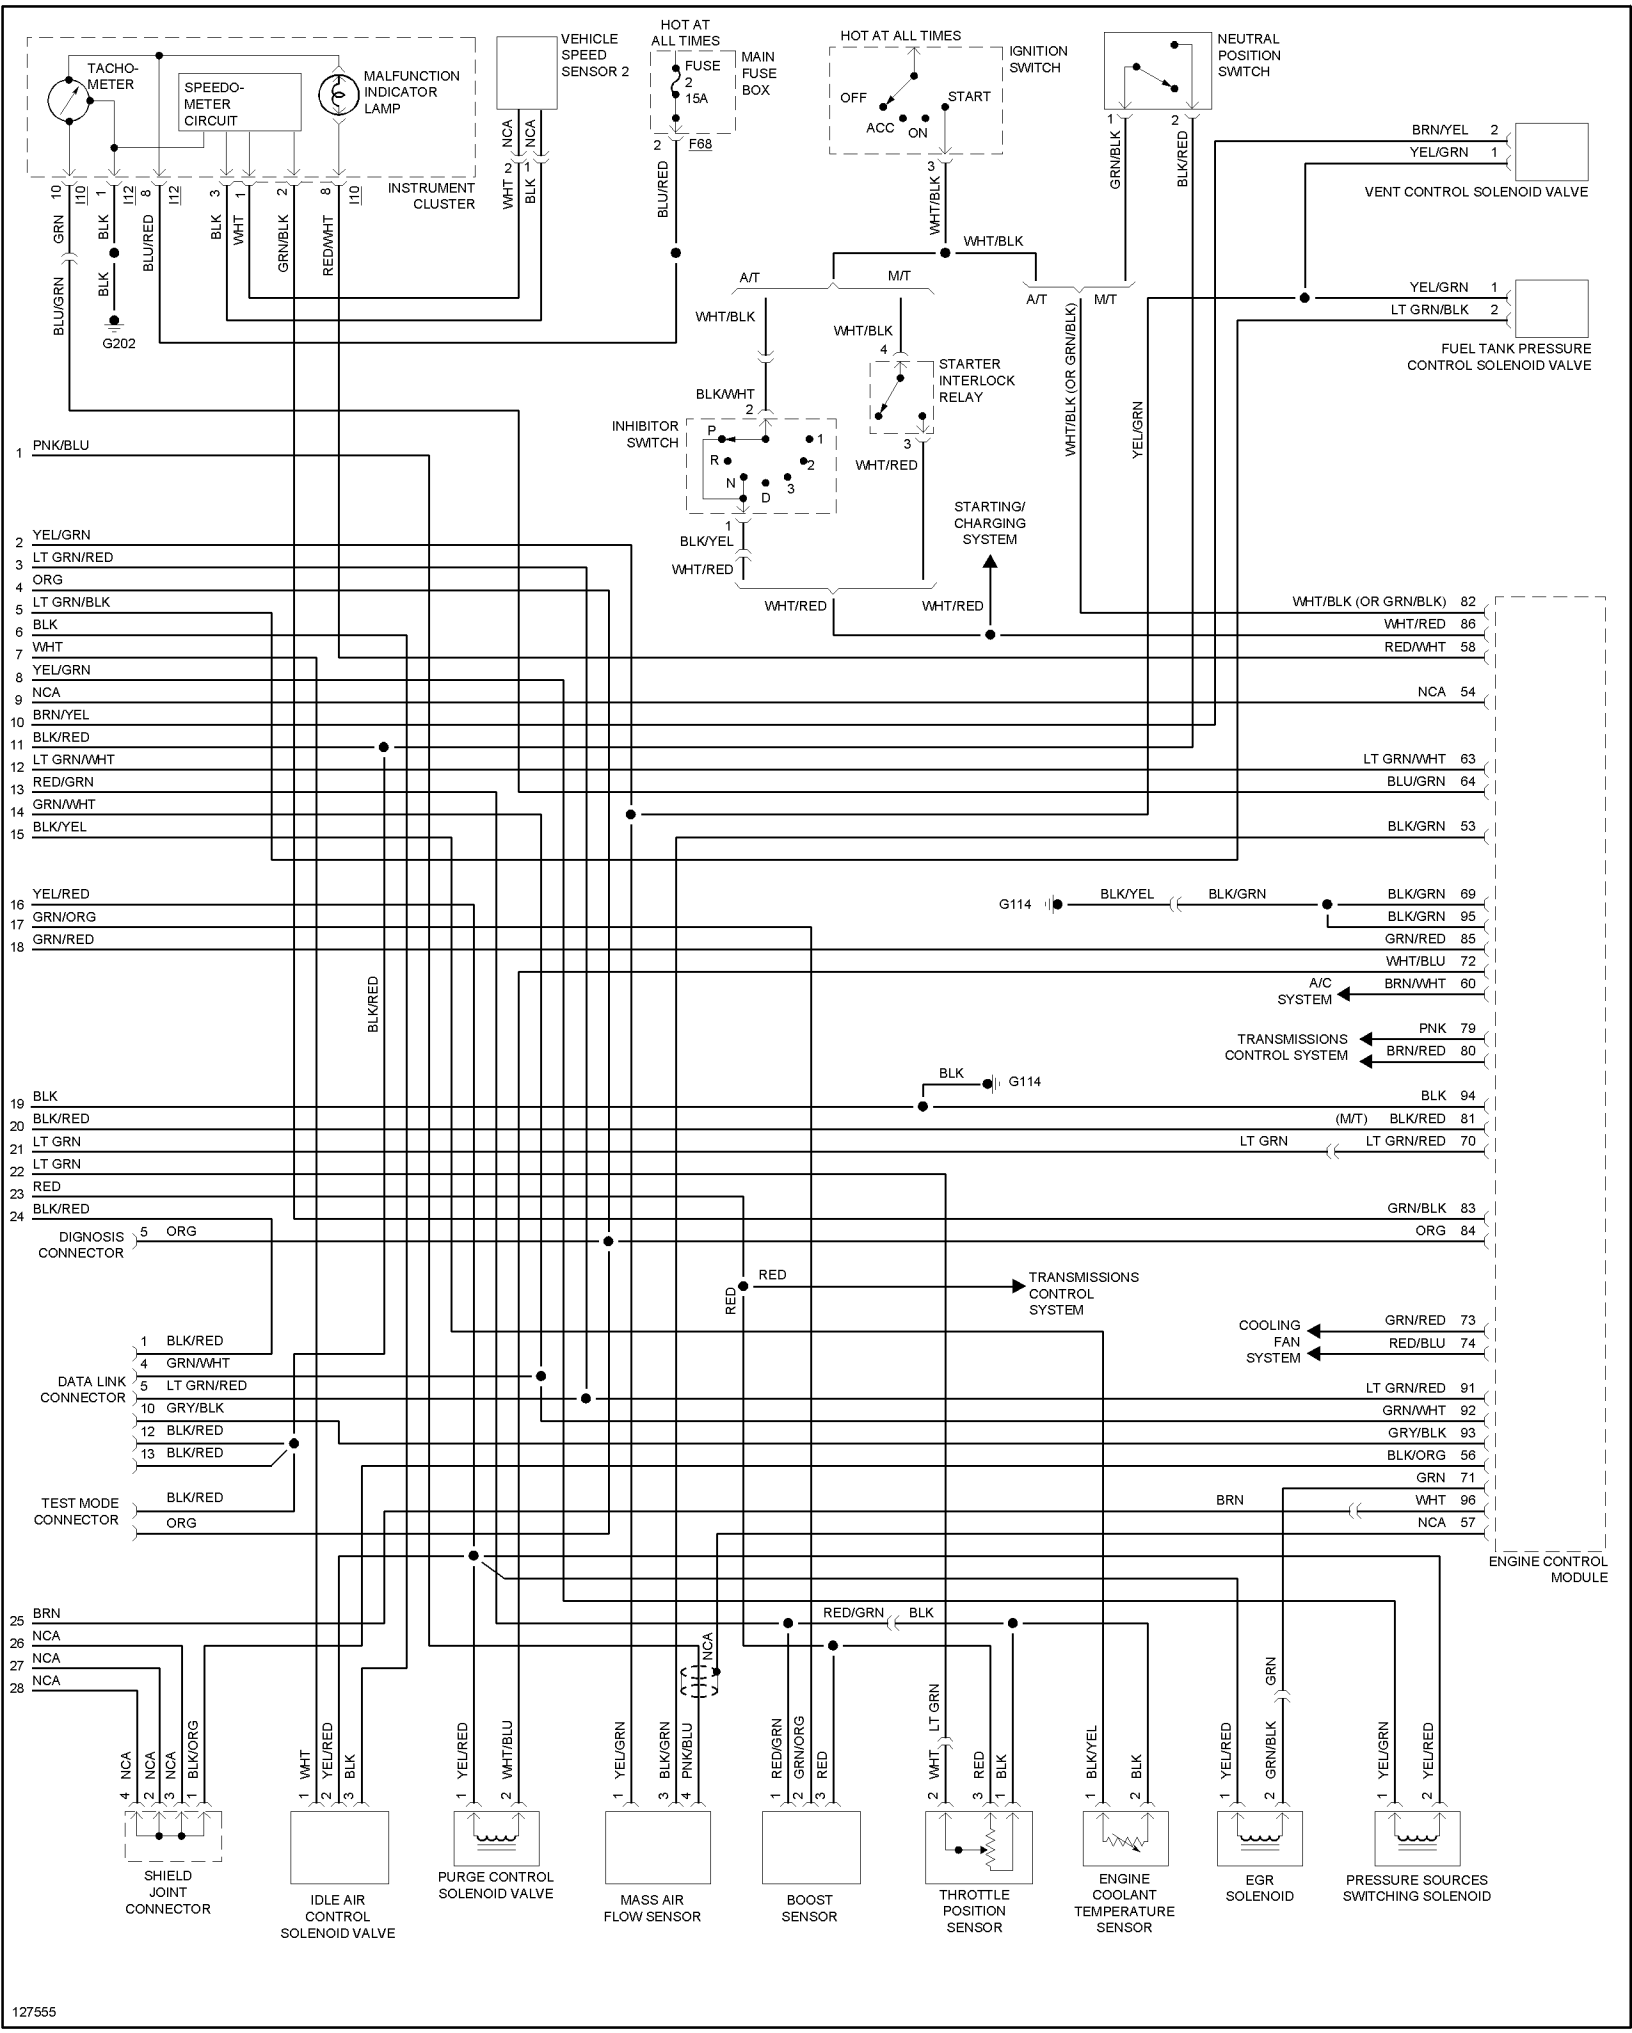

TACHO-METER
VEHICLE SPEED SENSOR 2
MALFUNCTION INDICATOR LAMP
INSTRUMENT CLUSTER
HOT AT ALL TIMES
IGNITION SWITCH
OFF
START
ACC
ON
NEUTRAL POSITION SWITCH (M/T)
A/T
M/T
INHIBITOR SWITCH
P
R
N
D
STARTER INTERLOCK RELAY
G201
G133
A/C SYSTEM
COOLING FAN SYSTEM
TRANSMISSION CONTROL SYSTEM
DATA LINK CONNECTOR
OBD-II SERVICE CONNECTOR
TEST MODE CONNECTOR
TEST MODE CONNECTOR
ENGINE CONTROL MODULE
SHIELD JOINT CONNECTOR
IDLE AIR CONTROL SOLENOID VALVE
PURGE CONTROL SOLENOID VALVE
MASS AIR FLOW SENSOR
BOOST SENSOR
THROTTLE POSITION SENSOR
ENGINE COOLANT TEMPERATURE SENSOR
EGR SOLENOID
PRESSURE SOURCES SWITCHING SOLENOID
127516


HOT AT ALL TIMES
SBF-5
30A
MAIN FUSE BOX
F37
MAIN RELAY
FUEL PUMP RELAY
FUEL PUMP & FUEL GAUGE MODULE
FUEL GAUGE
FUEL TEMP GAUGE
FUEL GAUGE SUB MODULE (AWD)
HOT IN RUN OR START
FUSE 11 15A
FUSE 18 10A
FUSE & RELAY BOX
B158
B152
TAPED TO HARN)
CHECK CONNECTOR
G107
G407
G103
G114
BLK/RED
GRN/RED
BLK
ENGINE CONTROL MODULE
A/C SYSTEM
TRANS-MISSIONS CONTROL SYSTEM
FUEL TANK PRESSURE SENSOR
IGNITION COIL
IGNITOR
OXYGEN SENSOR (FRONT)
OXYGEN SENSOR (REAR)
NCA
FUEL INJECTORS
CRANKSHAFT POSITION SENSOR
CAMSHAFT POSITION SENSOR
KNOCK SENSOR
127554

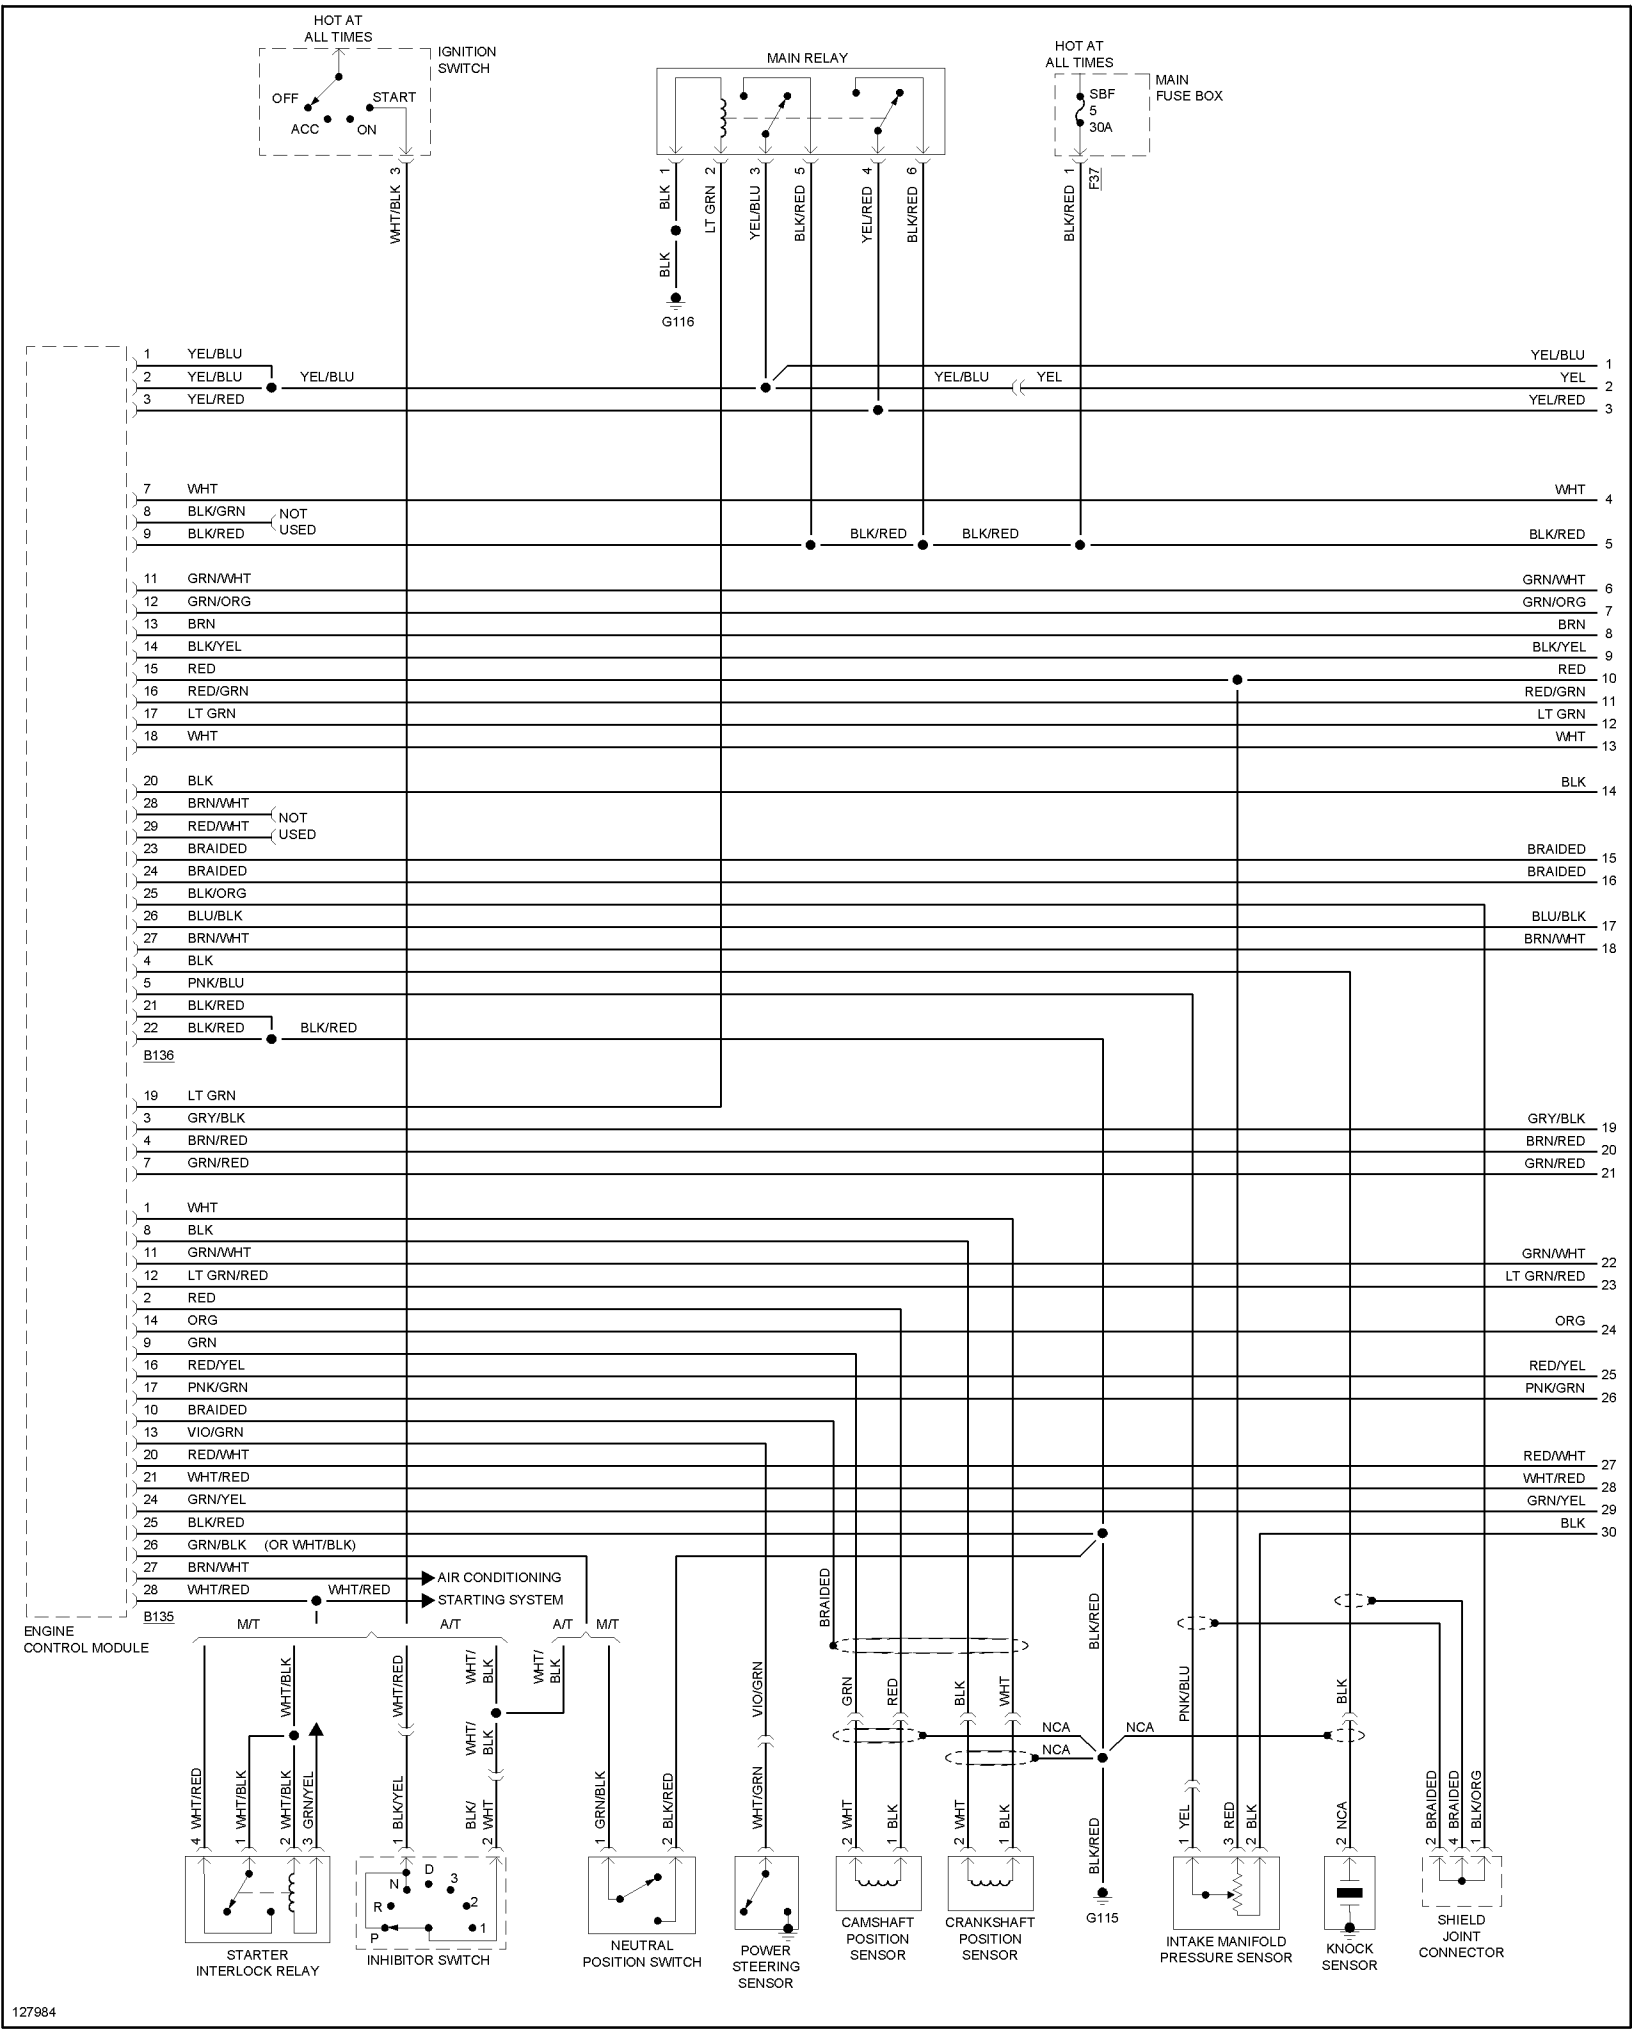

TACHO-METER
SPEEDO-METER CIRCUIT
MALFUNCTION INDICATOR LAMP
INSTRUMENT CLUSTER
VEHICLE SPEED SENSOR 2
HOT AT ALL TIMES
FUSE 2 15A
MAIN FUSE BOX
F68
HOT AT ALL TIMES
IGNITION SWITCH
OFF
ACC
ON
START
NEUTRAL POSITION SWITCH
VENT CONTROL SOLENOID VALVE
FUEL TANK PRESSURE CONTROL SOLENOID VALVE
G202
A/T
M/T
STARTER INTERLOCK RELAY
INHIBITOR SWITCH
P
R
N
D
STARTING/ CHARGING SYSTEM
WHT/BLK (OR GRN/BLK)
YEL/GRN
WHT/RED
BLK/WHT
BLK/YEL
G114
BLK/GRN
BLK/RED
BLK/WHT
BLU/GRN
BRN/WHT
A/C SYSTEM
PNK
BRN/RED
TRANSMISSIONS CONTROL SYSTEM
GRN/RED
RED/BLU
COOLING FAN SYSTEM
LT GRN/RED
GRN/WHT
GRY/BLK
BLK/ORG
GRN
WHT
NCA
ENGINE CONTROL MODULE
DIGNOSIS CONNECTOR
DATA LINK CONNECTOR
TEST MODE CONNECTOR
RED
TRANSMISSIONS CONTROL SYSTEM
SHIELD JOINT CONNECTOR
IDLE AIR CONTROL SOLENOID VALVE
PURGE CONTROL SOLENOID VALVE
MASS AIR FLOW SENSOR
BOOST SENSOR
THROTTLE POSITION SENSOR
ENGINE COOLANT TEMPERATURE SENSOR
EGR SOLENOID
PRESSURE SOURCES SWITCHING SOLENOID

127555

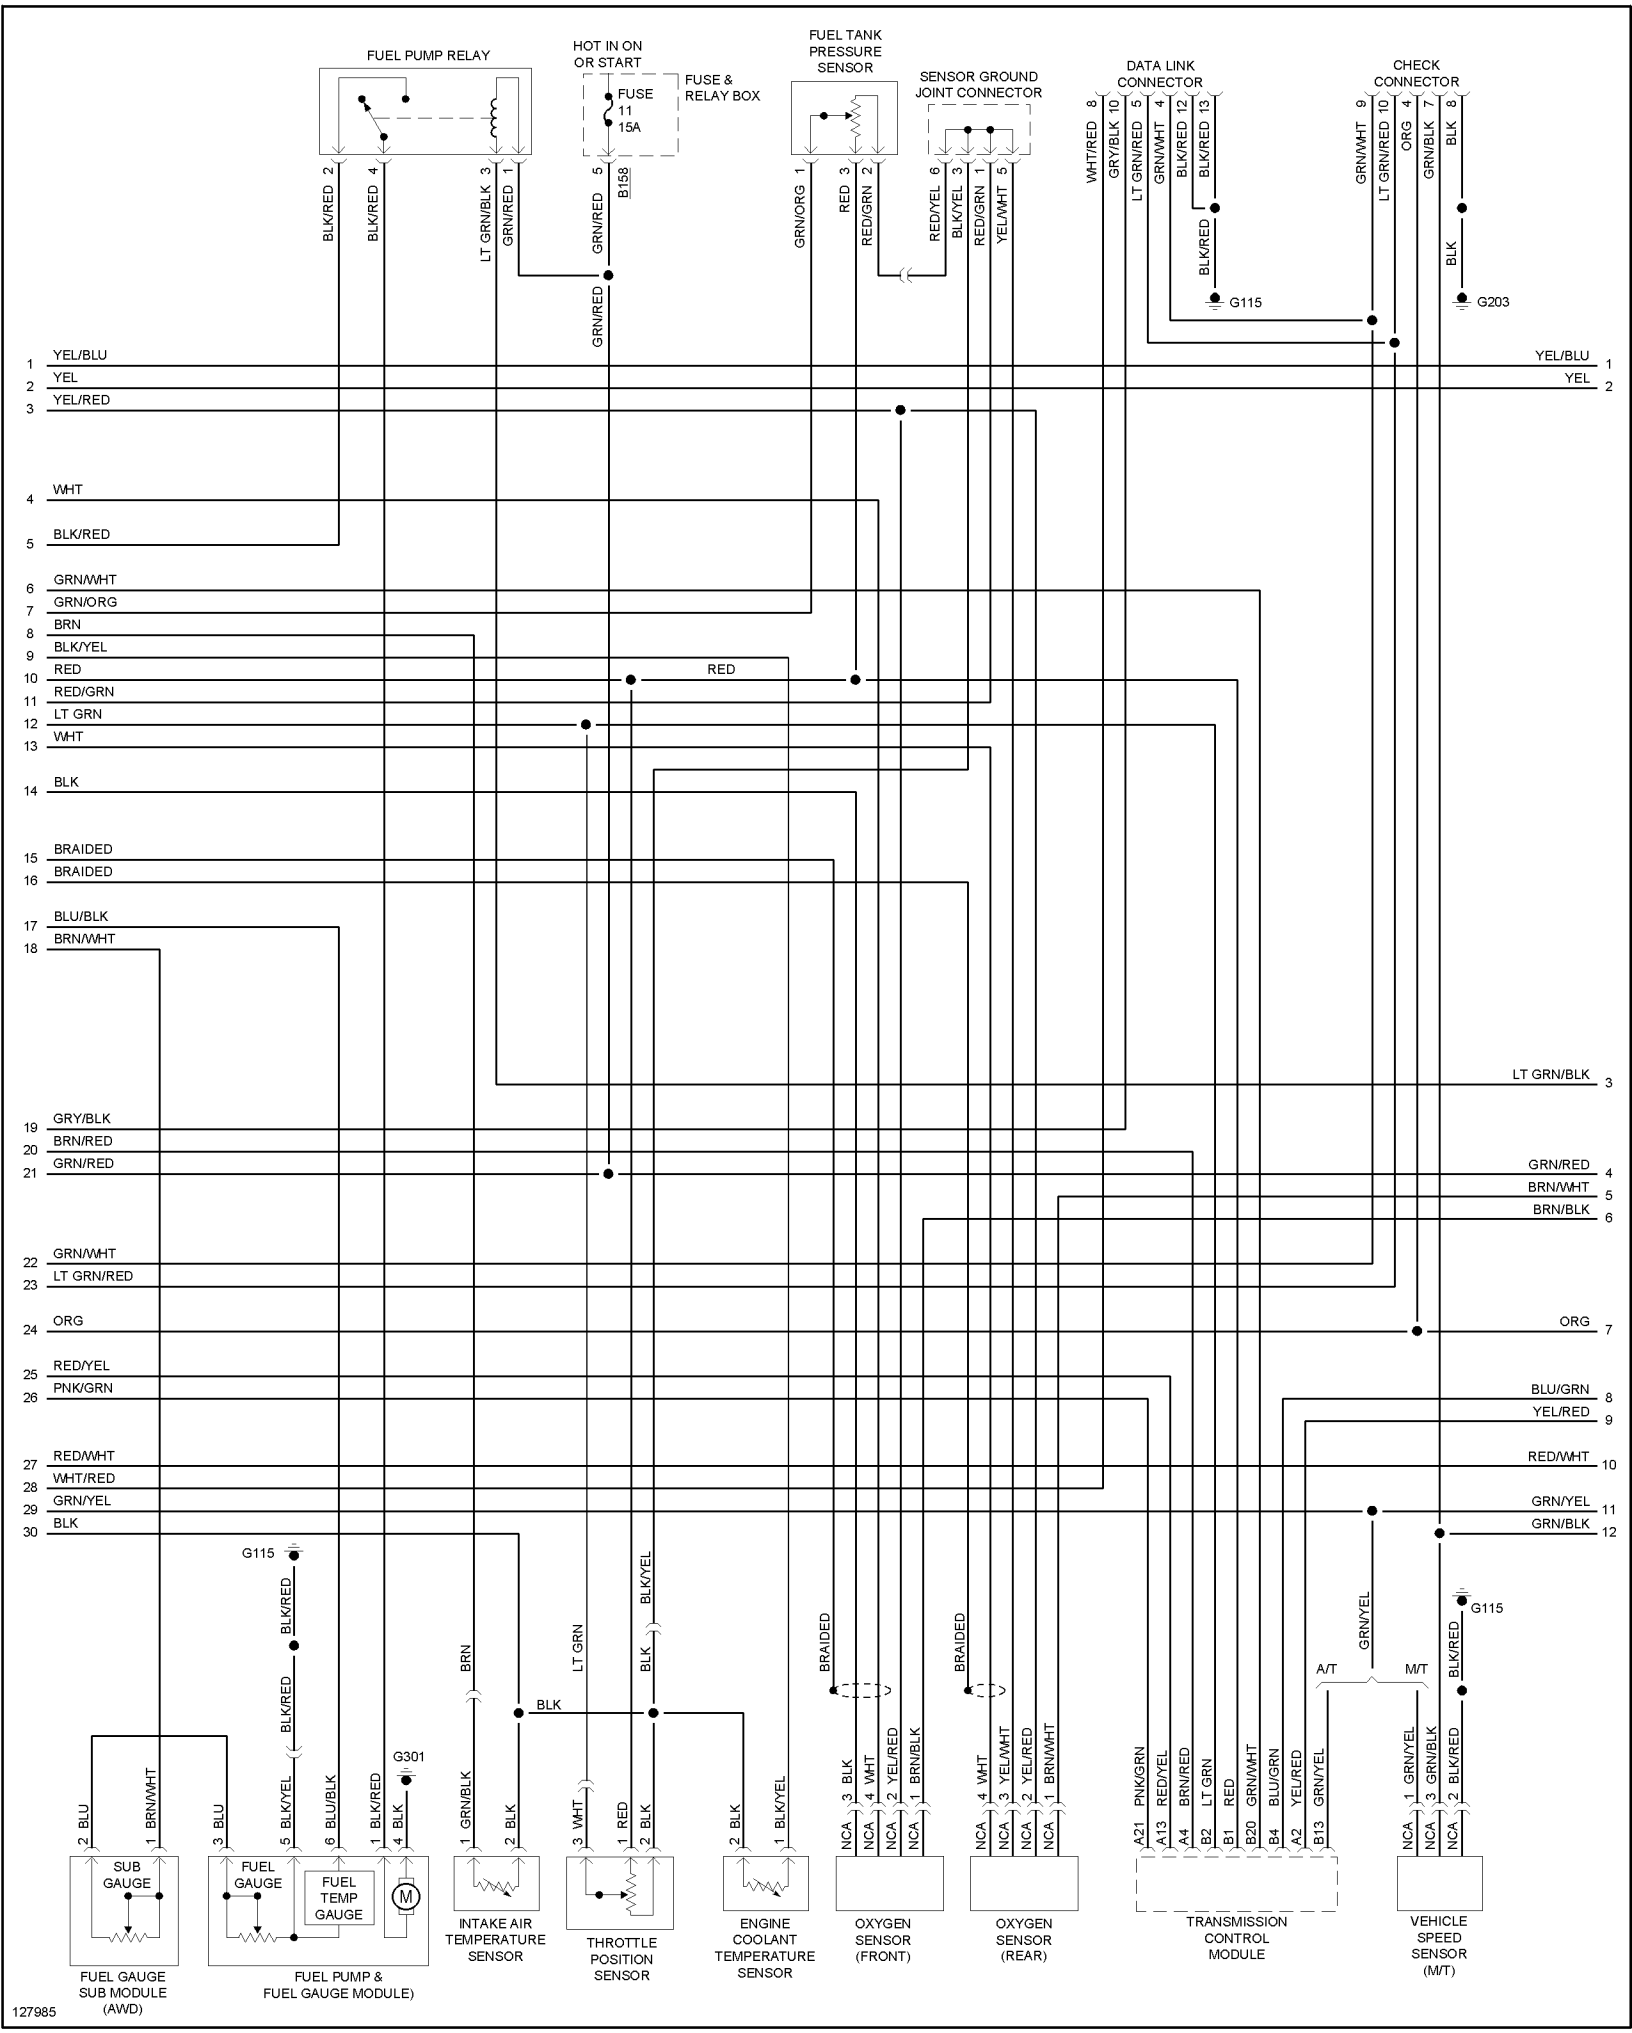

HOT AT ALL TIMES
SBF-5
30A
MAIN FUSE BOX
F37
MAIN RELAY
FUEL PUMP RELAY
FUEL PUMP & FUEL GAUGE MODULE
FUEL GAUGE
FUEL TEMP GAUGE
FUEL GAUGE SUB MODULE (AWD)
HOT IN RUN OR START
FUSE 11 15A
FUSE 18 10A
FUSE & RELAY BOX
B158
B152
TAPED TO HARN)
CHECK CONNECTOR
G107
G407
G103
G114
BLK/RED
GRN/RED
BLK
ENGINE CONTROL MODULE
A/C SYSTEM
TRANS-MISSIONS CONTROL SYSTEM
FUEL TANK PRESSURE SENSOR
IGNITION COIL
IGNITOR
OXYGEN SENSOR (FRONT)
OXYGEN SENSOR (REAR)
NCA
FUEL INJECTORS
CRANKSHAFT POSITION SENSOR
CAMSHAFT POSITION SENSOR
KNOCK SENSOR
127554

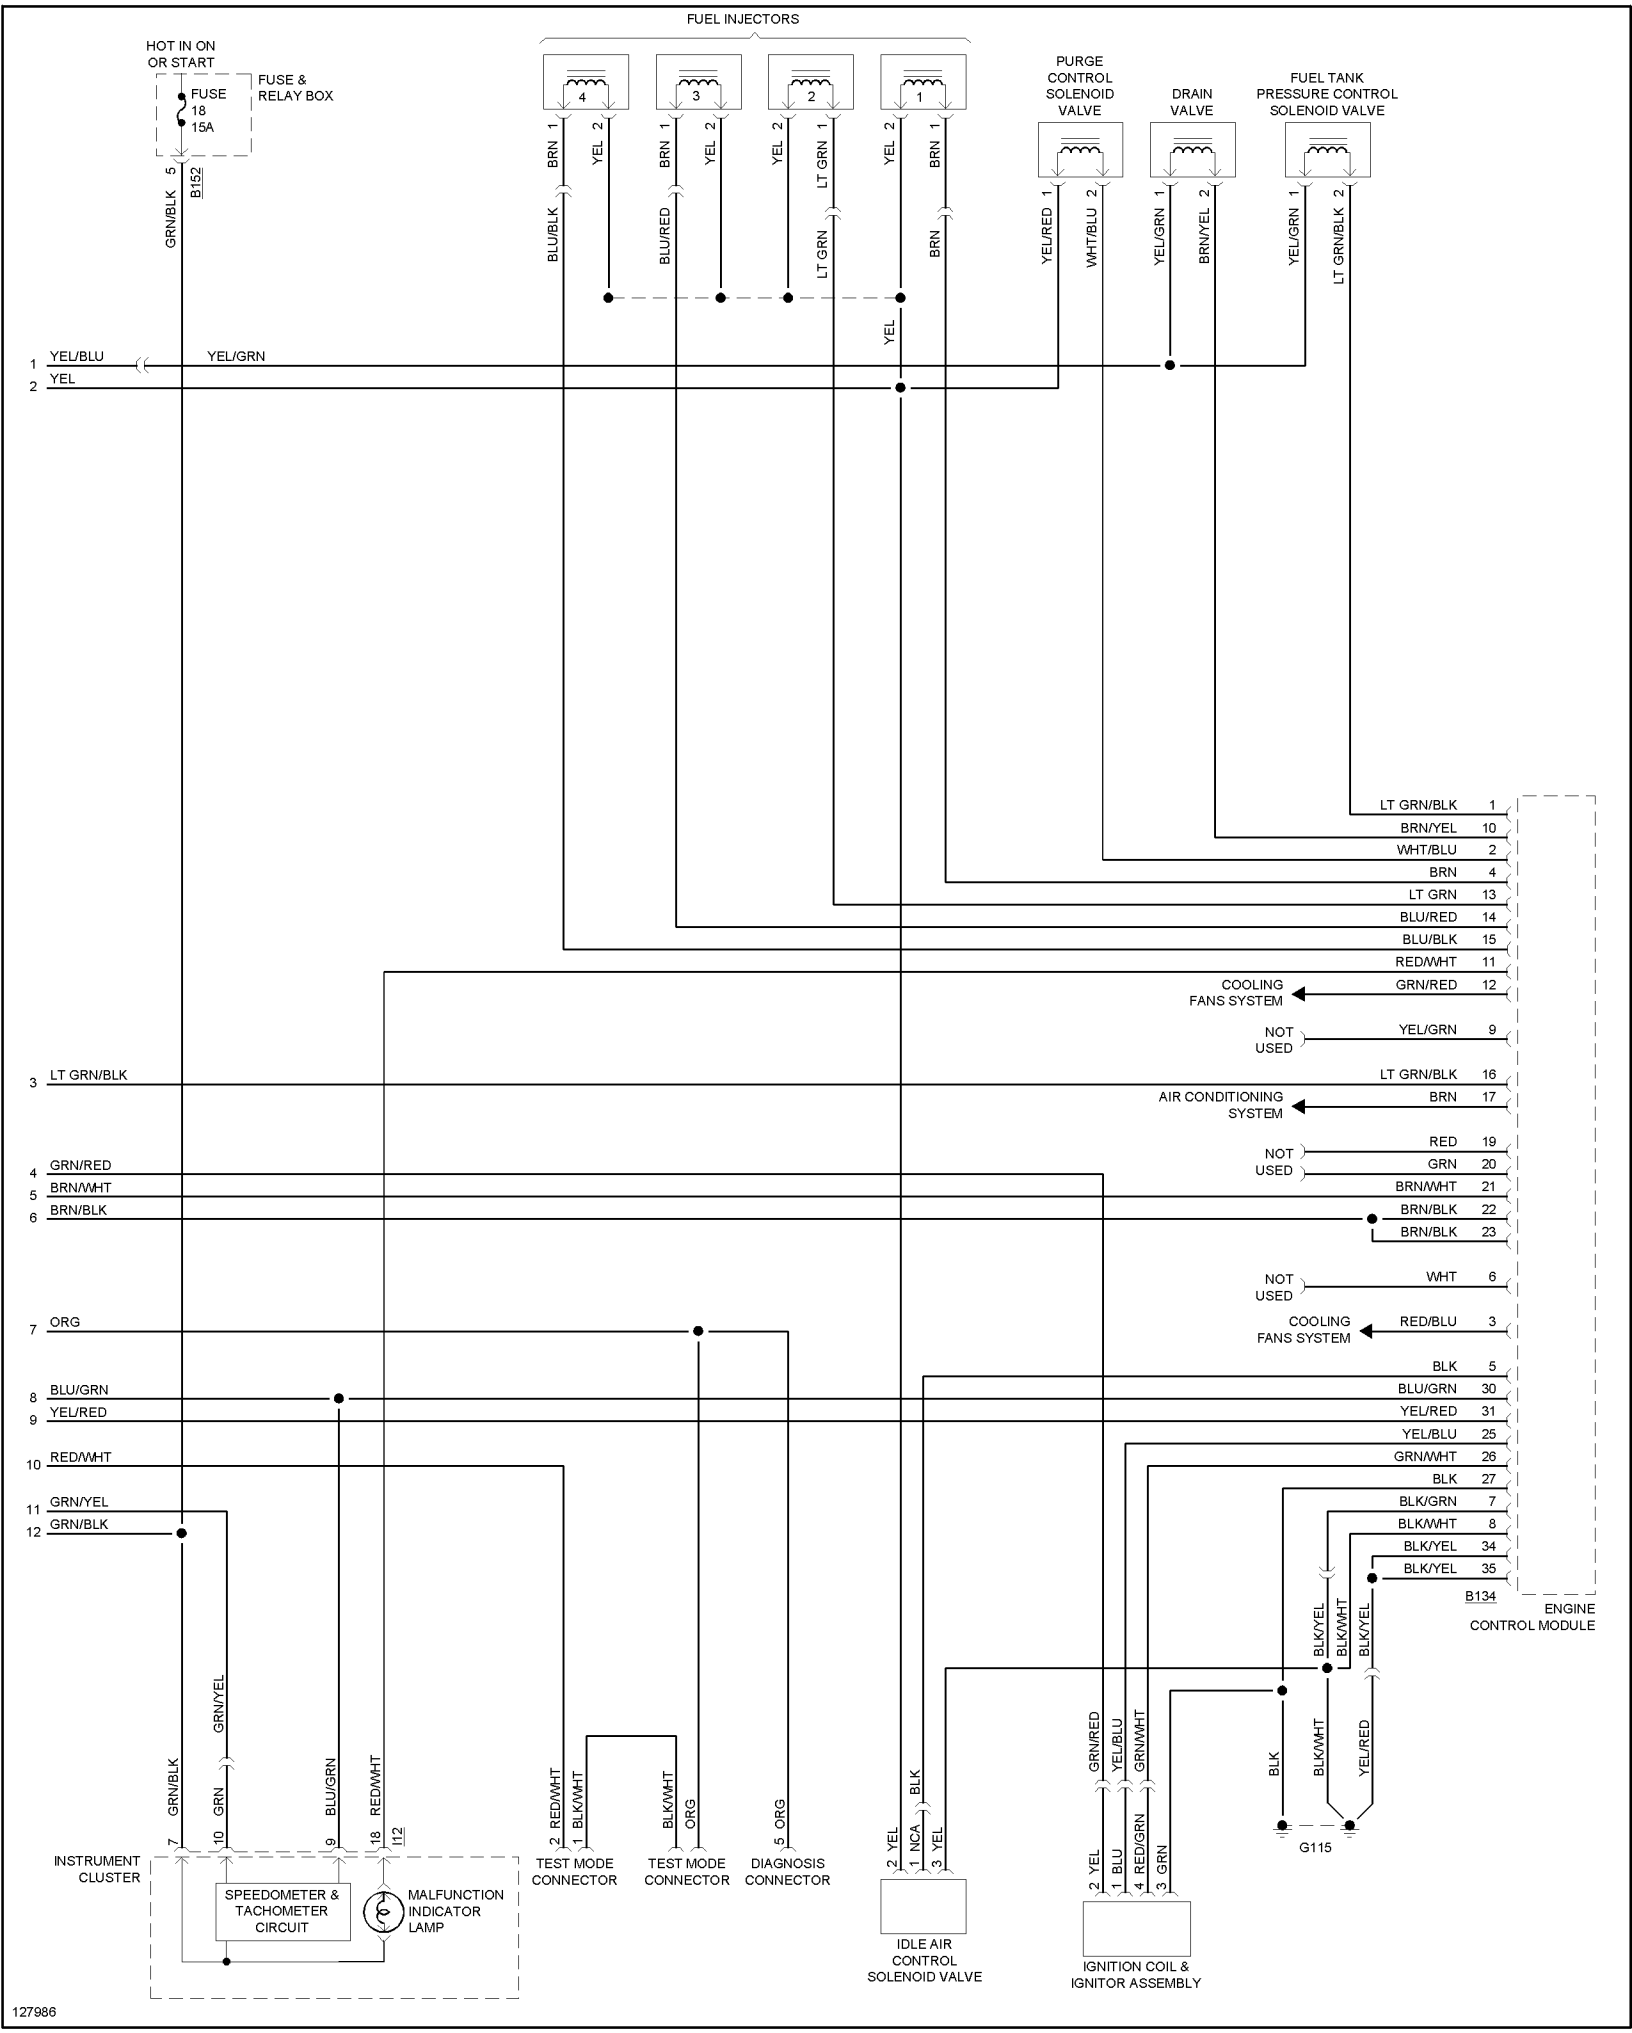

TACHO-METER
SPEEDO-METER CIRCUIT
MALFUNCTION INDICATOR LAMP
INSTRUMENT CLUSTER
VEHICLE SPEED SENSOR 2
HOT AT ALL TIMES
FUSE 2 15A
MAIN FUSE BOX
F68
HOT AT ALL TIMES
IGNITION SWITCH
OFF
ACC
ON
START
NEUTRAL POSITION SWITCH
VENT CONTROL SOLENOID VALVE
FUEL TANK PRESSURE CONTROL SOLENOID VALVE
G202
A/T
M/T
STARTER INTERLOCK RELAY
INHIBITOR SWITCH
P
R
N
D
STARTING/ CHARGING SYSTEM
WHT/BLK (OR GRN/BLK)
YEL/GRN
WHT/RED
BLK/WHT
BLK/YEL
G114
BLK/GRN
BLK/RED
BLK/WHT
BLU/GRN
BRN/WHT
A/C SYSTEM
PNK
BRN/RED
TRANSMISSIONS CONTROL SYSTEM
GRN/RED
RED/BLU
COOLING FAN SYSTEM
LT GRN/RED
GRN/WHT
GRY/BLK
BLK/ORG
GRN
WHT
NCA
ENGINE CONTROL MODULE
DIGNOSIS CONNECTOR
DATA LINK CONNECTOR
TEST MODE CONNECTOR
RED
TRANSMISSIONS CONTROL SYSTEM
SHIELD JOINT CONNECTOR
IDLE AIR CONTROL SOLENOID VALVE
PURGE CONTROL SOLENOID VALVE
MASS AIR FLOW SENSOR
BOOST SENSOR
THROTTLE POSITION SENSOR
ENGINE COOLANT TEMPERATURE SENSOR
EGR SOLENOID
PRESSURE SOURCES SWITCHING SOLENOID

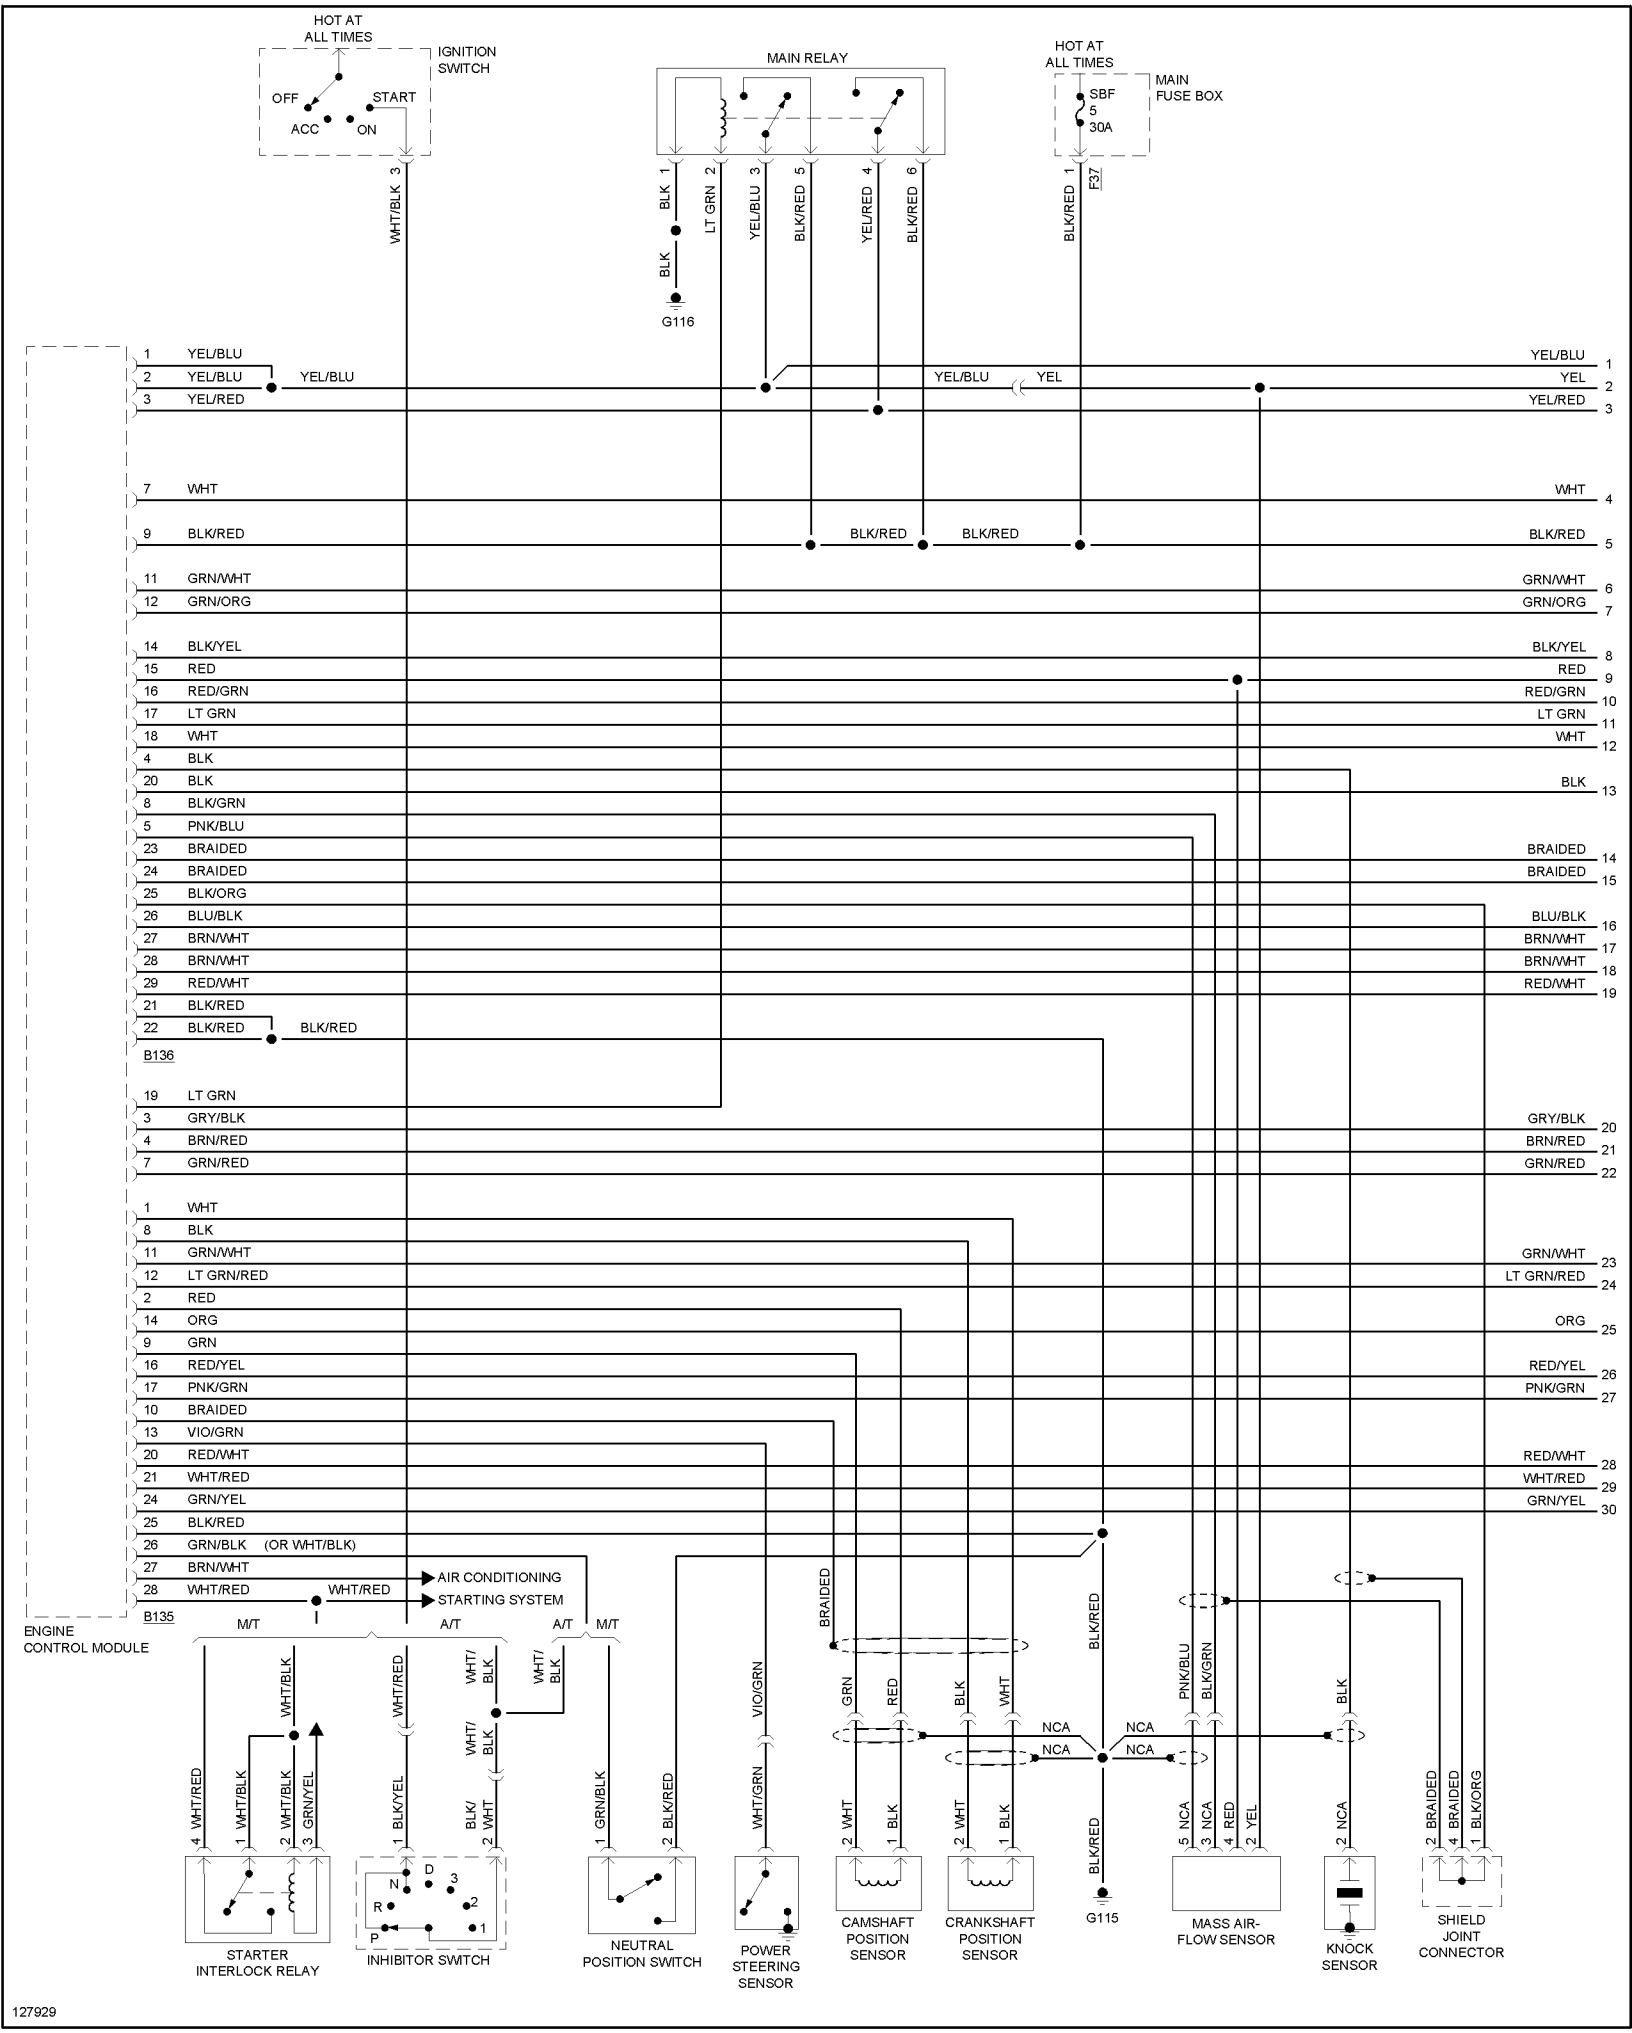
127555


HOT AT ALL TIMES
IGNITION SWITCH
OFF
START
ACC
ON
MAIN RELAY
HOT AT ALL TIMES
SBF 5 30A
MAIN FUSE BOX
F37
G116
G115
ENGINE CONTROL MODULE
B135
B136
1 YEL/BLU
2 YEL/BLU
3 YEL/RED
7 WHT
8 BLK/GRN
9 BLK/RED
NOT USED
11 GRN/WHT
12 GRN/ORG
13 BRN
14 BLK/YEL
15 RED
16 RED/GRN
17 LT GRN
18 WHT
20 BLK
28 BRN/WHT
29 RED/WHT
NOT USED
23 BRAIDED
24 BRAIDED
25 BLK/ORG
26 BLU/BLK
27 BRN/WHT
4 BLK
5 PNK/BLU
21 BLK/RED
22 BLK/RED
19 LT GRN
3 GRY/BLK
4 BRN/RED
7 GRN/RED
1 WHT
8 BLK
11 GRN/WHT
12 LT GRN/RED
2 RED
14 ORG
9 GRN
16 RED/YEL
17 PNK/GRN
10 BRAIDED
13 VIO/GRN
20 RED/WHT
21 WHT/RED
24 GRN/YEL
25 BLK/RED
26 GRN/BLK (OR WHT/BLK)
27 BRN/WHT
28 WHT/RED
AIR CONDITIONING
STARTING SYSTEM
M/T
A/T
A/T
M/T
STARTER INTERLOCK RELAY
INHIBITOR SWITCH
NEUTRAL POSITION SWITCH
POWER STEERING SENSOR
CAMSHAFT POSITION SENSOR
CRANKSHAFT POSITION SENSOR
INTAKE MANIFOLD PRESSURE SENSOR
KNOCK SENSOR
SHIELD JOINT CONNECTOR
NCA
NCA

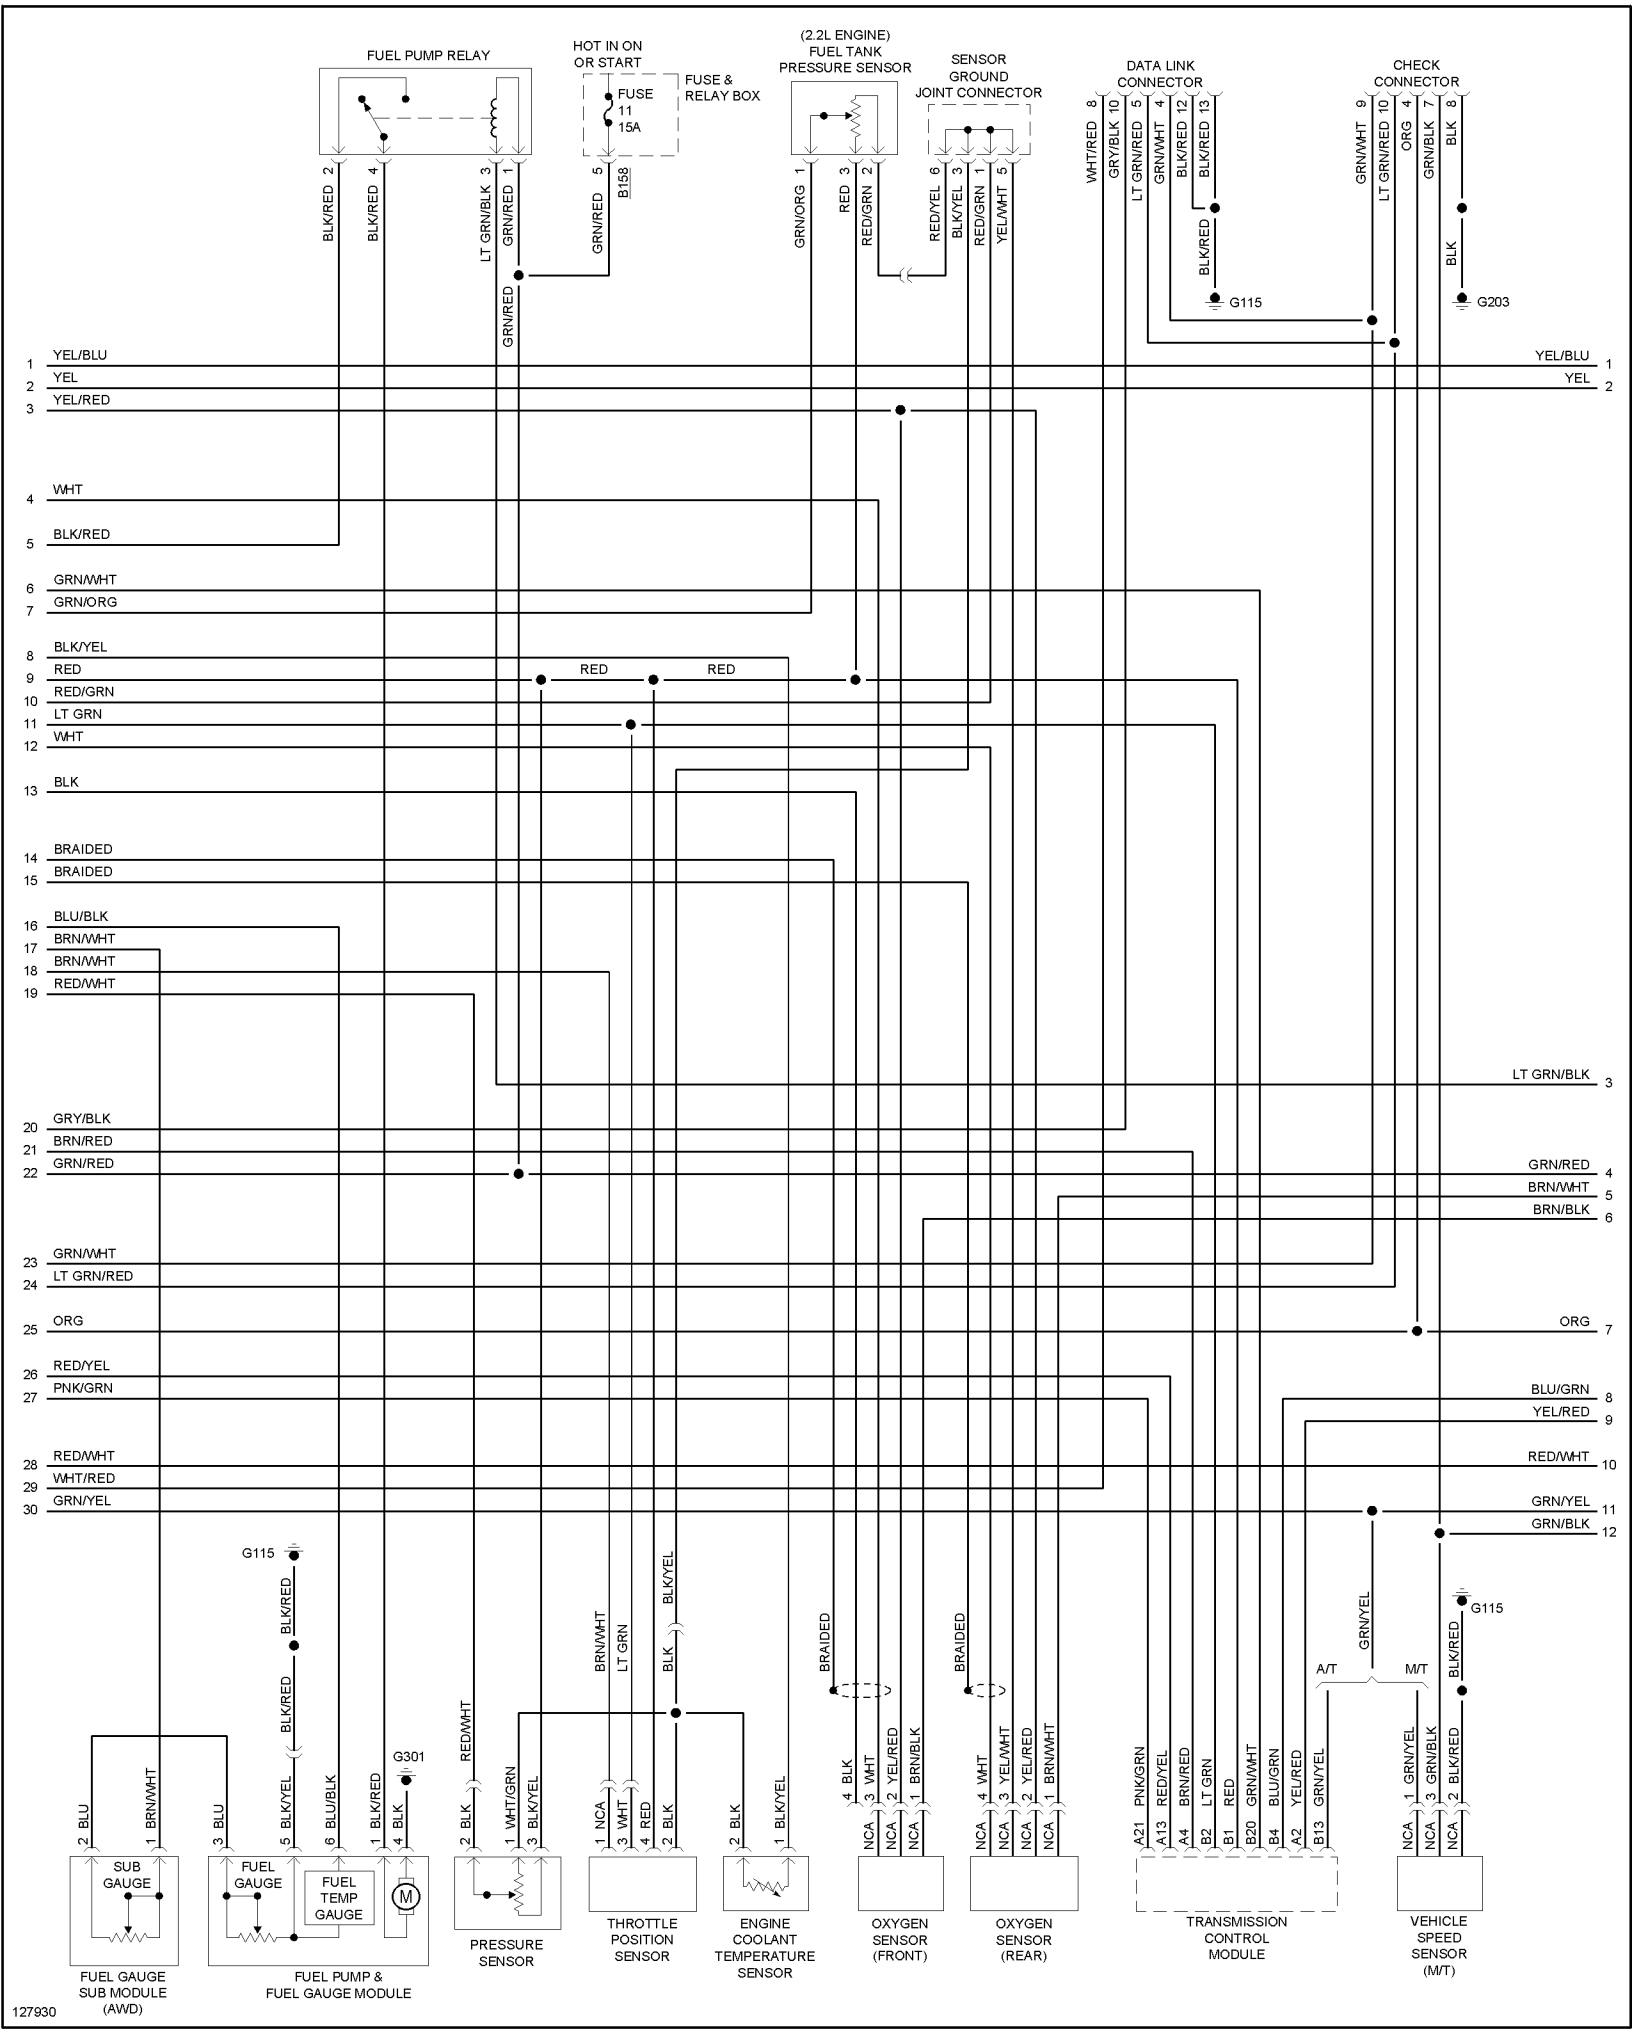
127984

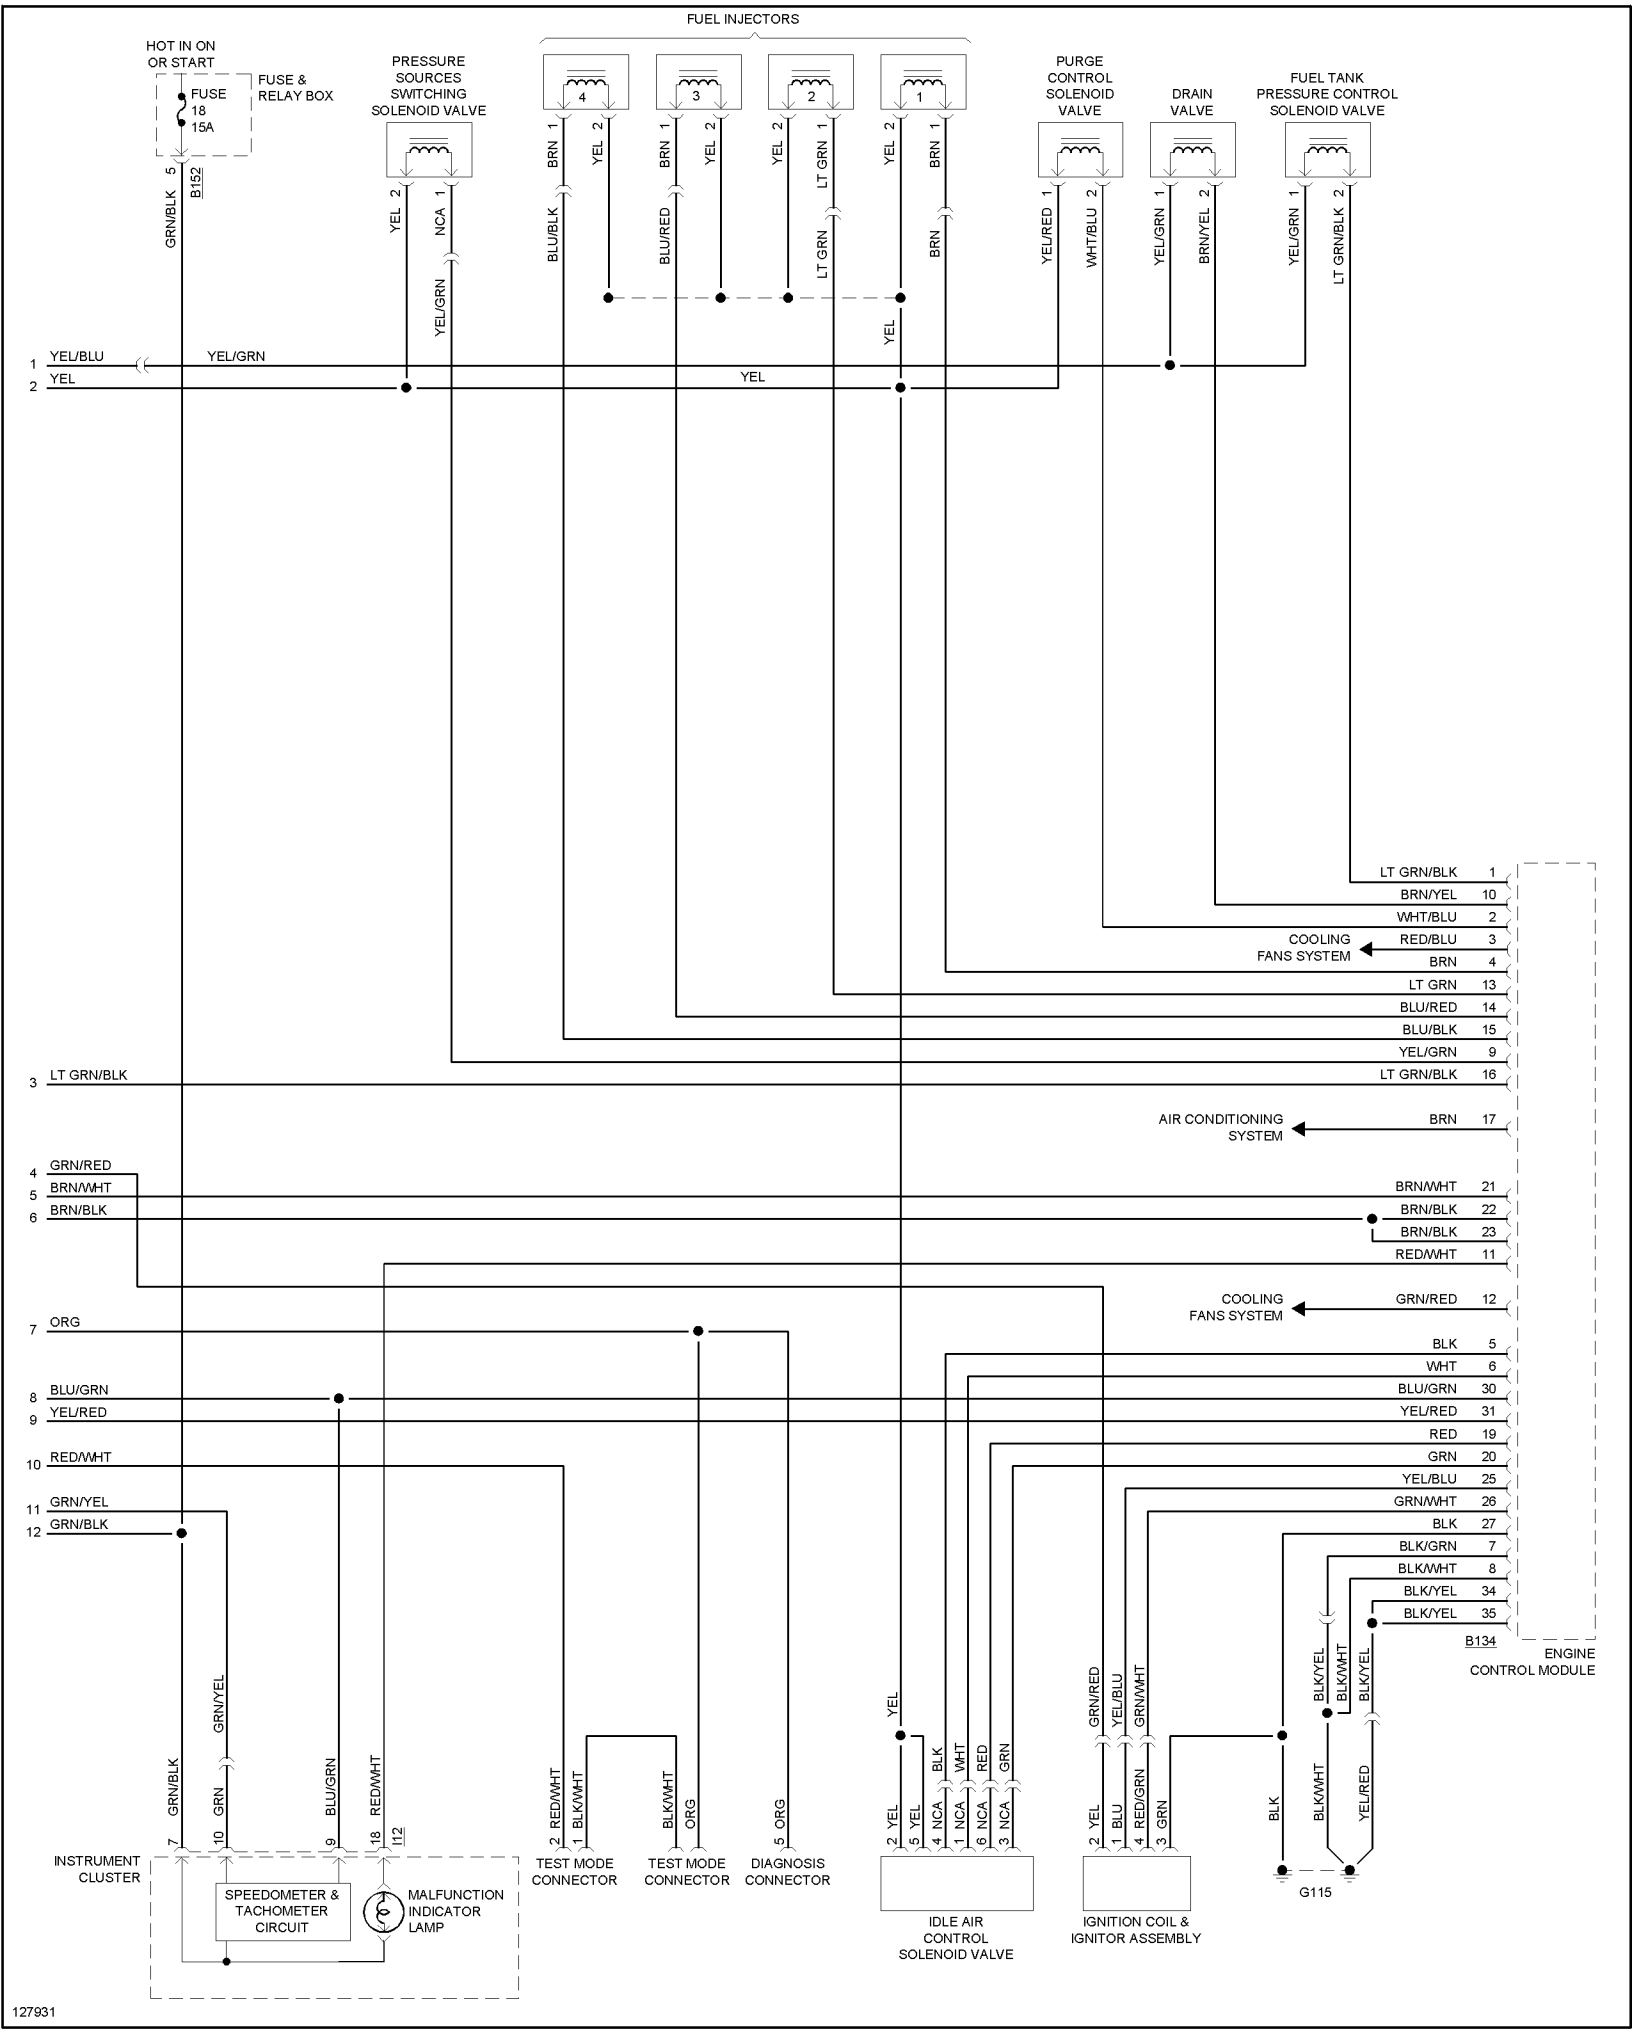

FUEL PUMP RELAY
HOT IN ON OR START
FUSE 11 15A
FUSE & RELAY BOX
B158
FUEL TANK PRESSURE SENSOR
SENSOR GROUND JOINT CONNECTOR
DATA LINK CONNECTOR
CHECK CONNECTOR
G115
G203
G301
YEL/BLU
YEL
YEL/RED
WHT
BLK/RED
GRN/WHT
GRN/ORG
BRN
BLK/YEL
RED
RED/GRN
LT GRN
WHT
BLK
BRAIDED
BRAIDED
BLU/BLK
BRN/WHT
LT GRN/BLK
GRY/BLK
BRN/RED
GRN/RED
GRN/RED
BRN/WHT
BRN/BLK
GRN/WHT
LT GRN/RED
ORG
ORG
RED/YEL
PNK/GRN
BLU/GRN
YEL/RED
RED/WHT
RED/WHT
WHT/RED
GRN/YEL
GRN/YEL
BLK
GRN/BLK
A/T
M/T
SUB GAUGE
FUEL GAUGE
FUEL TEMP GAUGE
FUEL GAUGE SUB MODULE (AWD)
FUEL PUMP & FUEL GAUGE MODULE)
INTAKE AIR TEMPERATURE SENSOR
THROTTLE POSITION SENSOR
ENGINE COOLANT TEMPERATURE SENSOR
OXYGEN SENSOR (FRONT)
OXYGEN SENSOR (REAR)
TRANSMISSION CONTROL MODULE
VEHICLE SPEED SENSOR (M/T)
127985

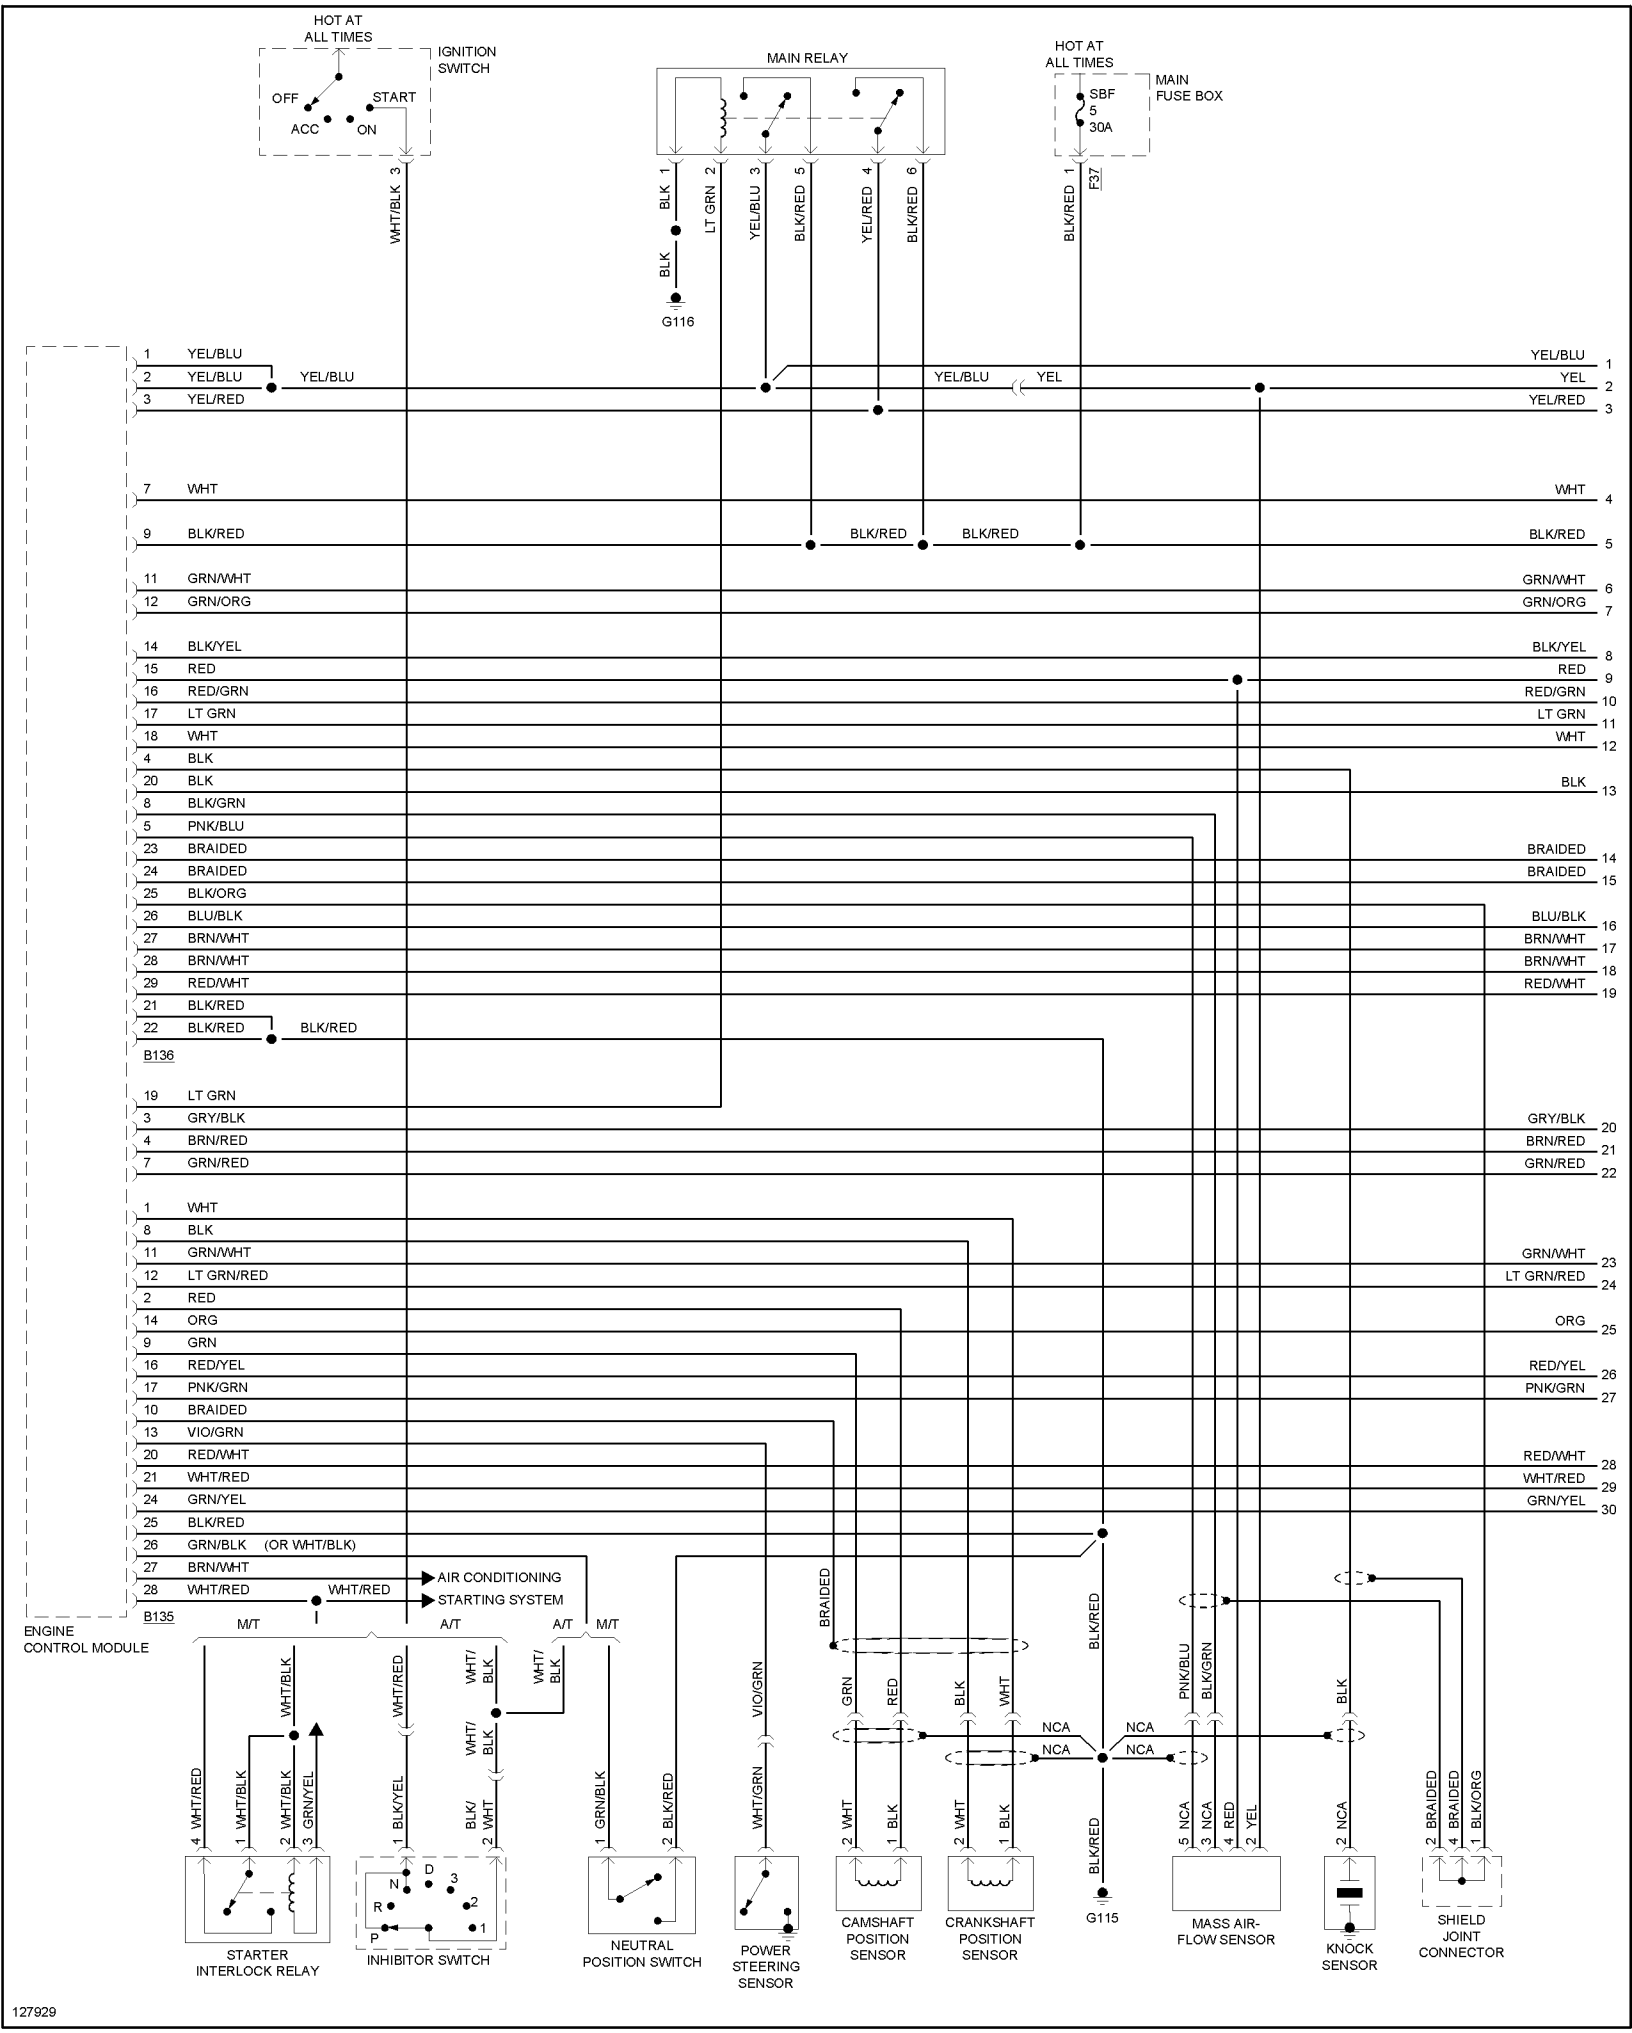

HOT IN ON OR START
FUSE & RELAY BOX
FUSE 18 15A
GRN/BLK 5 B152
FUEL INJECTORS
4
3
2
1
BRN 1
YEL 2
BLU/BLK
BLU/RED
LT GRN 1
LT GRN
YEL
BRN
PURGE CONTROL SOLENOID VALVE
YEL/RED 1
WHT/BLU 2
DRAIN VALVE
YEL/GRN 1
BRN/YEL 2
FUEL TANK PRESSURE CONTROL SOLENOID VALVE
YEL/GRN 1
LT GRN/BLK 2
1 YEL/BLU
2 YEL
YEL/GRN
3 LT GRN/BLK
4 GRN/RED
5 BRN/WHT
6 BRN/BLK
7 ORG
8 BLU/GRN
9 YEL/RED
10 RED/WHT
11 GRN/YEL
12 GRN/BLK
LT GRN/BLK 1
BRN/YEL 10
WHT/BLU 2
BRN 4
LT GRN 13
BLU/RED 14
BLU/BLK 15
RED/WHT 11
GRN/RED 12
COOLING FANS SYSTEM
NOT USED
YEL/GRN 9
LT GRN/BLK 16
BRN 17
AIR CONDITIONING SYSTEM
RED 19
GRN 20
BRN/WHT 21
BRN/BLK 22
BRN/BLK 23
WHT 6
RED/BLU 3
BLK 5
BLU/GRN 30
YEL/RED 31
YEL/BLU 25
GRN/WHT 26
BLK 27
BLK/GRN 7
BLK/WHT 8
BLK/YEL 34
BLK/YEL 35
B134
ENGINE CONTROL MODULE
BLK/YEL
BLK/WHT
BLK/YEL
BLK
BLK/WHT
YEL/RED
G115
GRN/RED
YEL/BLU
GRN/WHT
2 YEL
1 BLU
4 RED/GRN
3 GRN
IGNITION COIL & IGNITOR ASSEMBLY
2 YEL
1 NCA
3 YEL
BLK
IDLE AIR CONTROL SOLENOID VALVE
INSTRUMENT CLUSTER
7 GRN/BLK
10 GRN
GRN/YEL
9 BLU/GRN
18 RED/WHT
I12
SPEEDOMETER & TACHOMETER CIRCUIT
MALFUNCTION INDICATOR LAMP
2 RED/WHT
1 BLK/WHT
TEST MODE CONNECTOR
BLK/WHT
ORG
TEST MODE CONNECTOR
5 ORG
DIAGNOSIS CONNECTOR
127986


HOT AT ALL TIMES
IGNITION SWITCH
OFF
START
ACC
ON
MAIN RELAY
HOT AT ALL TIMES
SBF 5 30A
MAIN FUSE BOX
F37
G116
G115
ENGINE CONTROL MODULE
B135
B136
1 YEL/BLU
2 YEL/BLU
3 YEL/RED
7 WHT
9 BLK/RED
11 GRN/WHT
12 GRN/ORG
14 BLK/YEL
15 RED
16 RED/GRN
17 LT GRN
18 WHT
4 BLK
20 BLK
8 BLK/GRN
5 PNK/BLU
23 BRAIDED
24 BRAIDED
25 BLK/ORG
26 BLU/BLK
27 BRN/WHT
28 BRN/WHT
29 RED/WHT
21 BLK/RED
22 BLK/RED
19 LT GRN
3 GRY/BLK
4 BRN/RED
7 GRN/RED
1 WHT
8 BLK
11 GRN/WHT
12 LT GRN/RED
2 RED
14 ORG
9 GRN
16 RED/YEL
17 PNK/GRN
10 BRAIDED
13 VIO/GRN
20 RED/WHT
21 WHT/RED
24 GRN/YEL
25 BLK/RED
26 GRN/BLK (OR WHT/BLK)
27 BRN/WHT
28 WHT/RED
AIR CONDITIONING
STARTING SYSTEM
M/T
A/T
A/T
M/T
STARTER INTERLOCK RELAY
INHIBITOR SWITCH
NEUTRAL POSITION SWITCH
POWER STEERING SENSOR
CAMSHAFT POSITION SENSOR
CRANKSHAFT POSITION SENSOR
MASS AIR-FLOW SENSOR
KNOCK SENSOR
SHIELD JOINT CONNECTOR
NCA
NCA
NCA
NCA

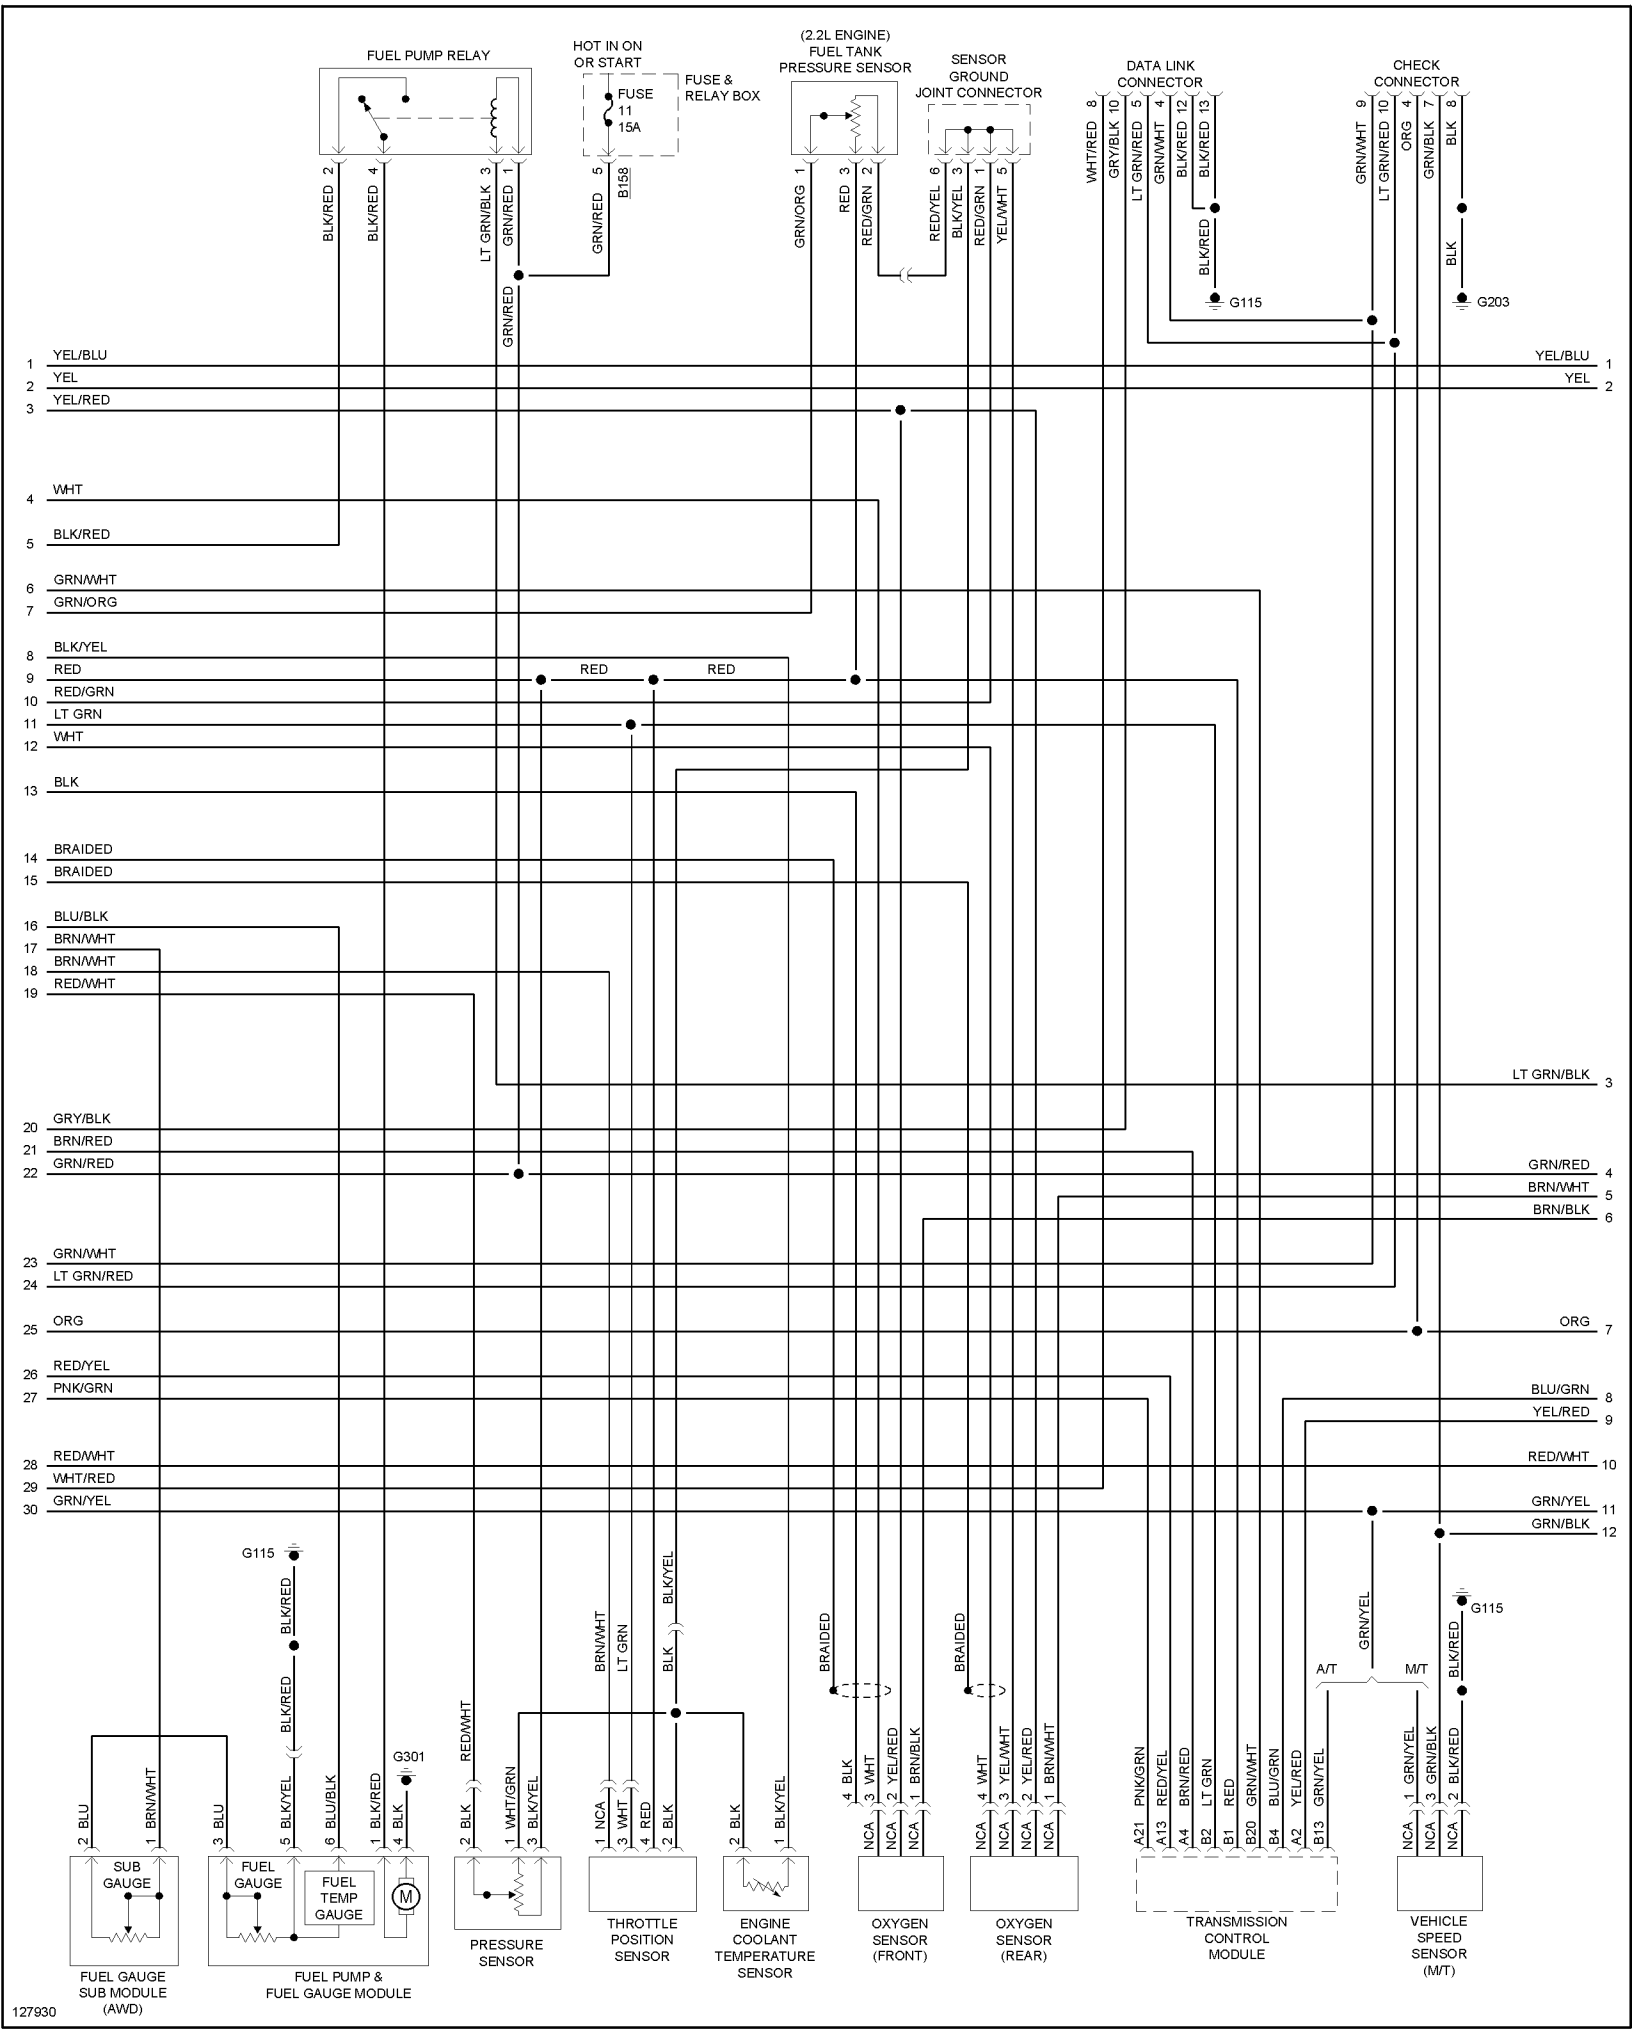
127929

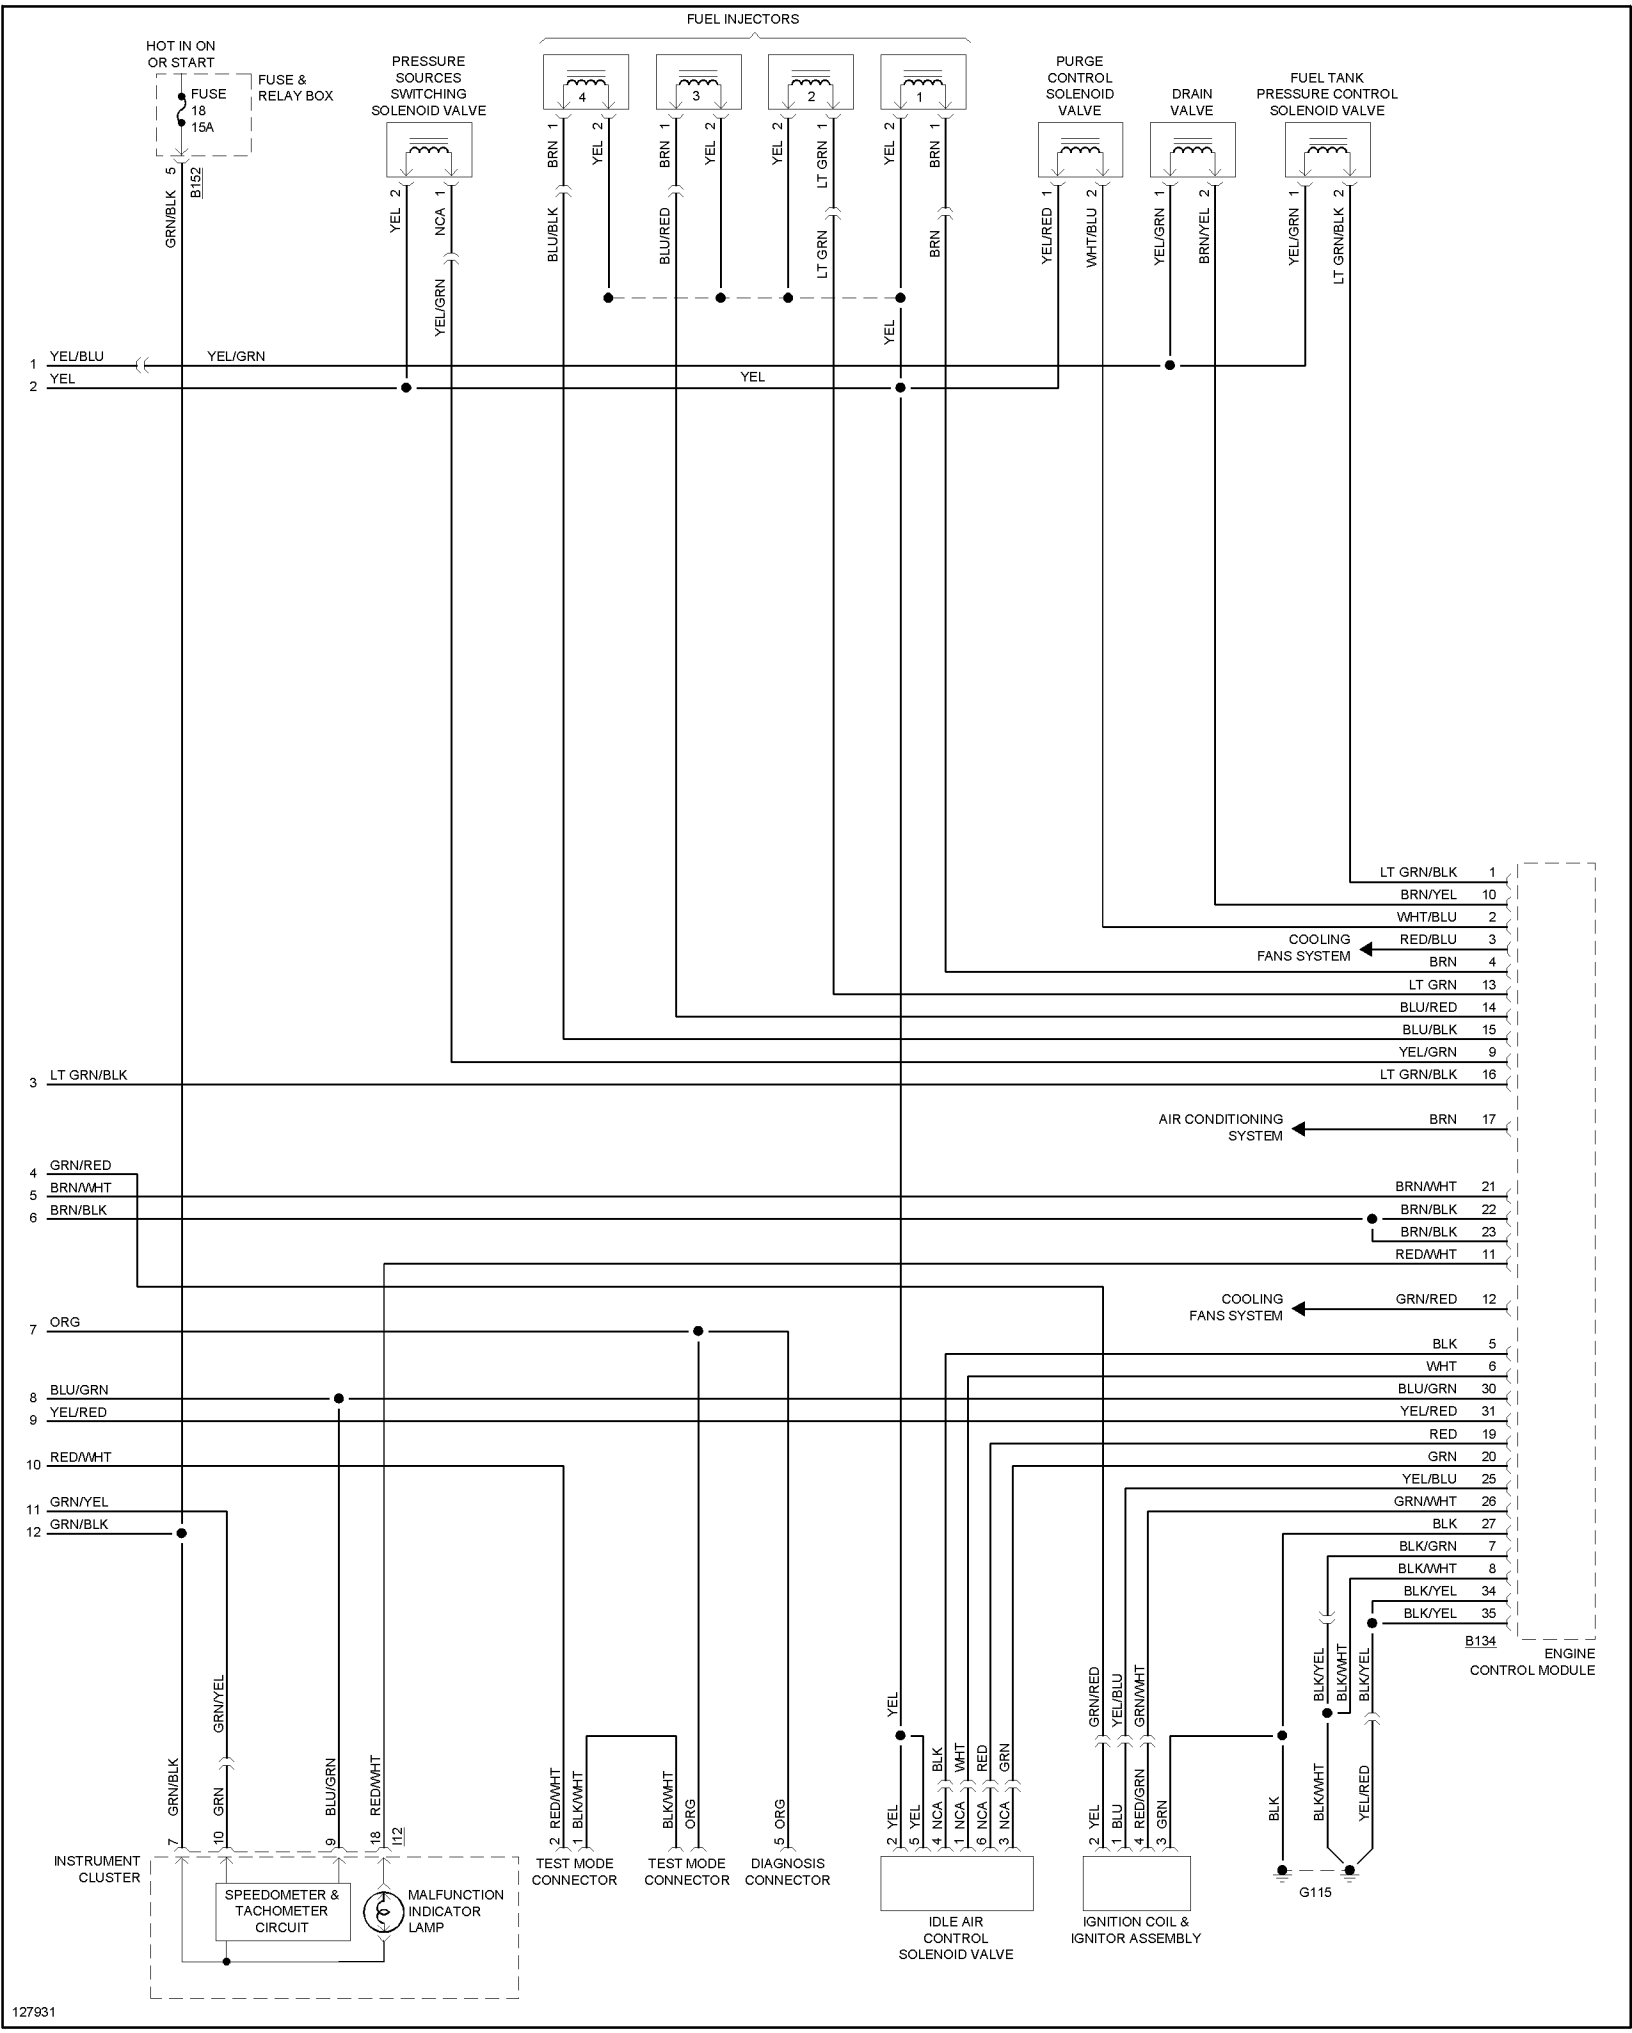

FUEL PUMP RELAY
HOT IN ON OR START
FUSE 11 15A
FUSE & RELAY BOX
B158
(2.2L ENGINE) FUEL TANK PRESSURE SENSOR
SENSOR GROUND JOINT CONNECTOR
DATA LINK CONNECTOR
CHECK CONNECTOR
G115
G203
YEL/BLU
YEL
YEL/RED
WHT
BLK/RED
GRN/WHT
GRN/ORG
BLK/YEL
RED
RED/GRN
LT GRN
BLK
BRAIDED
BLU/BLK
BRN/WHT
RED/WHT
LT GRN/BLK
GRY/BLK
BRN/RED
GRN/RED
ORG
RED/YEL
PNK/GRN
BLU/GRN
WHT/RED
GRN/YEL
G301
SUB GAUGE
FUEL GAUGE
FUEL TEMP GAUGE
FUEL GAUGE SUB MODULE (AWD)
FUEL PUMP & FUEL GAUGE MODULE
PRESSURE SENSOR
THROTTLE POSITION SENSOR
ENGINE COOLANT TEMPERATURE SENSOR
OXYGEN SENSOR (FRONT)
OXYGEN SENSOR (REAR)
TRANSMISSION CONTROL MODULE
A/T
M/T
VEHICLE SPEED SENSOR (M/T)
127930


HOT IN ON OR START
FUSE & RELAY BOX
FUSE 18 15A
GRN/BLK
B152
PRESSURE SOURCES SWITCHING SOLENOID VALVE
YEL
NCA
YEL/GRN
FUEL INJECTORS
4
3
2
1
BRN
YEL
BLU/BLK
BLU/RED
LT GRN
PURGE CONTROL SOLENOID VALVE
DRAIN VALVE
FUEL TANK PRESSURE CONTROL SOLENOID VALVE
YEL/RED
WHT/BLU
YEL/GRN
BRN/YEL
LT GRN/BLK
1 YEL/BLU
2 YEL
3 LT GRN/BLK
4 GRN/RED
5 BRN/WHT
6 BRN/BLK
7 ORG
8 BLU/GRN
9 YEL/RED
10 RED/WHT
11 GRN/YEL
12 GRN/BLK
COOLING FANS SYSTEM
AIR CONDITIONING SYSTEM
LT GRN/BLK 1
BRN/YEL 10
WHT/BLU 2
RED/BLU 3
BRN 4
LT GRN 13
BLU/RED 14
BLU/BLK 15
YEL/GRN 9
LT GRN/BLK 16
BRN 17
BRN/WHT 21
BRN/BLK 22
BRN/BLK 23
RED/WHT 11
GRN/RED 12
BLK 5
WHT 6
BLU/GRN 30
YEL/RED 31
RED 19
GRN 20
YEL/BLU 25
GRN/WHT 26
BLK 27
BLK/GRN 7
BLK/WHT 8
BLK/YEL 34
BLK/YEL 35
B134
ENGINE CONTROL MODULE
INSTRUMENT CLUSTER
SPEEDOMETER & TACHOMETER CIRCUIT
MALFUNCTION INDICATOR LAMP
TEST MODE CONNECTOR
TEST MODE CONNECTOR
DIAGNOSIS CONNECTOR
IDLE AIR CONTROL SOLENOID VALVE
IGNITION COIL & IGNITOR ASSEMBLY
G115
127931


HOT AT ALL TIMES
IGNITION SWITCH
OFF
START
ACC
ON
MAIN RELAY
HOT AT ALL TIMES
SBF 5 30A
MAIN FUSE BOX
F37
G116
G115
ENGINE CONTROL MODULE
B135
B136
1 YEL/BLU
2 YEL/BLU
3 YEL/RED
7 WHT
9 BLK/RED
11 GRN/WHT
12 GRN/ORG
14 BLK/YEL
15 RED
16 RED/GRN
17 LT GRN
18 WHT
4 BLK
20 BLK
8 BLK/GRN
5 PNK/BLU
23 BRAIDED
24 BRAIDED
25 BLK/ORG
26 BLU/BLK
27 BRN/WHT
28 BRN/WHT
29 RED/WHT
21 BLK/RED
22 BLK/RED
19 LT GRN
3 GRY/BLK
4 BRN/RED
7 GRN/RED
1 WHT
8 BLK
11 GRN/WHT
12 LT GRN/RED
2 RED
14 ORG
9 GRN
16 RED/YEL
17 PNK/GRN
10 BRAIDED
13 VIO/GRN
20 RED/WHT
21 WHT/RED
24 GRN/YEL
25 BLK/RED
26 GRN/BLK (OR WHT/BLK)
27 BRN/WHT
28 WHT/RED
AIR CONDITIONING
STARTING SYSTEM
M/T
A/T
A/T
M/T
STARTER INTERLOCK RELAY
INHIBITOR SWITCH
NEUTRAL POSITION SWITCH
POWER STEERING SENSOR
CAMSHAFT POSITION SENSOR
CRANKSHAFT POSITION SENSOR
MASS AIR-FLOW SENSOR
KNOCK SENSOR
SHIELD JOINT CONNECTOR
NCA
NCA
NCA
NCA

127929


FUEL PUMP RELAY
HOT IN ON OR START
FUSE 11 15A
FUSE & RELAY BOX
B158
(2.2L ENGINE) FUEL TANK PRESSURE SENSOR
SENSOR GROUND JOINT CONNECTOR
DATA LINK CONNECTOR
CHECK CONNECTOR
G115
G203
YEL/BLU
YEL
YEL/RED
WHT
BLK/RED
GRN/WHT
GRN/ORG
BLK/YEL
RED
RED/GRN
LT GRN
BLK
BRAIDED
BLU/BLK
BRN/WHT
RED/WHT
LT GRN/BLK
GRY/BLK
BRN/RED
GRN/RED
ORG
RED/YEL
PNK/GRN
BLU/GRN
WHT/RED
GRN/YEL
G301
SUB GAUGE
FUEL GAUGE
FUEL TEMP GAUGE
FUEL GAUGE SUB MODULE (AWD)
FUEL PUMP & FUEL GAUGE MODULE
PRESSURE SENSOR
THROTTLE POSITION SENSOR
ENGINE COOLANT TEMPERATURE SENSOR
OXYGEN SENSOR (FRONT)
OXYGEN SENSOR (REAR)
TRANSMISSION CONTROL MODULE
A/T
M/T
VEHICLE SPEED SENSOR (M/T)
127930


HOT IN ON OR START
FUSE & RELAY BOX
FUSE 18 15A
GRN/BLK
B152
PRESSURE SOURCES SWITCHING SOLENOID VALVE
YEL
NCA
YEL/GRN
FUEL INJECTORS
4
3
2
1
BRN
YEL
BLU/BLK
BLU/RED
LT GRN
PURGE CONTROL SOLENOID VALVE
DRAIN VALVE
FUEL TANK PRESSURE CONTROL SOLENOID VALVE
YEL/RED
WHT/BLU
YEL/GRN
BRN/YEL
LT GRN/BLK
1 YEL/BLU
2 YEL
3 LT GRN/BLK
4 GRN/RED
5 BRN/WHT
6 BRN/BLK
7 ORG
8 BLU/GRN
9 YEL/RED
10 RED/WHT
11 GRN/YEL
12 GRN/BLK
COOLING FANS SYSTEM
AIR CONDITIONING SYSTEM
LT GRN/BLK 1
BRN/YEL 10
WHT/BLU 2
RED/BLU 3
BRN 4
LT GRN 13
BLU/RED 14
BLU/BLK 15
YEL/GRN 9
LT GRN/BLK 16
BRN 17
BRN/WHT 21
BRN/BLK 22
BRN/BLK 23
RED/WHT 11
GRN/RED 12
BLK 5
WHT 6
BLU/GRN 30
YEL/RED 31
RED 19
GRN 20
YEL/BLU 25
GRN/WHT 26
BLK 27
BLK/GRN 7
BLK/WHT 8
BLK/YEL 34
BLK/YEL 35
B134
ENGINE CONTROL MODULE
INSTRUMENT CLUSTER
SPEEDOMETER & TACHOMETER CIRCUIT
MALFUNCTION INDICATOR LAMP
TEST MODE CONNECTOR
TEST MODE CONNECTOR
DIAGNOSIS CONNECTOR
IDLE AIR CONTROL SOLENOID VALVE
IGNITION COIL & IGNITOR ASSEMBLY
G115
127931